



Controls, pipe routings, remote pull station and gas valve locations are for reference only, locations may change.

- (1) ALL GAS AND ELECTRICAL APPLIANCES UNDER HOOD SHUT DOWN BY OTHERS.
- (2) EXHAUST FAN CONTINUES TO RUN ON DISCHARGE OF FIRE SYSTEM BY OTHERS.
- (3) FRESH AIR FAN SHUTS DOWN ON DISCHARGE OF FIRE SYSTEM BY OTHERS.
- (4) FIRE ALARM SYSTEM ACTIVATES IF BUILDING IS EQUIPPED WITH A FIRE ALARM BY OTHERS.
- (5) HOOD LIGHTS TURN OFF IF REQUIRED BY AHJ BY OTHERS.
- (6) REMOTE PULL STATION LOCATED 10' TO 20' FROM HOOD & 48" FROM FINISHED FLOOR
- (7) HVAC SYSTEM SHUTS DOWN WHEN FIRE SYSTEM IS ACTIVATED, IF REQUIRED BY AHJ BY OTHERS.
- (8) CLASS "K" FIRE EXTINGUISHER LOCATED NOT MORE THAN 30' FROM HOOD

919-894-8495

Parrish Fire & Safety, Inc
 DRAWN RKW Scale N/A
 Benson, NC
 Fire and Safety, Inc
 Fire Extinguishers Sales & Service
 919-894-8495
 Emergency Lighting - Hydrotesting - Suppression Systems - Training

Burney's
 2668 NC 24 - Walmart S/C
 Cameron, NC 28326

SHEET NO. FP1 of 1	DATE 03-01-2023	REV -
--------------------	--------------------	-------