

The Caddy Style Aluminum Fencing is a more elegant design with a smooth top with No exposing pickets.



Approved for installation around pools at 4.5', 5' & 6'

Rails: 1"x.055" thick

Pickets: 5/8"sq x.050" thick

Line/End/Corner Posts: 2"sq x .060" thick

Gate Posts: 2"sq x .125" thick

Picket Spacing: 3 13/16"

Post Spacing: 72 1/2" on center

Height: 48", 54", 60", 72"

Range of angular adjustability (rackability): 30" over a 6' section

\*Limited Lifetime Warranty

\*6063-T6 Extrusions

\*Black Polyester Powder Coating

\*Rust resistant black head screws





\*All sections are pre-assembled

\*Fence components are punched and fabricated before coating



# HardwareSource SKU 928040

## D&D Model ML3TPKA

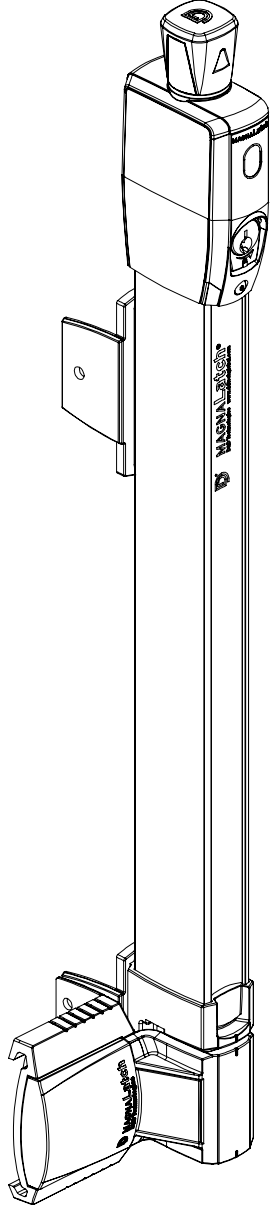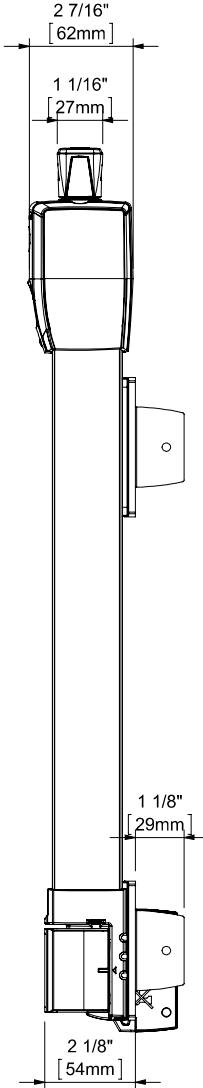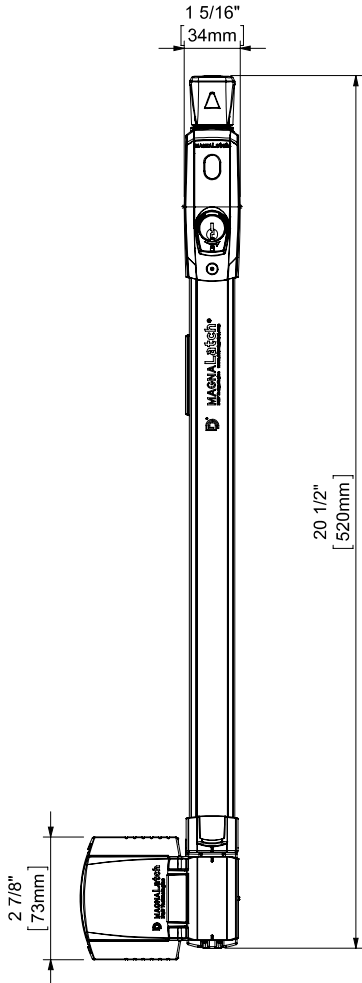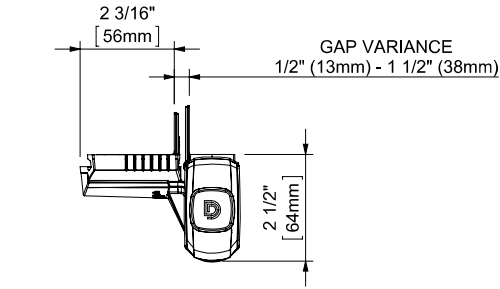

# Installation Instructions

## Instrucciones para la instalación

### Instructions d'installation

**TRUclose** **ROUND** **SERIES 3**

 
**D&D Technologies**  
World's most trusted gate hardware



**Remove ALL existing hinges before installing your new TruClose® hinges.**

**Retire TODAS las bisagras existentes antes de instalar su nuevas bisagras TruClose®.**

**Retirez TOUTES les charnières existantes avant d'installer vos nouvelles charnières TruClose®.**



Level  
Nivel  
Niveau



Hammer & Center Punch  
Martillo y Punzonado central  
Marteau et poinçon

Pencil  
Lapiz  
Crayon



Phillips #2 screwdriver (hand & power),  $\frac{1}{16}$ " hex-head driver & large slot-head screwdriver.  
Destornillador Philips #2 (De mano y Taladro Eléctrico),  $\frac{3}{16}$ " Tornillos hexagonales de cabeza y destornillador de cabeza plana  
Tournevis cruciforme n° 2 (manuel ou électrique), avec tête hexagonale de 8 mm et gros tournevis plat.

## 1 BEFORE INSTALLATION ALIGN HINGE POSITION

ANTES DE LA INSTALACIÓN ALINEE LA POSICIÓN DE BISAGRA / ALIGNEZ LES CHARNIÈRES AVANT L'INSTALLATION

- Choose the appropriate round post adaptors by placing them onto the post to determine the correct fit.
- Each adaptor should fit neatly around the diameter of the gate and post. Unwanted adaptors can be discarded.
- The hinges should be installed as far apart vertically as is practical.
- It is recommended to make a center-punch indent prior to drilling.

SKU	TCHDRND1S3	TCHDRND2S3
<b>Gate diameters</b> Diámetros de puerta Diámetros de portail	1 $\frac{3}{8}$ " & 1 $\frac{5}{8}$ " (35 & 41 mm) adaptors per hinge/Adaptadores por bisagra Adaptateurs par charnière	1 $\frac{7}{8}$ "-2" (48-51 mm) adaptor per hinge/Adaptadores por bisagra/Adaptateurs par charnière
<b>Post diameters</b> Diámetros de poste Diámetros de poteau	1 $\frac{7}{8}$ "-2", 2 $\frac{3}{8}$ " & 2 $\frac{1}{8}$ " (48-51, 60 & 73 mm) adaptors per hinge/Adaptadores por bisagra Adaptateurs par charnière	1 $\frac{7}{8}$ "-2" & 2 $\frac{1}{8}$ " (48-51 & 73 mm) adaptors per hinge/Adaptadores por bisagra/Adaptateurs par charnière

EACH ADAPTOR IS MARKED WITH ITS DIAMETER

CADA ADAPTADOR ESTÁ MARCADO CON SU DIMENSION / LA DIMENSION EST INDICUÉE SUR CHAQUE ADAPTATEUR


- Elija los adaptadores de poste redondos apropiados colocándolos en el poste para determinar el ajuste correcto
- Cada adaptador debe ajustarse perfectamente alrededor del diámetro de la puerta y el poste. Los adaptadores no deseados se pueden desechar
- Las bisagras deben instalarse tan separadas verticalmente como sea práctico
- Se recomienda utilizar la herramienta de punzonado central antes de perforación

- Placez les adaptateurs de poteaux ronds sur le poteau pour déterminer lequel est le plus adapté.
- Chaque adaptateur doit s'adapter parfaitement au diamètre du portail et du poteau. Les adaptateurs inutiles peuvent être éliminés.
- Les charnières doivent être installées verticalement aussi loin que possible l'une de l'autre.
- Il est recommandé de faire une marque au poinçon avant de percer.

X: Gap between hinge post and gate:  $\frac{1}{16}$ " (24mm).

X: Espacio entre el poste de la bisagra y la puerta:  $\frac{1}{16}$ " (24 mm).

X : Espacement entre le poteau et le portail : 24 mm.

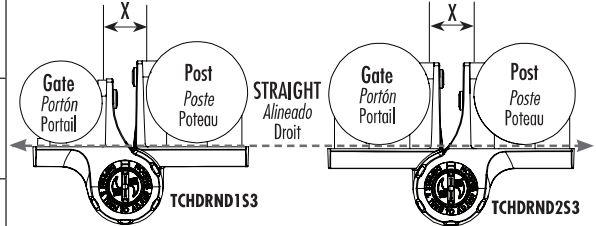

**FLUSH-MOUNTED LATCHES: Maintain 180° alignment during installation to ensure accurate, reliable gate closure.**

MONTAJE-MONTADO CERROJO: Mantener 180° grados alineación durante la instalación para garantizar el cierre preciso y confiable de la puerta.

LOQUETS ENCASTRÉS : maintenez un alignement à 180° durant l'installation pour assurer une fermeture précise et fiable du portail.


## 2 INSTALL HINGES TO THE GATE FRAME

INSTALE BISAGRAS AL MARCO DE LA PUERTA  
INSTALLEZ LES CHARNIÈRES SUR LE CADRE DU PORTAIL


Insert the post adaptors into the rear of the hinges. Take the hex-head screws and secure top and bottom hinges to the gate. A center-punch, and pilot hole of  $\frac{3}{16}$ " (4.8mm), is recommended. When the gate side is secure, repeat for the post side.

Inserte los adaptadores de poste en la parte posterior de las bisagras. Tome los tornillos de cabeza hexagonal y asegure las bisagras superior e inferior a la puerta. Se recomienda un punzón central y un orificio piloto de  $\frac{3}{16}$ " (4,8 mm). Cuando el lado de la puerta esté seguro, repita para el lado del poste.

Insérez les adaptateurs de poteau à l'arrière des charnières. Prenez les vis à tête hexagonale puis fixez les charnières supérieure et inférieure au portail. Il est recommandé d'utiliser un poinçon et un avant-trou de 4,8 mm. Lorsque le côté du portail est sécurisé, répétez l'opération pour le côté du poteau.

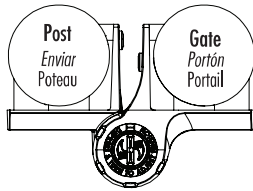

Round-post brackets  
Soportes de poste redondo  
Supports de poteau rond

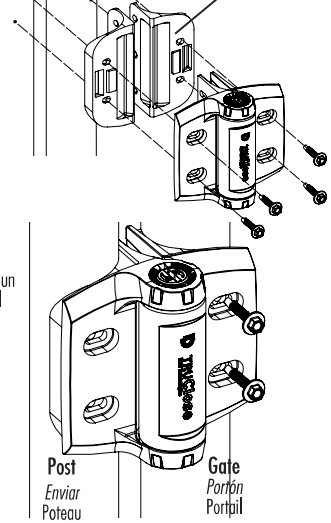


## 3 ENSURE THE GATE IS CORRECTLY ALIGNED WITH FENCE AND SECURE HINGE TO THE POST (see diagram above)


ASEGÚRESE DE QUE LA PUERTA ESTÁ ALINEADA CORRECTAMENTE CON LA CERCA Y ASEGURE LA BISAGRA AL POSTE (vea el diagrama de arriba)

ASSUREZ-VOUS QUE LA PORTAIL EST CORRECTEMENT ALIGNÉ AVEC LA CLÔTURE PUIS SÉCURISEZ LA CHARNIÈRE AU POTEAU (consultez le schéma ci-dessus)

Take the remaining hex-head screws and secure the hinges (and gate) to the post. A center-punch and pilot holes of  $\frac{3}{16}$ " (4.8mm) are recommended.

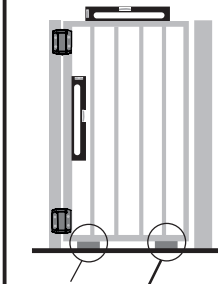

Chock and support the gate temporarily during installation  
Apoye los bloques en la puerta temporalmente durante la instalación  
Calez et soutenez temporairement le portail durant l'installation.

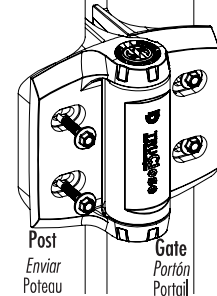

Tome los Tornillos hexagonales de cabeza que sobraron y asegure la bisagra (y puerta) al poste. Un punzón central y agujeros piloto de  $\frac{3}{16}$ " (4.8mm) es recomendado.

Utilisez les vis à tête hexagonale restantes pour sécuriser les charnières (et le portail) au poteau. Il est recommandé d'utiliser un poinçon et des avant-trous de 4,8 mm.


## 4 SECURE SIDE-FIXING LEGS

PIERNAS DE FIJACIÓN LATERAL SEGURA  
PATTE À FIXATION LATÉRALES SÉCURISÉES

From inside the fence, open the gate. Take the pan-head screws for both hinges and secure the side-fixing legs to the post and gate. A center-punch and pilot holes of  $\frac{3}{32}$ " (4mm) are recommended.

Desde el interior de la cerca, abra la puerta. Tome los tornillos de cabeza plana de ambas bisagras y asegure las patas de fijación lateral al poste y la puerta. Un punzón central y agujeros piloto de  $\frac{3}{32}$ " (4mm) es recomendado.

Insérez les adaptateurs de poteau à l'arrière des charnières. Prenez les vis à tête hexagonale puis fixez les charnières supérieure et inférieure au portail. Il est recommandé d'utiliser un poinçon et un avant-trou de 4,8 mm. Lorsque le côté du portail est sécurisé, répétez l'opération pour le côté du poteau.

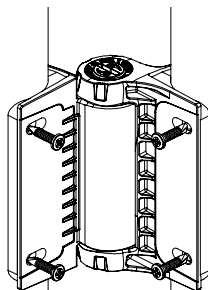


## 5 ADJUST TENSION WITH GATE CLOSED

AJUSTE LA TENSION CON LA PUERTA CERRADA  
RÉGLEZ LA TENSION AVEC LE PORTAIL FERMÉ

To adjust tension (closing speed) depress and turn spring-loaded adjuster counter-clockwise using a large slot-head screwdriver. Adjust so that gate latches securely from 1" (25mm) open.

Para ajustar la tensión (velocidad de cierre), presione y gire el ajustador accionado por resorte en sentido antihorario con un destornillador grande de cabeza ranurada. Ajuste de manera que la puerta se enganche de manera segura desde 1" (25mm) abierta.

Pour régler la tension (vitesse de fermeture), appuyez sur le dispositif de réglage à ressort puis tournez-le dans le sens contraire des aiguilles d'une montre à l'aide d'un gros tournevis plat. Effectuez le réglage nécessaire pour que le portail se verrouille fermement à 25 mm d'ouverture.

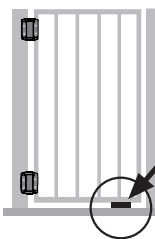


Each hinge must have equal tension at all times.

Cada bisagra debe tener la misma tensión en todo momento.  
Chaque charnière doit avoir une tension égale à tout moment.

Important: For gates over 30lb (14kg), support the weight of the gate while adjusting tension

Importante: Para puertas de más de 30 lb (14 kg), soporte el peso de la puerta mientras ajusta la tensión

Important : pour les portails de plus de 14 kg, supportez le poids du portail durant le réglage de la tension

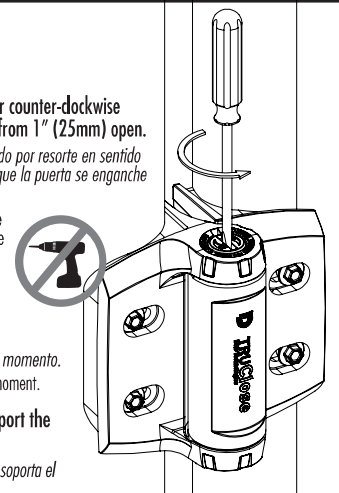

## Maintenance Requirements:

Note: The hinges will operate properly, and warranty is valid, only if installed in accordance with the instructions and specifications shown herein.

- Always use two ROUND-POST HINGES on any one gate.
- Remove all other types of hinges and self-closing devices.
- Each hinge must have equal tension at all times.
- Ensure the gate does not swing beyond/through 180°.
- Do not lubricate these hinges with petroleum-based lubricants. Use only powdered graphite if needed.
- Never remove ROUND-POST HINGES from gate until spring tension is released.
- Do not physically alter hinge bodies by cutting, milling, machining or grinding any part.
- For safety, remove protruding bolts/screws after installation by cutting, grinding and/or filing.

For a downloadable Adobe Acrobat (PDF) version of our Limited LIFETIME WARRANTY, go to our website at [www.ddtech.com](http://www.ddtech.com)

### Requisitos de mantenimiento :

**Observación:** Las bisagras funcionarán correctamente y la garantía será válida únicamente si su instalación se realiza de acuerdo con las instrucciones y especificaciones aquí descritas.

- Usar únicamente dos (2) bisagras TruClose por puerta.
- Retirar cualquier otro tipo de bisagra existente y aparatos de autocierre.
- Cada bisagra deberá tener la misma tensión en todo momento.
- Asegúrese de que la puerta no se balancee más allá de 180° grados.
- No lubrique estas bisagras con lubricantes a base de petróleo, en ningún momento. Usar únicamente grafito en polvo si es necesario.
- Nunca quite las bisagras redondas de la puerta hasta que se libere la tensión del resorte.
- Asegurarse de mantener las bisagras sin arena, hielo ni ningún otro tipo de escombros que podría dificultar la efectividad de la operación.
- No desarmar estas bisagras en ningún momento.
- No pintar ni aplicar acabados sobre estas bisagras.
- No retirar nunca las bisagras de la puerta hasta que se suelte la tensión del resorte.
- No cortar, perforar, hacer un avellanado, usar una máquina ni esmerilar físicamente ninguna parte de las hojas de las bisagras.
- Por razones de seguridad, retire los pernos o tornillos sobresalientes después de la instalación mediante su corte, esmerilado o limado.

Para una versión de nuestra garantía limitada de por vida descargable en Adobe Acrobat (pdf), vaya a nuestro sitio Web en [www.ddtech.com](http://www.ddtech.com)

### Exigences d'entretien :

Remarque : les charnières fonctionneront correctement, et la garantie n'est valable, que si elles sont installées conformément aux instructions et aux spécifications indiquées ici.

- Utilisez uniquement deux CHARNIÈRES À POTEAU ROND sur un même portail.
- Retirez tous les autres types de charnières et de dispositifs à fermeture automatique.
- Chaque charnière doit avoir une tension égale à tout moment.
- Assurez-vous que le portail ne s'ouvre pas au-delà de 180°.
- Ne lubrifiez pas ces charnières avec des lubrifiants à base de pétrole. Utilisez uniquement de la poudre de graphite si nécessaire.
- Ne retirez jamais les CHARNIÈRES À POTEAU ROND du portail tant que la tension du ressort n'est pas relâchée.
- Ne modifiez pas physiquement le corps des charnières en coupant, fraisant, usinant ou meulant une pièce.
- Pour des raisons de sécurité, retirez les boulons/vis protubérants après l'installation en les coupant, meulant et/ou limant.

Pour télécharger une version au format Adobe Acrobat (.PDF) de notre GARANTIE LIMITÉE À VIE, rendez-vous sur notre site Web à l'adresse [www.ddtech.com](http://www.ddtech.com).

HINGE RANGE	MAX. SELF-CLOSING WEIGHT	MAX. GATE DIMENSIONS
	Peso máximo autocierre	Dimensiones máximas de de la puerta
	Poids maximum pour fermeture automatique	Dimensions maximums du portail
TCHDRND 1&2	154lb (70kg)	*6'H x 4'W (1830 x 1220mm)

\*Always space the hinges as far apart from each other as possible for maximum holding strength.  
\*Siempre separar las bisagras lo más posible una de otra para obtener la máxima resistencia de sostenimiento.  
\*Espacer toujours les charnières le plus possible l'une de l'autre pour obtenir le meilleur support.

### QUICK & EASY TENSION ADJUSTMENT!


- 1 - Depress
- 2 - Turn
- 3 - Release

### RÁPIDO Y FÁCIL AJUSTE DE TENSIÓN!

- 1 - Presione
- 2 - Gire
- 3 - Lanzamiento

### RÉGLAGE DE LA TENSION RAPIDE ET FACILE !

- 1 - Appuyez
- 2 - Tournez
- 3 - Relâchez

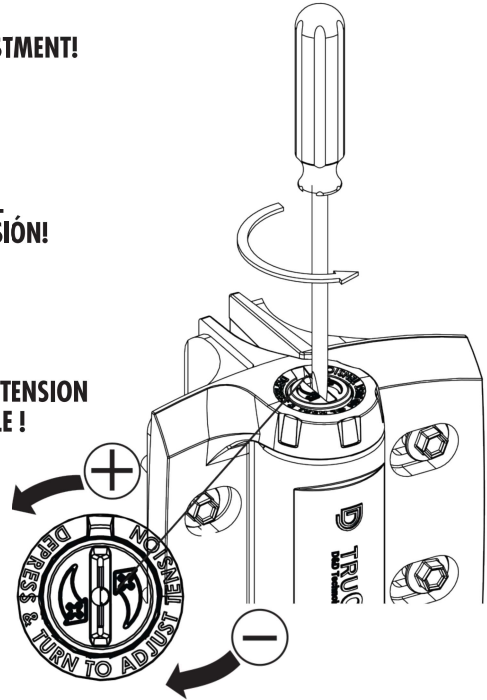

#### Important:

Adjust tension on each hinge from the top adjustor only


#### Importante:

Ajuste la tensión en cada bisagra solo desde el ajustador superior

#### Important :

réglez la tension sur chaque charnière uniquement à partir du dispositif de réglage supérieur.

We use anti-entrapment dual main drains, complies with Virginia Graeme Baker Act

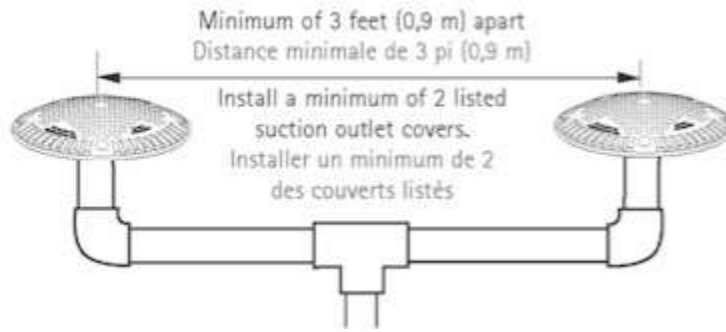

Recommended installation of main drains to protect against entrapment hazards. Always consult current applicable standards. L'installation de drains de fond est recommandée pour protéger contre les risques de blocage. Toujours consulter les normes actuellement en vigueur.



# INSTALLATION/OPERATION MANUAL

Model NO. YG03

This device meets the requirements of UL 2017.

**IMPORTANT:** Read this manual completely prior to operating the YardGard Alarm. Keep this manual for future reference.

## TABLE OF CONTENTS

Important Safety Information .....	1
List of Components .....	2
Installation .....	2
Operating the Alarm .....	6
Winterization and Maintenance .....	7
Troubleshooting .....	7
Warranty .....	8

### IMPORTANT SAFETY INFORMATION / RENSEIGNEMENTS IMPORTANTS LIÉS À LA SÉCURITÉ

**WARNING:** Read all instructions prior to installing or operating this device. *Lire toutes les instructions avant d'installer ou d'utiliser ce dispositif.*

**WARNING:** Failure to follow the instructions may result in injury or death. *Le fait de ne pas suivre ces instructions peut causer des blessures ou la mort.*

**WARNING:** This product is not a life saving device but an aid to a multi-level program of pool safety including but not limited to, adult supervision, knowledge of CPR, fences, sub surface alarm devices and swimming instruction for all persons using the pool. *Ce produit n'est pas un dispositif de sauvetage. Il s'agit d'une mesure d'aide dans le cadre d'un programme de sécurité de la piscine à niveau multiples qui comprennent, sans s'y limiter, la supervision d'un adulte, une connaissance de la réanimation cardiorespiratoire (RCR), l'installation de clôtures, l'utilisation de dispositifs d'alarme sous l'eau, ainsi que des cours de natation pour toutes les personnes qui utilisent la piscine.*

**WARNING:** Proper installation and maintenance are the sole responsibility of the pool owner. *L'installation et l'entretien adéquats du dispositif relèvent de la seule responsabilité du propriétaire de la piscine.*

**WARNING:** Do not permit children to use this product. *Ne pas permettre aux enfants d'utiliser ce produit.*

**WARNING:** Do not use this product if it is damaged in any way. *Ne pas utiliser ce produit s'il est endommagé d'une façon quelconque.*

**WARNING:** Use only batteries specified in marking. *Utiliser uniquement les piles spécifiées.*

**WARNING:** Use of a different battery may have a detrimental effect on product operation. *L'utilisation de piles différentes pourrait avoir des conséquences préjudiciables sur l'utilisation du produit.*

**WARNING:** If a warning flag that is exposed with the battery removed and cover closed, the alarm is Non-Operational. *Si un drapeau d'avertissement s'affiche lorsque les piles sont retirées et le couvercle fermé, l'alarme est non opérationnelle.*

**IMPORTANT:** Swimming instruction is recommended for those who cannot swim.

**IMPORTANT:** Participation in a safety instructional course such as CPR (especially for children) is recommended.

**IMPORTANT:** For children or persons that cannot swim, a Personal Floatation Device (PFD) is recommended when entering the pool area.

**IMPORTANT:** Never leave children unattended near or in the pool.

**IMPORTANT:** It is imperative to react quickly once the alarm has sounded.

**IMPORTANT:** Test the alarm thoroughly prior to use.

**IMPORTANT:** Test the alarm weekly to ensure it is working properly.

**IMPORTANT:** Do not leave toys or objects floating in an unattended pool as this may invite children to enter the pool.

**IMPORTANT:** Keep the pool water clear so all objects on the bottom of the pool are visible.


**IMPORTANT:** Layers of protection add to the security of the pool. A barrier fence should always be used around a pool in conjunction with a gate or door alarm.

**IMPORTANT:** Subsurface alarms such as a PoolEye alarm adds a final layer of protection for any unwanted entry into the pool.

**IMPORTANT:** Install in accordance with requirements of NFPA 70.

### List of Components

Item	Description	Qty
A	Alarm With Siren, Bypass and Sensor	1
B	Mourning Bracket	1
C	Magnetic Contact	1
D	Large Screws	4
E	Small Screws	4
F	Metal Fence Spacers	2
G	Nylon Straps	4
H	Foam Sticker Pad	1
I	Plastic Caps	6

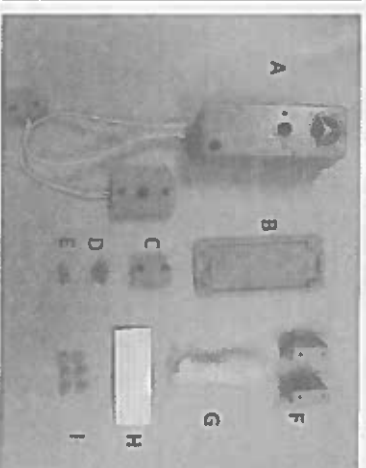

There are various installation applications for the YG03. It can be installed on a gate, door or window made of wood, vinyl, metal or glass. Below are the descriptions for the installation of the YG03.

#### Required Tools

- Phillips Head Screwdriver (#1 and #2)
- Measuring Tape
- Rubber Band

#### Installation

- Pencil

#### Optional Tools

- Battery Powered Drill
- 1/8" Drill Bit

#### Other Required Items

- (1) NEW: 9 VDC Battery (300 mA)

**Low Battery Indicator** - When the battery is low, the alarm will beep once every 30 seconds to signal to the user that the battery needs to be changed. When the battery gets to a critical point, the test button will provide a lower, audibly different sound. Testing the alarm weekly is required to ensure the battery is running the alarm properly.

**Alarm Non-Operational** - The battery terminal is

### WINTERIZATION AND MAINTENANCE

The alarm is manufactured to work in outdoor conditions. If the alarm is being used outdoors as protection for a swimming pool, it can be stored indoors during the winter months only if the swimming pool is properly closed with a safety cover and the access point is permanently locked and meets height and spacing requirements for the region in which it

is equipped with a red flag that signals to the user that the battery is not installed. When the battery is removed from the alarm, the flag should be left exposed to warn others that the alarm is non-operational.

**Anti-Tampering** - If the wire to the sensor is cut, the alarm will continuously sound until the battery is removed from the alarm.

is being used. For long term storage, it is good practice to remove the battery. The battery should be replaced at a minimum, once per year. However, the battery should be tested frequently (once/week) by using the TEST button on the alarm to ensure it will properly warn the user if/when unwanted entry is made to the pool area.

### TROUBLESHOOTING

Symptom	Possible Solution(s)
Alarm continuously sounding	<ol style="list-style-type: none"> <li>1. Ensure the distance between the sensor and the magnet are no more than 0.75".</li> <li>2. Ensure the gate or door is fully closed and then press the PASS/RESET button.</li> <li>3. If the alarm is beeping once every 30 seconds, change the battery.</li> </ol>
Alarm not sounding	<ol style="list-style-type: none"> <li>1. Ensure the battery is installed properly.</li> <li>2. Battery may be low, replace the battery.</li> </ol>
Alarm rapidly beeping or clicking	<ol style="list-style-type: none"> <li>1. When the alarm PASS/RESET button is pressed and the door is opened, the alarm will provide 15 seconds to pass through the entry point. Audible warning beeps in rapid succession will encourage the user to close the door.</li> <li>2. If a rapid clicking noise is heard, this may be an indication that the battery is critically low. Change the battery and test the alarm.</li> </ol>
Alarm cannot be turned off	<ol style="list-style-type: none"> <li>1. The alarm is designed to be activated at all times. If a door is left in the open position, the alarm will sound continuously until the door is closed and the RESET button is pressed.</li> <li>2. Ensure the distance between the sensor and the magnet is no more than 0.75".</li> <li>3. If the wire to the sensor is cut or damaged, the anti-tamper mechanism will trigger the siren. The battery will need to be removed to silence the alarm. Contact the manufacturer if the alarm is damaged in any way.</li> </ol>

### SIX MONTH LIMITED WARRANTY

Six month limited warranty from date of original purchase for manufacturing defects under normal and reasonable use, and subject to the maintenance requirements and installation guidelines set forth in the product instruction manual. Warranty valid only within the continental US and Canada.

**THIS WARRANTY IS SUBJECT TO THE TERMS, LIMITATIONS AND EXCLUSIONS DESCRIBED BELOW, AND THERE ARE NO OTHER WARRANTIES OR REPRESENTATIONS, EITHER EXPRESS OR IMPLIED, WHETHER OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER, MADE BY THE MANUFACTURER, OTHER THAN THOSE SPECIFICALLY SET FORTH IN THIS WRITTEN WARRANTY**

**What is Covered:** SPQ Brands warrants its electronic product to be free from defects in material and workmanship when leaving the factory.

**What is not Covered:** Any type of damage to the product due to improper installation, maintenance, or failure to provide necessary and reasonable maintenance; any damage or injury caused by misuse and/or unreasonable use of the product; batteries (if applicable); damage due to or related to improper draining, winterizing, storage or Acts of God; SPQ Brands will not honor any claims for damage to any products in transit unless damage to the shipping container is noted at the time of delivery on the transfer company's delivery bill.

**THE WARRANTY OBLIGATIONS OF SPQ BRANDS ARE LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT OR OF ANY DEFECTIVE COMPONENT, AT THE OPTION OF SPQ BRANDS. UNDER NO CIRCUMSTANCES WILL SPQ BRANDS BE LIABLE OR RESPONSIBLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES, AND/OR CHARGES FOR LABOR. SPQ BRANDS SHALL NOT BE LIABLE OR RESPONSIBLE UNDER ANY CIRCUMSTANCES OR ANY AMOUNT FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES, OR FOR ANY INJURIES OR DAMAGES TO PERSON OR PROPERTY USING OR USED IN CONNECTION WITH THE PRODUCT, OR FOR ANY OTHER LOSS OF PROFITS OR OTHER COSTS OR EXPENSES OF ANY KIND OR CHARACTER. IF SPQ BRANDS DETERMINES THAT EITHER REPAIR OR REPLACEMENT OF THE PRODUCT IS NECESSARY, SPQ BRANDS MAY EITHER REPAIR THE PRODUCT AT A NOMINAL CHARGE TO THE OWNER OR REPLACE THE PRODUCT. THE OWNER BEARS THE SOLE RESPONSIBILITY FOR PRE-PAID RETURN OF THE PRODUCT TO SPQ BRANDS, AND ALL REPAIRED OR REPLACED PRODUCTS WILL BE RETURNED AT THE OWNER'S EXPENSE.**

**NO PERSON, FIRM, OR CORPORATION IS AUTHORIZED TO MAKE REPRESENTATIONS OR INCUR ANY OBLIGATIONS IN THE NAME OF OR ON BEHALF OF SPQ BRANDS, EXCEPT AS STATED HEREIN. THE REMEDIES SET FORTH IN THIS WARRANTY ARE EXPRESSLY UNDERSTOOD TO BE THE EXCLUSIVE REMEDIES AVAILABLE TO THE OWNER, AND THIS WARRANTY CONTAINS THE FULL AND COMPLETE AGREEMENT BETWEEN SPQ BRANDS LLC AND THE OWNER. THIS WARRANTY SETS FORTH THE ONLY OBLIGATIONS OF SPQ BRANDS, WITH REGARD TO THIS PRODUCT, AND THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.**

The representations set forth herein are the only representations made by SPQ Brands, with respect to the product, and this warranty does not constitute either a performance or satisfaction guarantee. It is the responsibility of the product owner to regularly test and check the product for proper function and safety.

This warranty gives the original owner specific legal rights. You may have other rights depending on where you live.

**What you must do to file a claim:** Call 1-609-212-0221, M-F, 9am - 5pm, EST to initiate a claim.



## Installing the Battery and Initial Testing

1. Remove all contents of the Yardgard from the packaging and inspect to ensure there is no damage to the product.
2. Slide the mounting plate from the back of the alarm and place to the side.
3. Using a rubber band, band the siren and the magnet together by aligning the dots on each component (FIG 2).
4. Remove the 4 screws from the back of the alarm to access the battery compartment (FIG 3).
5. Install a new 9VDC battery, ensuring the contacts of the battery are aligned with the proper contacts of the alarm (+/-). Place the battery over the ribbon and fold the excess over the top of the battery. DO NOT force the battery into position as it may not be in the



FIG. 2



FIG. 3



FIG. 4



FIG. 5

6. Test the alarm by pressing the TEST button on the bottom, right, front corner of the alarm. You will hear an audible siren when the button is pushed (FIG 5).
- NOTE:** If no sound is heard, ensure the battery is new and is installed properly. Test the alarm again. If no sound is heard, call the manufacturer at 609-212-0221 for assistance.
7. If the alarm passes this initial test, move to the section below that represents your type of installation.

## Installation for Vinyl, Wooden or Aluminum Gates

1. Identify the location where the alarm will be installed.
- IMPORTANT:** Ensure there is a space of 7" in height and 2.5" in width to accommodate the alarm and sensor at the installation location. Account for locking mechanisms or handles.
2. Using a measuring tape, measure a minimum of 54" from the ground on the stationary post opposite of the gate or door (Ex. fence post)(FIG 6).
3. Place the bottom of the mounting plate at or above the 54" mark and secure it to the post using 2 of the larger screws (FIG 7).

4. Once the mounting plate is secured, place the alarm into the mounting plate and slide downward until an audible click is heard (FIG 8)
5. Mount the sensor under the alarm using 2 small screws (FIG 9).
- NOTE:** If attaching to an aluminum fence/gate, pre-drilling a hole may be required. Use a 1/8" drill bit to make a pilot hole. Ensure the sensor is level, mark the holes, remove the sensor and drill the pilot holes.
6. Place the magnet on the gate post/frame opposite of the sensor, ensuring the dots on the components are in-line. Attach using 2 small screws (FIG 10).

level, mark the holes, remove the plate and drill the pilot holes.

**IMPORTANT:** The space between the magnet and sensor cannot be more than 0.75".

- NOTE:** If attaching to an aluminum fence/gate, pre-drilling a hole may be required. Use a 1/8" drill bit to make a pilot hole. Ensure the magnet is level, mark the holes, remove the magnet and drill the pilot holes.
7. Place the PASS/RESET pad attached to the main body alarm on the inside of the fence and attach to the post using 2 large screws (FIG 11).

- NOTE:** If attaching to an aluminum fence/gate, pre-drilling a hole may be required. Use a 1/8" drill bit to make a pilot hole. Ensure the pad is level, mark the holes, remove the pad and drill the pilot holes.
8. Cover all screw holes using the provided plastic caps (FIG 12).
9. The alarm is now installed, move to the Operation Section of the manual.

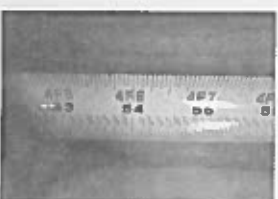


FIG. 6



FIG. 7

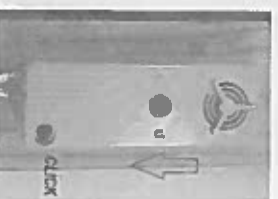


FIG. 8

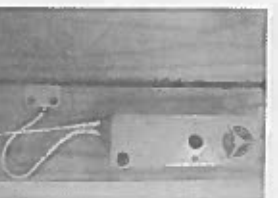


FIG. 9

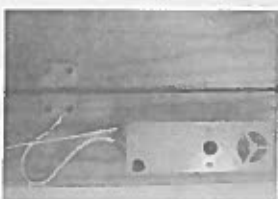


FIG. 10

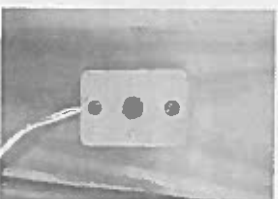


FIG. 11



FIG. 12

## Installation for Metal or Chain Link Fencing

1. Identify the location where the alarm will be installed.
- IMPORTANT:** Ensure there is a space of 7" in height and 2.5" in width to accommodate the alarm and sensor at the installation location. Account for locking mechanisms or handles.
2. Using a measuring tape, measure a minimum of 54" from the ground on the stationary post opposite

- of the gate or door (Ex. fence post) (FIG 6).
3. Place the bottom of the mounting plate at or above the 54" mark and secure it to the post using nylon straps (FIG 13).
4. Once the mounting plate is secured, place the alarm in the mounting plate and slide downward until an audible click is heard (FIG 8).
5. Attach the sensor to the plastic spacer by using 2 small screws (FIG 14).

- Attached the sensor to the post, under the alarm body by using nylon straps (FIG 15).
- Attached the magnet to the plastic spacer by using 2 small screws.

8. Place the magnet on the gate post/frame opposite of the sensor, ensuring the dots on the components are in-line. Attach using nylon straps.

**IMPORTANT:** The space between the magnet and sensor cannot be more than 0.75".



FIG. 13

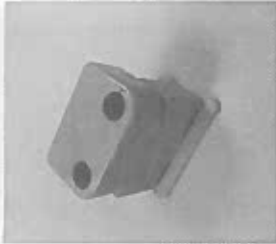


FIG. 14

- Place the PASS/RESET pad attached to the main body alarm on the inside of the fence and attach using adhesive pads (FIG 11).
- Cover all screw holes using the provided plastic caps (FIG 12).

11. The alarm is now installed, move to the Operation Section of the manual.



FIG. 15

### Installation for Doors and Windows (On Casing or Wall)

1. Identify the location where the alarm will be installed.

**IMPORTANT:** Ensure there is a space of 7" in height and 2.5" in width to accommodate the alarm and sensor at the installation location. Account for locking mechanisms or handles.

2. Using a measuring tape, measure a minimum of 54" from the ground on the stationary point opposite of the window or door (Ex. molding or casing) (FIG 6).

3. Place the bottom of the mounting plate at or above the 54" mark and secure it to the casing using 2 of the larger screws or adhesive pads.

4. Once the mounting plate is secured, place the alarm into the mounting plate and slide downward until an audible click is heard (FIG 8).

5. Mount the sensor under the alarm using 2 small screws or pads.

6. Place the magnet on the door or window frame opposite of the sensor, ensuring the dots on the components are in-line. Attach using 2 small screws or foam adhesive\* (FIG 10).

**IMPORTANT:** The space between the magnet and sensor cannot be more than 0.75". The magnet and sensor can be placed at a 90 degree angle from each other to accommodate a window or slider installation.

\*Foam adhesive pad can be used for installation on glass.

7. Place the PASS/RESET pad attached to the main body alarm on the outside of the door and attach to the casing using 2 large screws or pads (FIG 11).

**NOTE:** Accommodations for door framing may have to be made. If installing on a window, the PASS/RESET pad can be mounted inside next to the alarm body.

8. Cover all screw holes using the provided plastic caps (FIG 12).

9. The alarm is now installed, move to the Operation Section of the manual.

## OPERATING THE ALARM

**WARNING:** The alarm needs to be thoroughly tested prior to being used as a safety aid. Failure to do so may result in injury or death. If the alarm does not pass the test, please first look at the troubleshooting in the test section or in the Troubleshooting Guide. If failure continues, please contact the manufacturer at 609-212-0221 for assistance.

### Testing the Alarm

Test the siren by pressing the TEST button on the bottom, right, front corner of the alarm (FIG 5).

Pass: The alarm will give off a loud audible siren when the button is pushed.

Failure 1: No sound is heard. Ensure the battery is new and is installed properly. Test the alarm again.

Failure 2: Low audible sound with clicking noise. Ensure the battery is new and is installed properly. Test the alarm again.

### Bypassing the Alarm to Enter

1. Press the PASS/RESET button on either the front of the alarm or by using the attached PASS/RESET

### Silencing the Alarm

**IMPORTANT:** When the alarm sounds, go to the alarm immediately and inspect why the alarm has sounded. Ensure the area and all persons are safe. Contact emergency personnel when necessary.

When the alarm sounds, the siren will be loud and continuous. If the alarm is not properly set in the ready state, the siren will continue to signal the alarm.

1. Inspect the area to ensure it is safe and there is no presence of danger for anyone in the area, especially children or those that cannot swim.

### Features of the Alarm

**Immediate Alarm Signaling** - The YardGuard is always in the ready or ON position. If the alarm is not temporarily bypassed by pressing the PASS/RESET button, the alarm will immediately signal that unwanted entry has been made.

- pad (FIG 16).
- Open the door/gate/window.
- Close the door/gate/window within 15 seconds.

The alarm will start to beep (4 individual beeps and then 3 series of multiple beeps). The alarm provides 15 seconds for the user to pass through the entry way. The series of multiple beeps informs the user that the alarm is about to sound.

If the door/gate/window is not closed within 15 seconds, the alarm will sound.

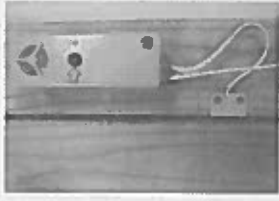


FIG. 16

- Close the door/gate/window so that the magnet and the sensor are aligned properly.
- Press either of the PASS/RESET buttons (FIG 17).
- The alarm will be silenced.

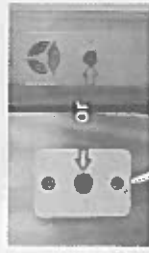


FIG. 17

**4 Minute Auto Reset** - The alarm will automatically reset if the entry way is opened and then closed. The siren will sound for 4 minutes continuously if the entry point is opened and then closed without the PASS/ENTRY button being pushed. If the entry point is not closed properly, the alarm will continue to sound.