

General Notes:

General Notes: ** CUTTING OR DRILLING OF COMPONENTS SHOULD NOT BE DONE WITHOUT CONTACTING COMPONENT SUPPLIER FIRST. CUSTOMER TAKES FULL RESPONSIBILITY FOR COMPONENTS IF CUT BEFORE AUTHORIZATION.

**** ALL BEARING POINTS MUST BE INSTALLED PRIOR TO SETTING ANY COMPONENTS.**

Revisions	
00/00/00	Name
00/00/00	Name
00/00/00	Name
00/00/00	Name
00/00/00	Name

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor systems and for the overall structure. The design of the Uss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general questions regarding the design, consult "Bracing of Wood Trusses" available from the Truss Plate Institute, 583 O'Donnell Drive, Madison, WI 53719.




Lamco Custom Builders LLC
Isabelle-Roof-Isabelle GRH
ROOF PLACEMENT PLAN

Scale:	NTS
Date:	2/13/2025
Designer:	Mike Finch
Project Number:	24090030-A
Sheet Number:	

1/1

*** FRAMER MUST REFER TO PLANS WHILE SETTING COMPONENTS. ***
*** DAMAGED COMPONENTS SHOULD NOT BE INSTALLED UNLESS TOLD TO BY THE COMPONENT PLANT. ***
*** TRUSS TO TRUSS CONNECTIONS ARE TOE-NAILED, UNLESS NOTED OTHERWISE. ***

FRAMER MUST REFER TO PLANS WHILE SETTING COMPONENTS.

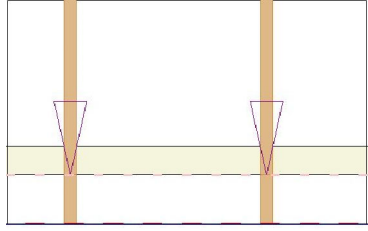

Truss Drawing Left
End Indicator


*** TRIANGULAR SYMBOL NEAR END OF TRUSS INDICATES LEFT END OF TRUSS AS SHOWN ON INDIVIDUAL TRUSS DRAWINGS

PLUMBING DROPS NOTED ARE IN THE APPROXIMATE LOCATIONS PER PLAN. BUILDER TO VERIFY LOCATIONS BEFORE SETTING TRUSSES.

REFER TO FINAL TRUSS ENGINEERING SHEETS FOR PLY TO PLY CONNECTIONS.

*** GIRDERS MUST BE FULLY CONNECTED TOGETHER PRIOR TO ADDING ANY LOADS. ***

*** All uplift connectors shown within these documents are recommendations only. Per ANSIT/PTI 1 all uplift connectors are the responsibility of the bldg designer and/or contractor DIMENSIONS ARE READ AS: FOOT-INCH-SIXTEENTH. ***

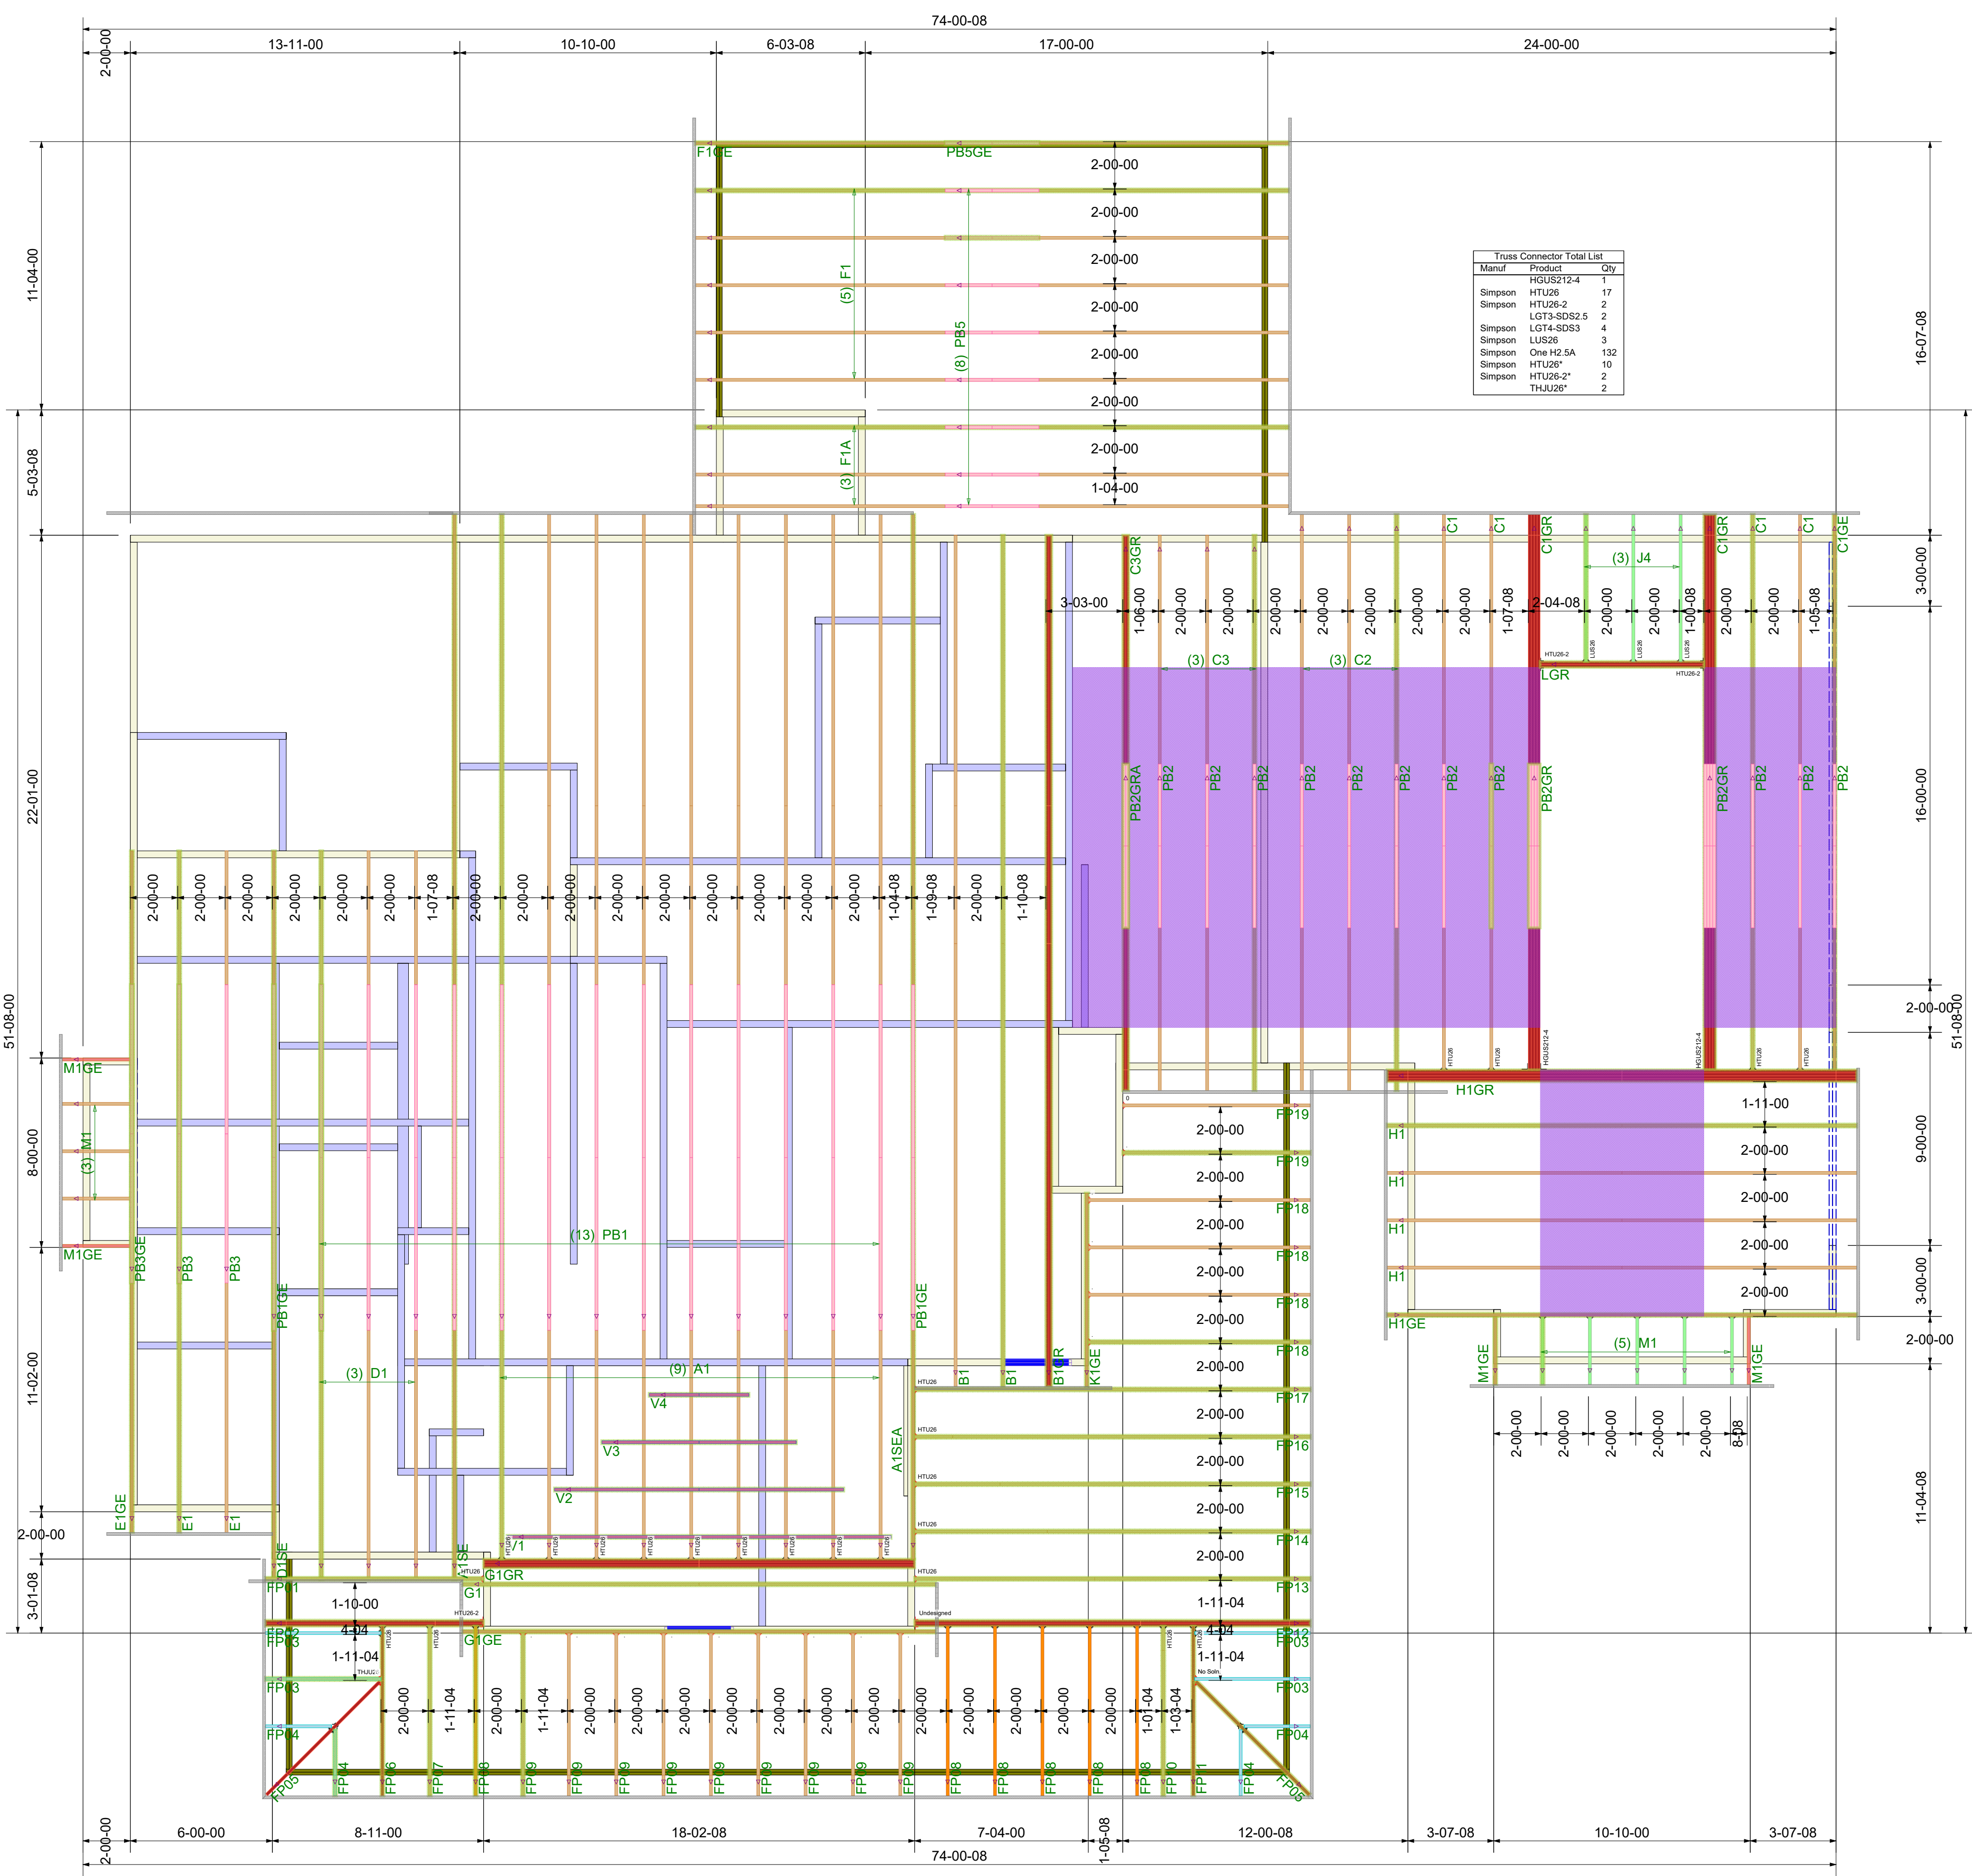

Truss Connector Total List		
Manuf	Product	Qty
	HGUS212-4	1
Simpson	HTU26	17
Simpson	HTU26-2	2
	LGT3-SDS2.5	2
Simpson	LGT4-SDS3	4
Simpson	LUS26	3
Simpson	One H2.5A	132
Simpson	HTU26*	10
Simpson	HTU26-2*	2
	THJU26*	2