

Truss Placement Plan							
SCALE: 3/8"=1'							

LOAD CHART FOR JACK STUDS (BASED ON TABLES P502.5(1) & (b)) NUMBER OF JACK STUDS REQUIRED @ EA END OF			BUILDER	H&H Homes	CITY / CO.		THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer	
NOTICE     RND REPOLICION       10.00     1       34000     2       51000     3	HEADER/GIRDER	O) O) C) C) C) C) C) C) C) C) C) C) C) C) C)	JOB NAME		ADDRESS		is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package	<b>COMTECH</b> ROOF & FLOOR TRUSSES & BEAMS Reilly Road Industrial Park
		3400 1 6800 2 10200 3	PLAN	Freelance C	MODEL	Roof	or online @ sbcindustry.com Bearing reactions less than or equal to 3000# are deemed to comply with the prescriptive Code requirements. The contractor shall refer to the attached Tables	
			SEAL DATE	2/22/19	DATE REV.	11	(derived from the prescriptive Code requirements) to determine the minimum foundation size and number of wood studs required to support reactions greater than 3000# but not greater than 15000#. A registered design professional shall be retained to design the support system for any reaction that exceeds those	
6800 4 8500 5 10200 6	10200 4 12750 5 15300 6	13600 4 17000 5	QUOTE #		DRAWN BY		specified in the attached Tables. A registered design professional shall be retained to design the support system for all reactions that exceed 15000#. Marshall Naylor	Fayetteville, N.C. 28309 Phone: (910) 864-8787
11900 7 13600 8 15300 9			JOB #		SALES REP.	Marshall Naylor	SignatureMarshall Naylor	Fax: (910) 864-4444

= Indicates Left End of Truss
(Reference Engineered Truss Drawing)
Do NOT Erect Truss Backwards