

соттесн **ROOF & FLOOR** 

## TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

aring reactions less than or equal to 3000# are med to comply with the prescriptive Code uirements. The contractor shall refer to the ched Tables ( derived from the prescriptive Coduirements ) to determine the minimum foundation and number of wood studs required to support clipns greater than 3000# but not greater than

Sales Area

Sales Area

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b)) NUMBER OF JACK STUDS REQUIRED @ EA END OF

		HEADER/	GIRDER	5			
END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER		END REACTION (UP TO)		CO OT ITS CION
1700	1	2550	1		3400	0	
3400	2	5100	2		6800	О	
5100	3	7650	3		1020	0	
6800	4	10200	4		1360	0	
8500	5	12750	5		1700	0	
10200	6	15300	6				
11900	7						
13600	8						
15300	9						
							_

CITY / CO.	CITY / CO.   Lillington / Harnett
ADDRESS	402 Black Duck Lane
WODEL	32000
DATE REV.	8/4/25
DRAWN BY	DRAWN BY Johnnie Baggett
SALES REP.	SALES REP. Scot Duncan

Cates Building, Inc. CC2058 ROOF Quote# <u>Lot</u> JOB NAME SEAL DATE BUILDER QUOTE ; PLAN

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com (Reference Engineered Truss Drawing)

= Indicates Left End of Truss

Do NOT Erect Truss Backwards