 



General Notes:


* CUTTING OR DRILLING OF COMPONENTS SHOULD NOT BE DONE WITHOUT CONTACTING COMPONENT SUPPLIER FIRST. CUSTOMER TAKES FULL RESPONSIBILITY FOR COMPONENTS IF CUT BEFORE AUTHORIZATION.

** ALL POINT LOADS FROM ABOVE MUST BE TRANSFERRED TO BEARING FROM UNDER SIDE OF SHEATHING.

** FRAMER MUST REFER TO PLANS WHILE SETTING COMPONENTS. ** DAMAGED COMPONENTS SHOULD NOT BE INSTALLED UNLESS TOLD TO BY THE COMPONENT PLANT. ** ALL BEARING POINTS MUST BE INSTALLED PRIOR TO SETTING ANY COMPONENTS.

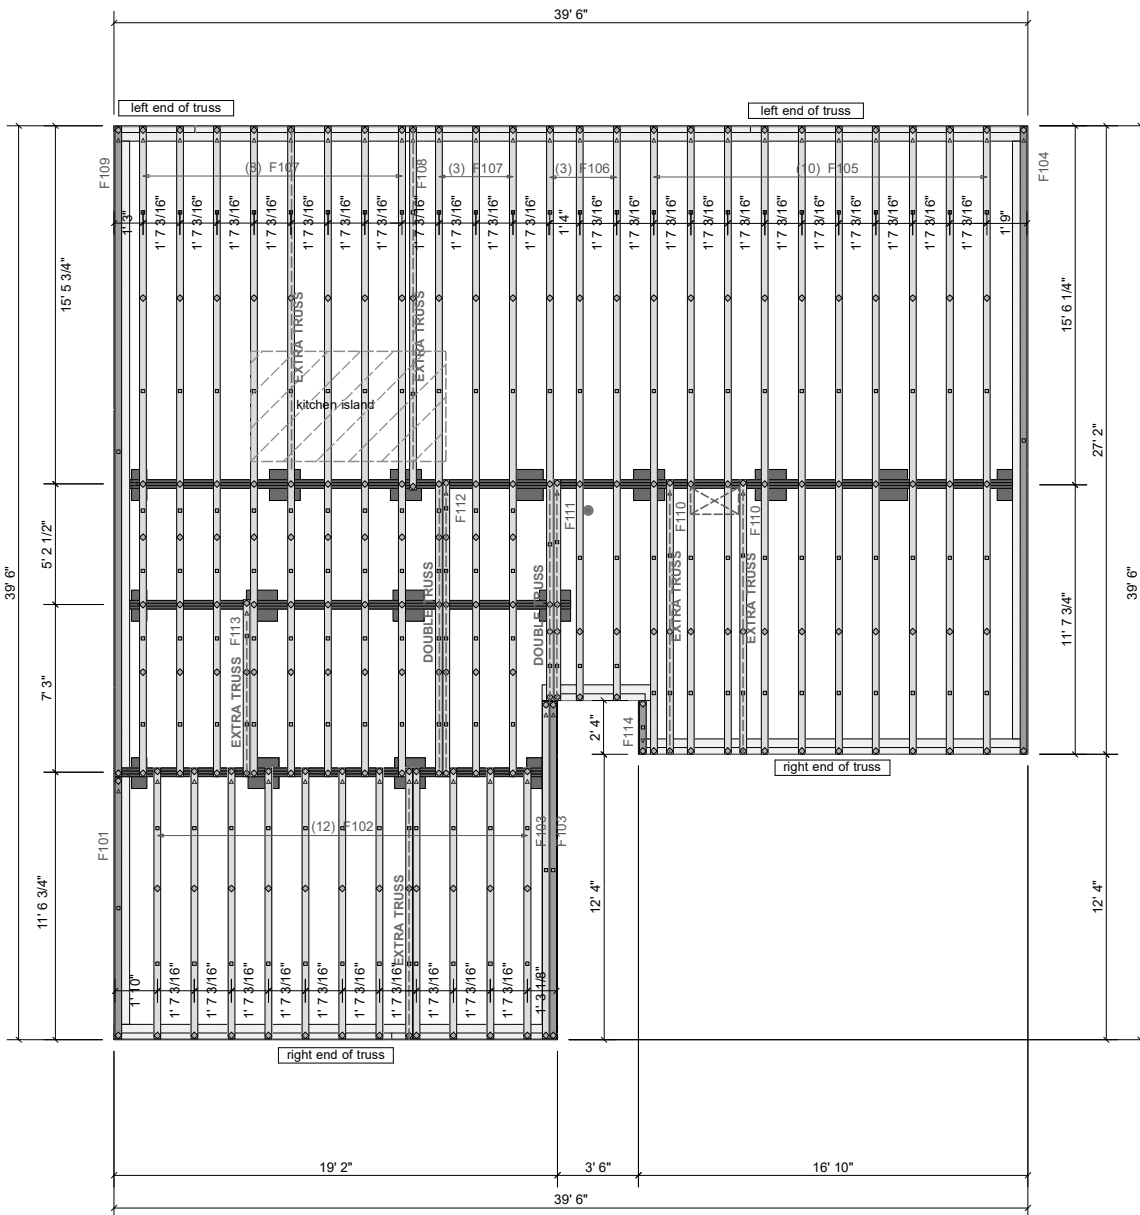

Truss Drawing Left End Indicator

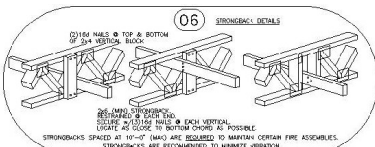

STRONOBLOCK DETAILS

SEE INSTRUCTIONS FOR STRONOBLOCK INSTALLATION. STRONOBLOCKS SPACED AT 16'-0" (MAX) ARE REQUIRED TO MAINTAIN CERTAIN FIRE ASSEMBLIES. STRONOBLOCKS ARE RECOMMENDED TO RESIST REDDION.

** GIRDERS MUST BE FULLY CONNECTED TOGETHER PRIOR TO ADDING ANY LOADS. ** DIMENSIONS ARE READ AS: FOOT-INCH-SIXTEENTH. ** TRUSS TO TRUSS CONNECTIONS ARE TOE-NAILED, UNLESS NOTED OTHERWISE.

HH Hunt Homes Raleigh Durham	
32 Magnolia Acres Greyson EC	
1st FLOOR PLACEMENT PLAN	
DATE: 8/15/2025	SCALE: 1/1
DRAWN BY: Geoff Weston	PROJECT NUMBER: 25080088-A
CHECKED BY: [Signature]	SHEET NUMBER: [Blank]



THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor systems and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding the bracing, consult "Bracing of Wood Truss" available from the Truss Plate Institute, 583 D'Ontario Drive, Madison, WI 53179.

Revisions
00/00/00 Name
00/00/00 Name
00/00/00 Name
00/00/00 Name
00/00/00 Name