



BED ROOM

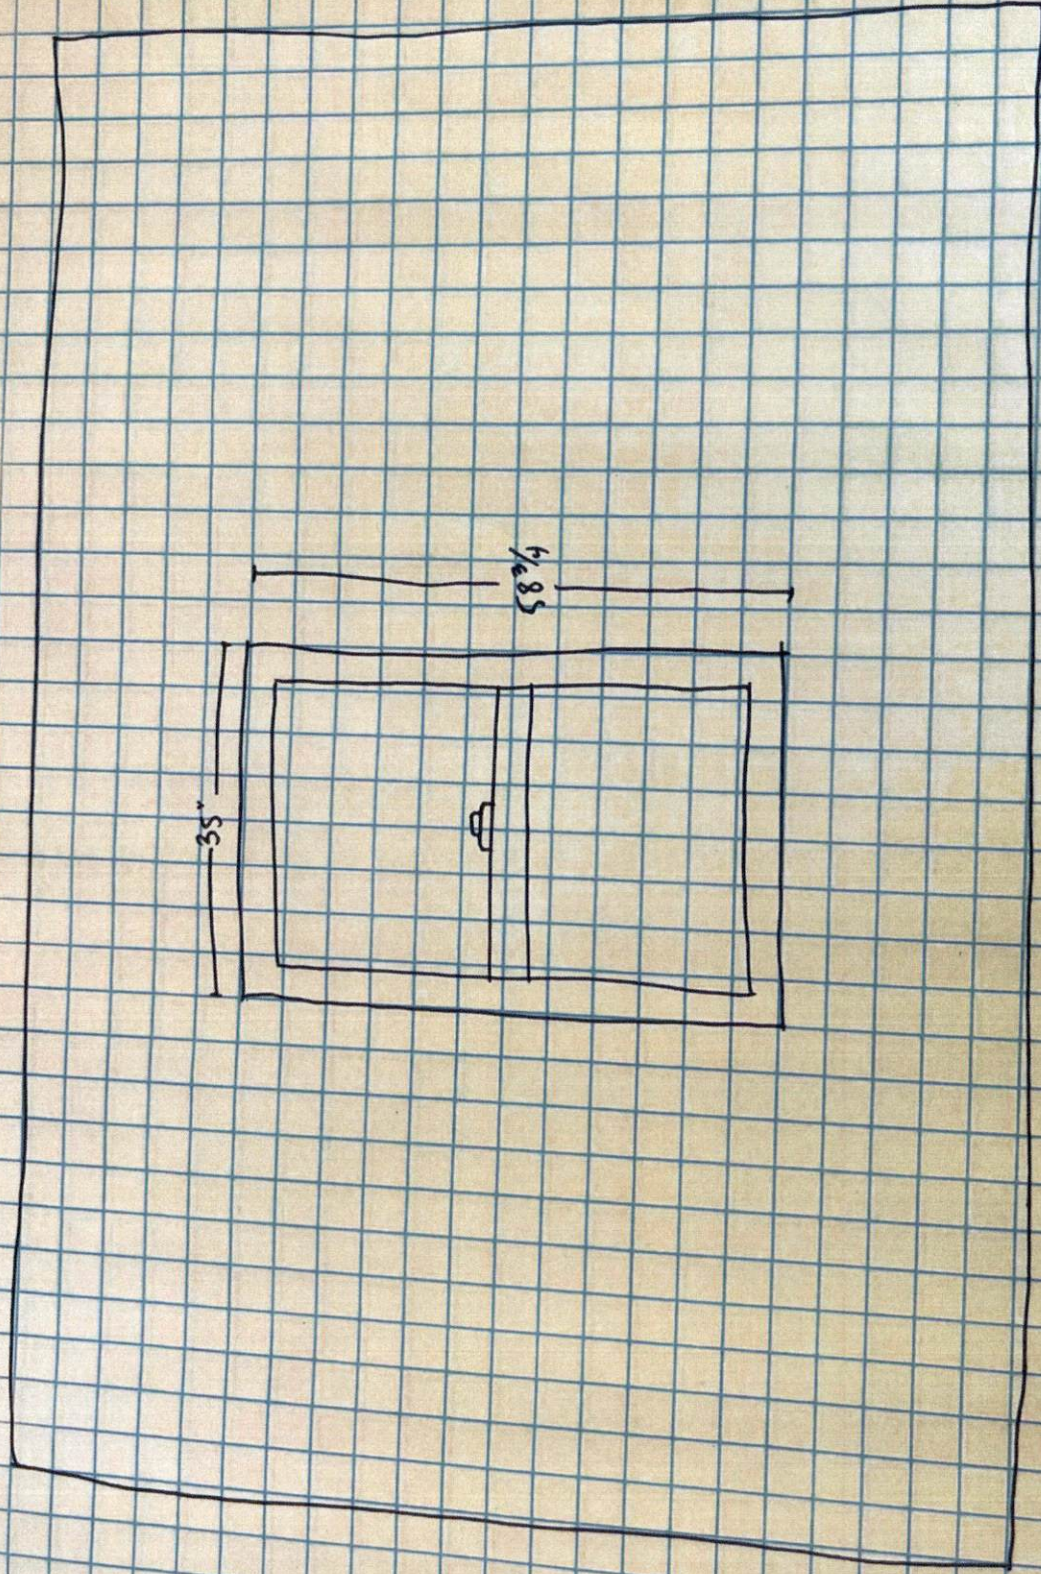

- WINDOW CURRENTLY CENTERED ON WALL
- REMOVE FRAME, INSTALL BOTH WINDOWS CENTERED ON WALL
- SAND DOWN KNOCKDOWN; SKIM COAT, PRIME, & PAINT

* 3 1/2" BASEBOARD TRIM
 8' (17' exact) ~~will~~ will TO MATCHED CORNERS

LIVING ROOM

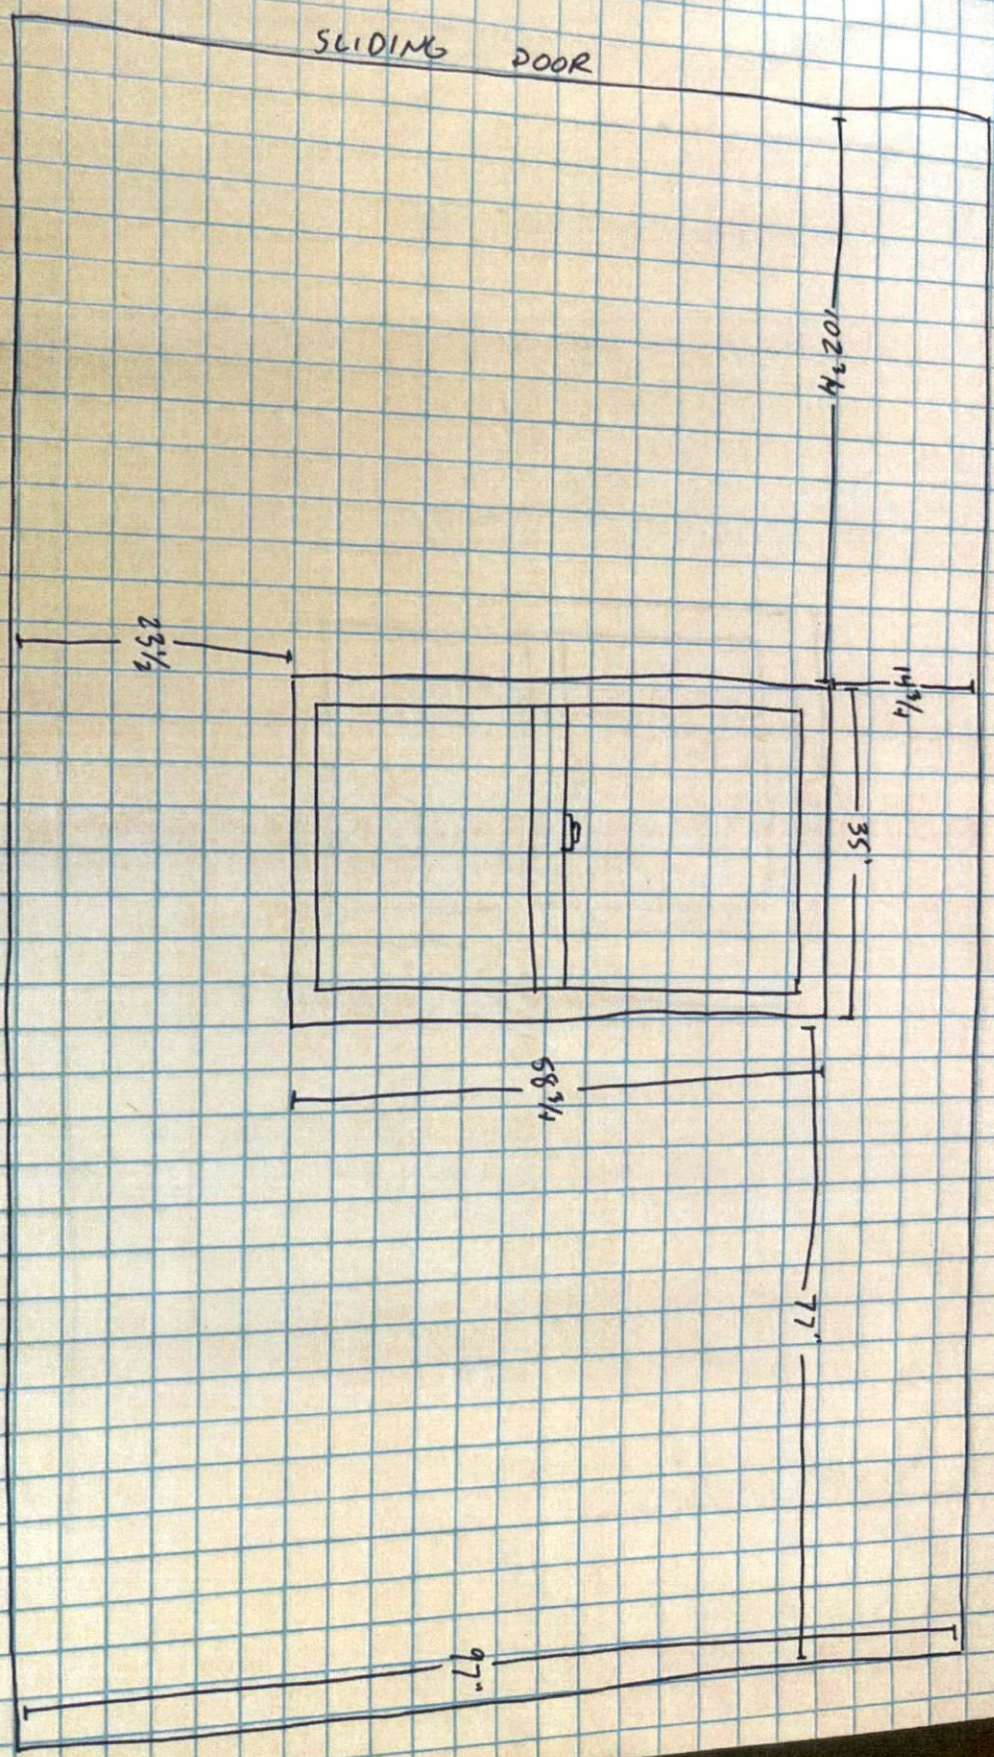

- REMOVE, REFRAINE, INSTALL 3" WIDE W/ MIDDOT PAVE CENTERED IN PLACE OF PAVED WINDOW
- SAND DOWN KNOCKDOWN & STAIN COAT, PAINTING; PAINT WALL