GENERAL NOTES:

DO NOT CUT OR MODIFY TRUSSES.


TRUSSES ARE SPACED 24" ON CENTER UNLESS NOTED OTHERWISE.

REFER TO THE INDIVIDUAL TRUSS DESIGN DRAWINGS FOR THE LOCATION OF LATERAL BRACING AND MULTI-PLY CONNECTION REQUIREMENTS.

PER ANSI TPI 1-2002 THE TRUSS ENGINEER IS RESPONSIBLE FOR TRUSS TO TRUSS CONNECTIONS AND TRUSS PLY TO PLY CONNECTIONS. THIS TRUSS PLACEMENT PLAN RECCOMENDS TRUSS TO BEARING CONNECTIONS AND TRUSS TO BEAM CONNECTIONS WHICH SHALL BE REVIEWED BY THE BUILDING DESIGNER. IT IS THE RESPONSIBILITY OF THE BUILDING DESIGNER TO RESOLVE ALL ROOF FORCES ADEQUATELY TO THE FOUNDATION.

THIS LAYOUT IS INTENDED FOR THE PURPOSE OF TRUSS LOCATION AND PLACEMENT ONLY. REFER TO THE BUILDING PLANS FOR ACTUAL BUILDING CONSTRUCTION.

1600081

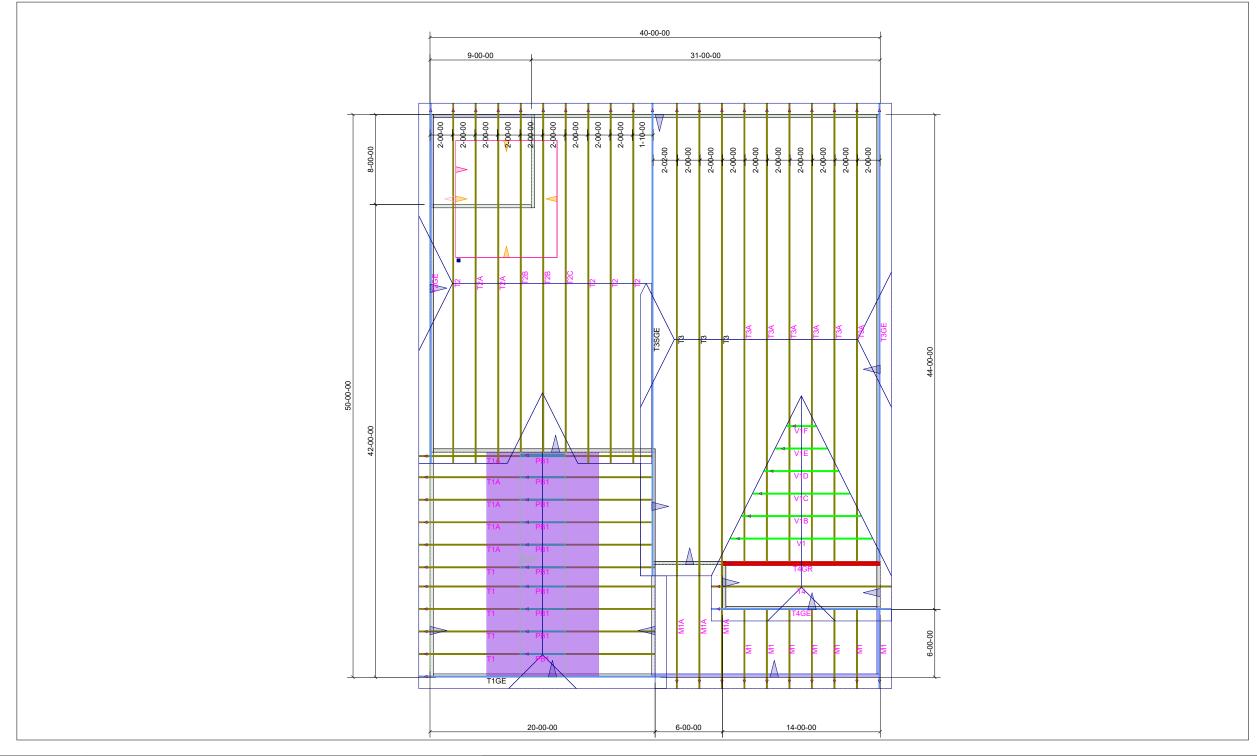

		Hardware List:	ROOF LOADING:	
A	6	HUS26	TOP LIVE: 20 PSF	
В	999	#####		
C	999	######	TOP DEAD: 10 PSF	
	999	######		
			BOTTOM DEAD: 10 PSF	
	999	#####	BOTTOWIDEAD. 10 F3F	
	999	#####	WIND SPEED: 115 MPH	
	999	#####		



DEDICATED TO QUALITY AND EXCELLENCE TO QUALITY AND EXCELLENCE TO ADDITIONAL PROPERTY OF THE PR

	CL-3067 CP					
Caviness Land						
_	MODEL:	CL-3067 GOL				
,E	SCALE:	NOT TO SCALE	P.O. NUMBER:	1600081		
	DRAWN BY:	PRINT DATE:	REV: 03/14/16 09:16:21	SHIP DATE:		