


DR Horton Aberdeen C 42 Woodgrove

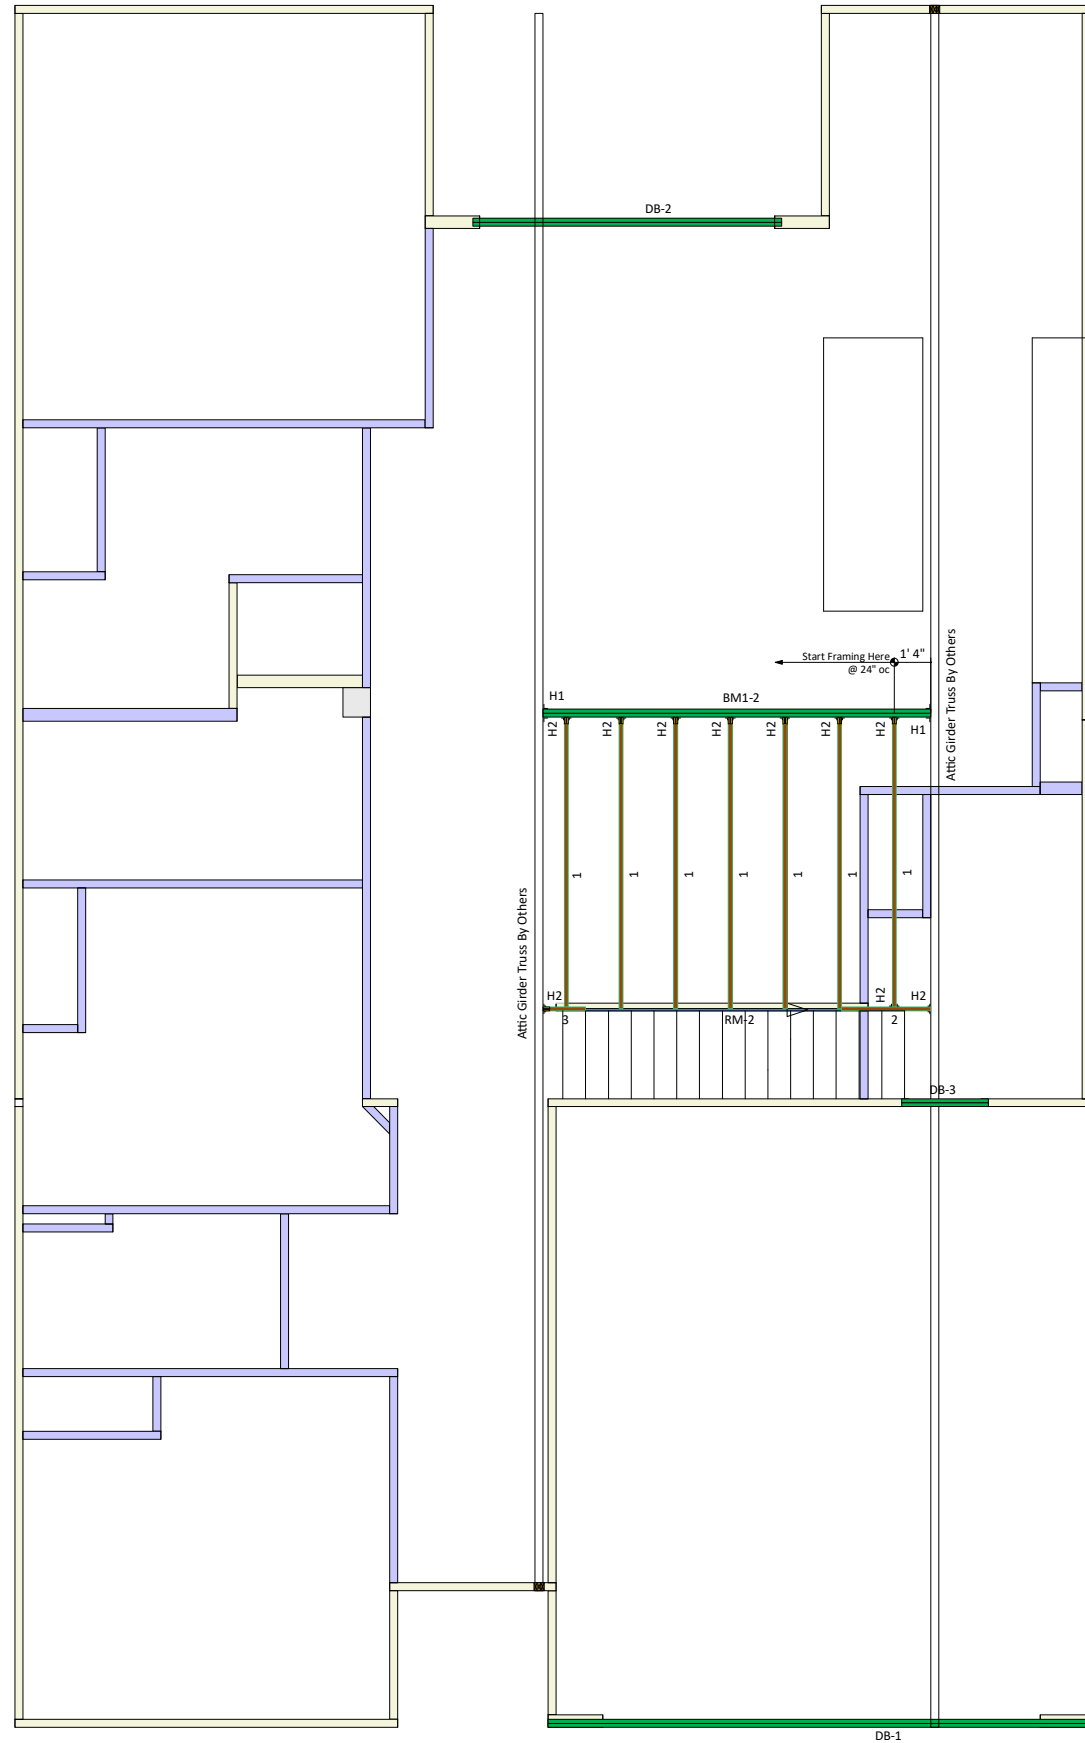

Products					
PlotID	Length	Product	Plies	Net Qty	Fab Type
1	11' 0"	14" BCI® 4500s-1.8	1	7	FF
2	4' 0"	14" BCI® 4500s-1.8	1	1	FF
3	2' 0"	14" BCI® 4500s-1.8	1	1	FF
DB-2	12' 0"	1-3/4" x 11-7/8" VERSA-LAM® LVL 2.1E 3100 SP	2	2	FF
DB-3	4' 0"	1-3/4" x 11-7/8" VERSA-LAM® LVL 2.1E 3100 SP	2	2	FF
BM1-2	16' 0"	1-3/4" x 14" VERSA-LAM® LVL 2.1E 3100 SP	2	2	FF
DB-1	20' 0"	1-3/4" x 16" VERSA-LAM® LVL 2.1E 3100 SP	2	2	FF
RM-2	12' 0"	1" x 14" BC RIM BOARD OSB	1	1	FF

Accessories					
PlotID	Length	Product	Plies	Net Qty	Fab Type
		Web Stiffeners (14" BCI® 4500s-1.8)	1	16	Other
		3/4" 4x8 OSB	1	7	MFD

Connector Summary			
PlotID	Qty	Manuf	Product
H1	2		HHUS410
H2	10		IUS1.81/14

Second Floor Layout

Squash Blocks Required Under The Ends Of All LVL And Point Loads For Load Transfer - See Details
All I-Joist and Versa-Lam Beams Must be Installed per The Boise Cascade Installation Guide!

Revisions:	BY:



84 LUMBER
Build On What We Know. About Engineered Lumber.
600 Rozzelle's Ferry Road
Charlotte, NC 28214
(704) 393-1456 Fax (704) 392-1331

DR Horton
Aberdeen C
84 Lumber Charlotte EWP
Charlotte, North Carolina

BC FRAMER II
Scale: NTS = 1'-0"
Date: 8-16-17
Designer: GO
File: 7/6/2017
DWG: Aberdeen C
Sheet: 1/1