


THIS IS AN ENGINEERED WOOD PRODUCT (EWP) MEMBER PLACEMENT DIAGRAM ONLY; NOT AN ENGINEERED DOCUMENT. EWP members are designed as individual building components to be incorporated into the building design at the specification of the building designer. The Contractor is responsible for the temporary bracing of the floor system, and the building designer is responsible for the permanent bracing and blocking of the floor system and the overall structure. The design of the support structure including but not limited to headers, beams, walls, and columns is also the responsibility of the building designer. It is the responsibility of the General Contractor to verify that the provided layout matches the final intended construction plans, loading conditions, and use. If they do not, it is the responsibility of the General Contractor to notify UFP and provide plans containing the latest specifications and designs. UFP will not be responsible for plan changes by others after final approval of drop drawings, or for errors or modifications made on-site during construction. DO NOT CUT, NOTCH, DRILL, OR OTHERWISE "REPAIR" EWP MEMBERS IN ANY WAY WITHOUT PRIOR WRITTEN AUTHORIZATION BY A LICENSED PROFESSIONAL DESIGNER BY UFP. The Framer is responsible to verify all dimensions, including adjusting member spacing within tolerances to allow for the drop and rise of plumbing/HVAC, unless noted otherwise. All connectors on this project are to be installed per the connector manufacturer's specifications. All connectors shown that are not joist to joist are suggestions only and are to be verified by the Building Designer or Engineer of Record for suitability to this particular project. UFP accepts no responsibility for the specific application or suitability of any connector that is not joist to joist as they apply to this specific structure.

# FLOOR PLACEMENT PLAN

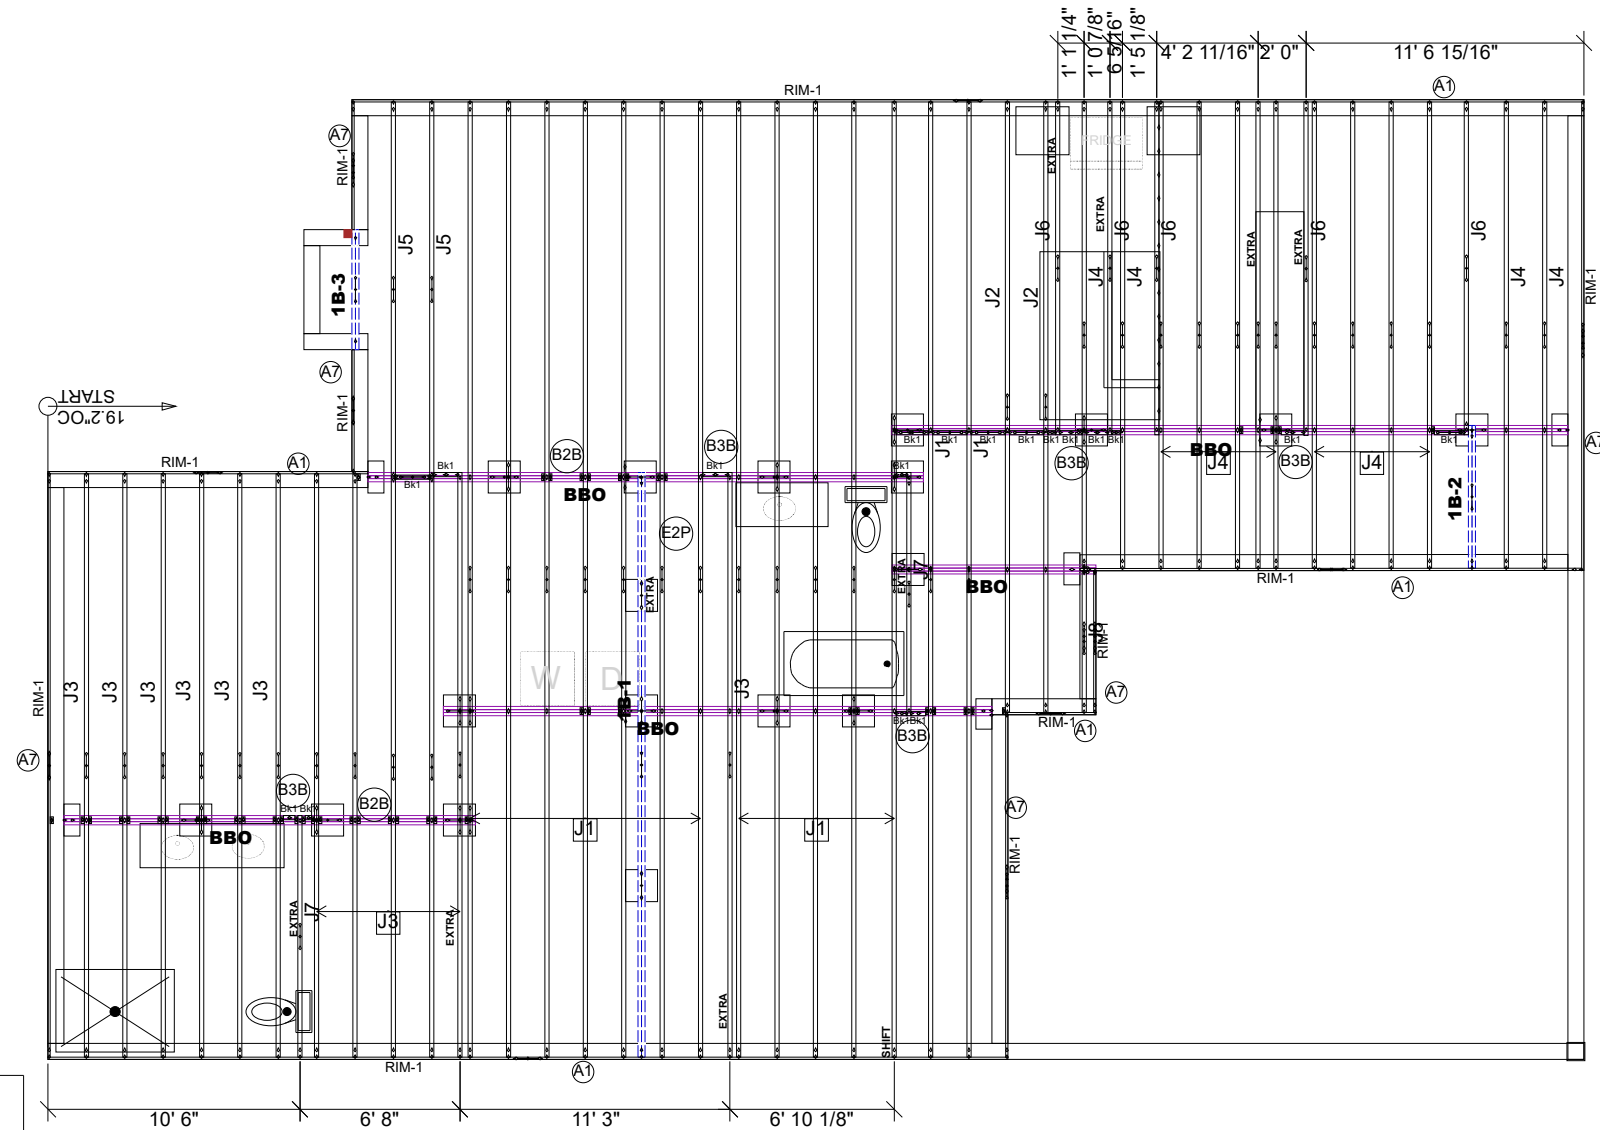

SCALE: 1/8"=1'

**FIELD VERIFY DIMENSIONS TO JOISTS LOCATED UNDER WALLS!!**

INSTALL 2X4 SQUASH BLOCKS IN FLOOR TRUSS SPACE BELOW ALL EXTERIOR DOOR HEADER JACKS. CUT 1/16" TALLER THAN TRUSS.

**CRITICAL !!**

1. GLUE AND NAIL PLYWOOD SUBFLOOR TO BEAMS AND GIRDERS AT 6" O/C WHERE NO WALL IS ABOVE.  
 2. FILL HANGER SEAT WITH GLUE BEFORE SETTING JOIST IN HANGER. FILL ROUND HOLES WITH NAILS.

**FRAMER NOTE**

1= 19-3/16"	9= 172-13/16"
2= 38-3/8"	10= 192"
3= 57-5/8"	11= 211-3/16"
4= 76-13/16"	12= 230-3/8"
5= 96"	13= 249-13/16"
6= 115-3/16"	14= 268-13/16"
7= 134-3/8"	15= 288"
8= 153-5/8"	

LAYOUT FOR 19.2" O/C

**FIELD LOCATE PLUMBING DROPS/CAN LIGHTS, ETC... PRIOR TO JOIST SECUREMENT TO AVOID INTERFERENCE.**

**ALL DIMENSIONS TO CENTERLINE UNLESS OTHERWISE NOTED**

**DOUBLE** (ONLY ASSEMBLED IF NOTED)

**EXTRA** A JOIST ADDED TO THE LAYOUT IN ADDITION TO THE ON CENTER JOISTS

**SHIFT** SHIFT JOIST TO MISS PLUMBING, ALIGN WITH WALL OR SUPPORT FURNITURE.

**SINGLE PLY BEAM** (ADD LINE FOR EACH ADDITIONAL PLY)

**H-, 1H-, GDH-** BEAMS MAY PROTRUDE ABOVE OR BELOW DECKING OR TOP PLATE RESPECTIVELY. REFER TO DETAIL IF BEAM IS A DIFFERENT SIZE BELOW FLOOR SYSTEM.

**1B-, 2B-** TOP PLATE (DROPPED BELOW FLOOR SYSTEM) INDICATES BEAM ABOVE TOP PLATE (FLUSH WITH FLOOR SYSTEM).


**PLAN LEGEND**

- 1.) TOP CHORD OF JOISTS ARE PAINTED RED AT NUMBERED END. PLACE PAINTED END AS NOTED ON PLAN.
- 2.) FOLLOW SPECIAL SPACING AND LOCATION DIMENSIONS FOR EXTRAS OR SHIFTED JOISTS AS SHOWN ON PLAN.
- 3.) ALL INTERIOR WALL PLATES MUST BE LEVEL WITH OUTSIDE WALL TO TOP PLATES.
- 4.) DO NOT STACK CONSTRUCTION LOADS ON UN-BRACED JOISTS.
- 5.) PROVIDE SOLID SUPPORT BELOW ALL BEAM AND HEADER BEARING POINTS IN WALL AND JOIST SPACES CONTINUOUS DOWN TO THE FOUNDATION.
- 6.) LOCATE CRIPPLE STUDS IN JOIST SPACE DIRECTLY BELOW HEADER JACKS AT ALL FIRST FLOOR EXTERIOR DOOR LOCATIONS.
- 7.) INSTALL NAILS IN ALL HOLES PROVIDED IN JOIST HANGERS EXCEPT AT BOTTOM CHORD SEAT. PLACE A DAB OF GLUE IN THE HANGER SEAT BEFORE SETTING JOISTS.
- 8.) IMPORTANT NOTE! NO STRUCTURAL ANALYSIS OF CONVENTIONAL HEADERS HAS BEEN CONDUCTED IF NOT NOTED. THEY ARE TO BE USED TO SUPPORT THE APPLIED LOADS.


**GENERAL NOTES**

PlotID	Length	Product	Piles	Net Qty	Fab Type
Bk1	2' 0"	11 7/8" TJI@ 210	1	18	MFD
RIM-1	16' 0"	1 1/8" x 11 7/8" TJ@ Rim Board	1	1	MFD
RIM-1	16' 0"	1 1/8" x 11 7/8" TJ@ Rim Board	1	13	FF
1B-3	5' 0"	1 3/4" x 11 7/8" 2.0E Microllam@ LVL	2	2	MFD
1B-2	6' 0"	1 3/4" x 11 7/8" 2.0E Microllam@ LVL	2	2	MFD
1B-1	25' 0"	1 3/4" x 11 7/8" 2.0E Microllam@ LVL	2	2	MFD
J8	6' 0"	11 7/8" TJI@ 210	1	1	MFD
J7	11' 0"	11 7/8" TJI@ 210	1	2	MFD
J6	14' 0"	11 7/8" TJI@ 210	1	5	MFD
J5	16' 0"	11 7/8" TJI@ 210	1	2	MFD
J4	20' 0"	11 7/8" TJI@ 210	1	13	MFD
J3	25' 0"	11 7/8" TJI@ 210	1	12	MFD
J2	26' 0"	11 7/8" TJI@ 210	1	2	MFD
J1	40' 0"	11 7/8" TJI@ 210	1	14	MFD


E2P DOUBLE LVL @ PARALLEL JOIST

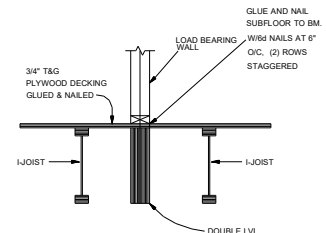


A1 1 1/8\"/>

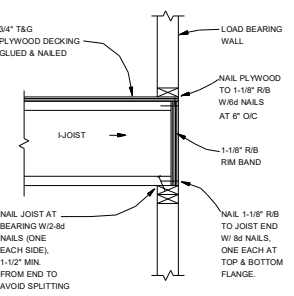


A7 1 1/8\"/>

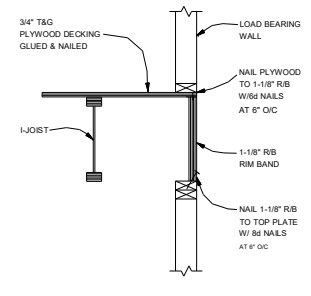

B2B SQUASH BLOCKS

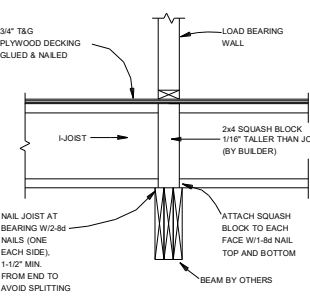

B3B BLOCKING AT JOIST ENDS

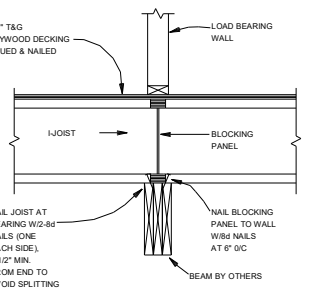

## 1ST FLOOR LAYOUT

**UFP SITE BUILT**  
 A UFP INDUSTRIES COMPANY

Burlington, NC  
 Locust, NC  
 Chesapeake, VA  
 Liberty, NC  
 Clinton, NC  
 Ooltewah, TN  
 Conway, SC  
 Pearisburg, VA  
 Jefferson, GA  
 Stanfield, NC

Customer Service (800) 476-9356



This drawing is property of UFP Site Built, LLC. Any unauthorized use of this document without written permission is prohibited. UFP relinquishes ownership of delivered product upon delivery. Owner of product must obtain UFP's authorization prior to any alteration or modification of product. UFP will not be held responsible for any unauthorized modifications done or costs incurred without prior written authorization from UFP.

**PBS NEW HOMES**

**WOODBIDGE SOUTH 37**

**CLAYTON**

**SALEM VILLAGE DRIVE**  
**FUQUAY VARINA, NC, 27526**

REVISIONS	DATE	DESCRIPTION	DSN

DESIGNER DV  
 LAYOUT DATE 06/15/2023  
 ARCH DATE -  
 STRUC DATE -  
 JOB #: 23061383F1