


Installation Detail For Timber Post and Brace

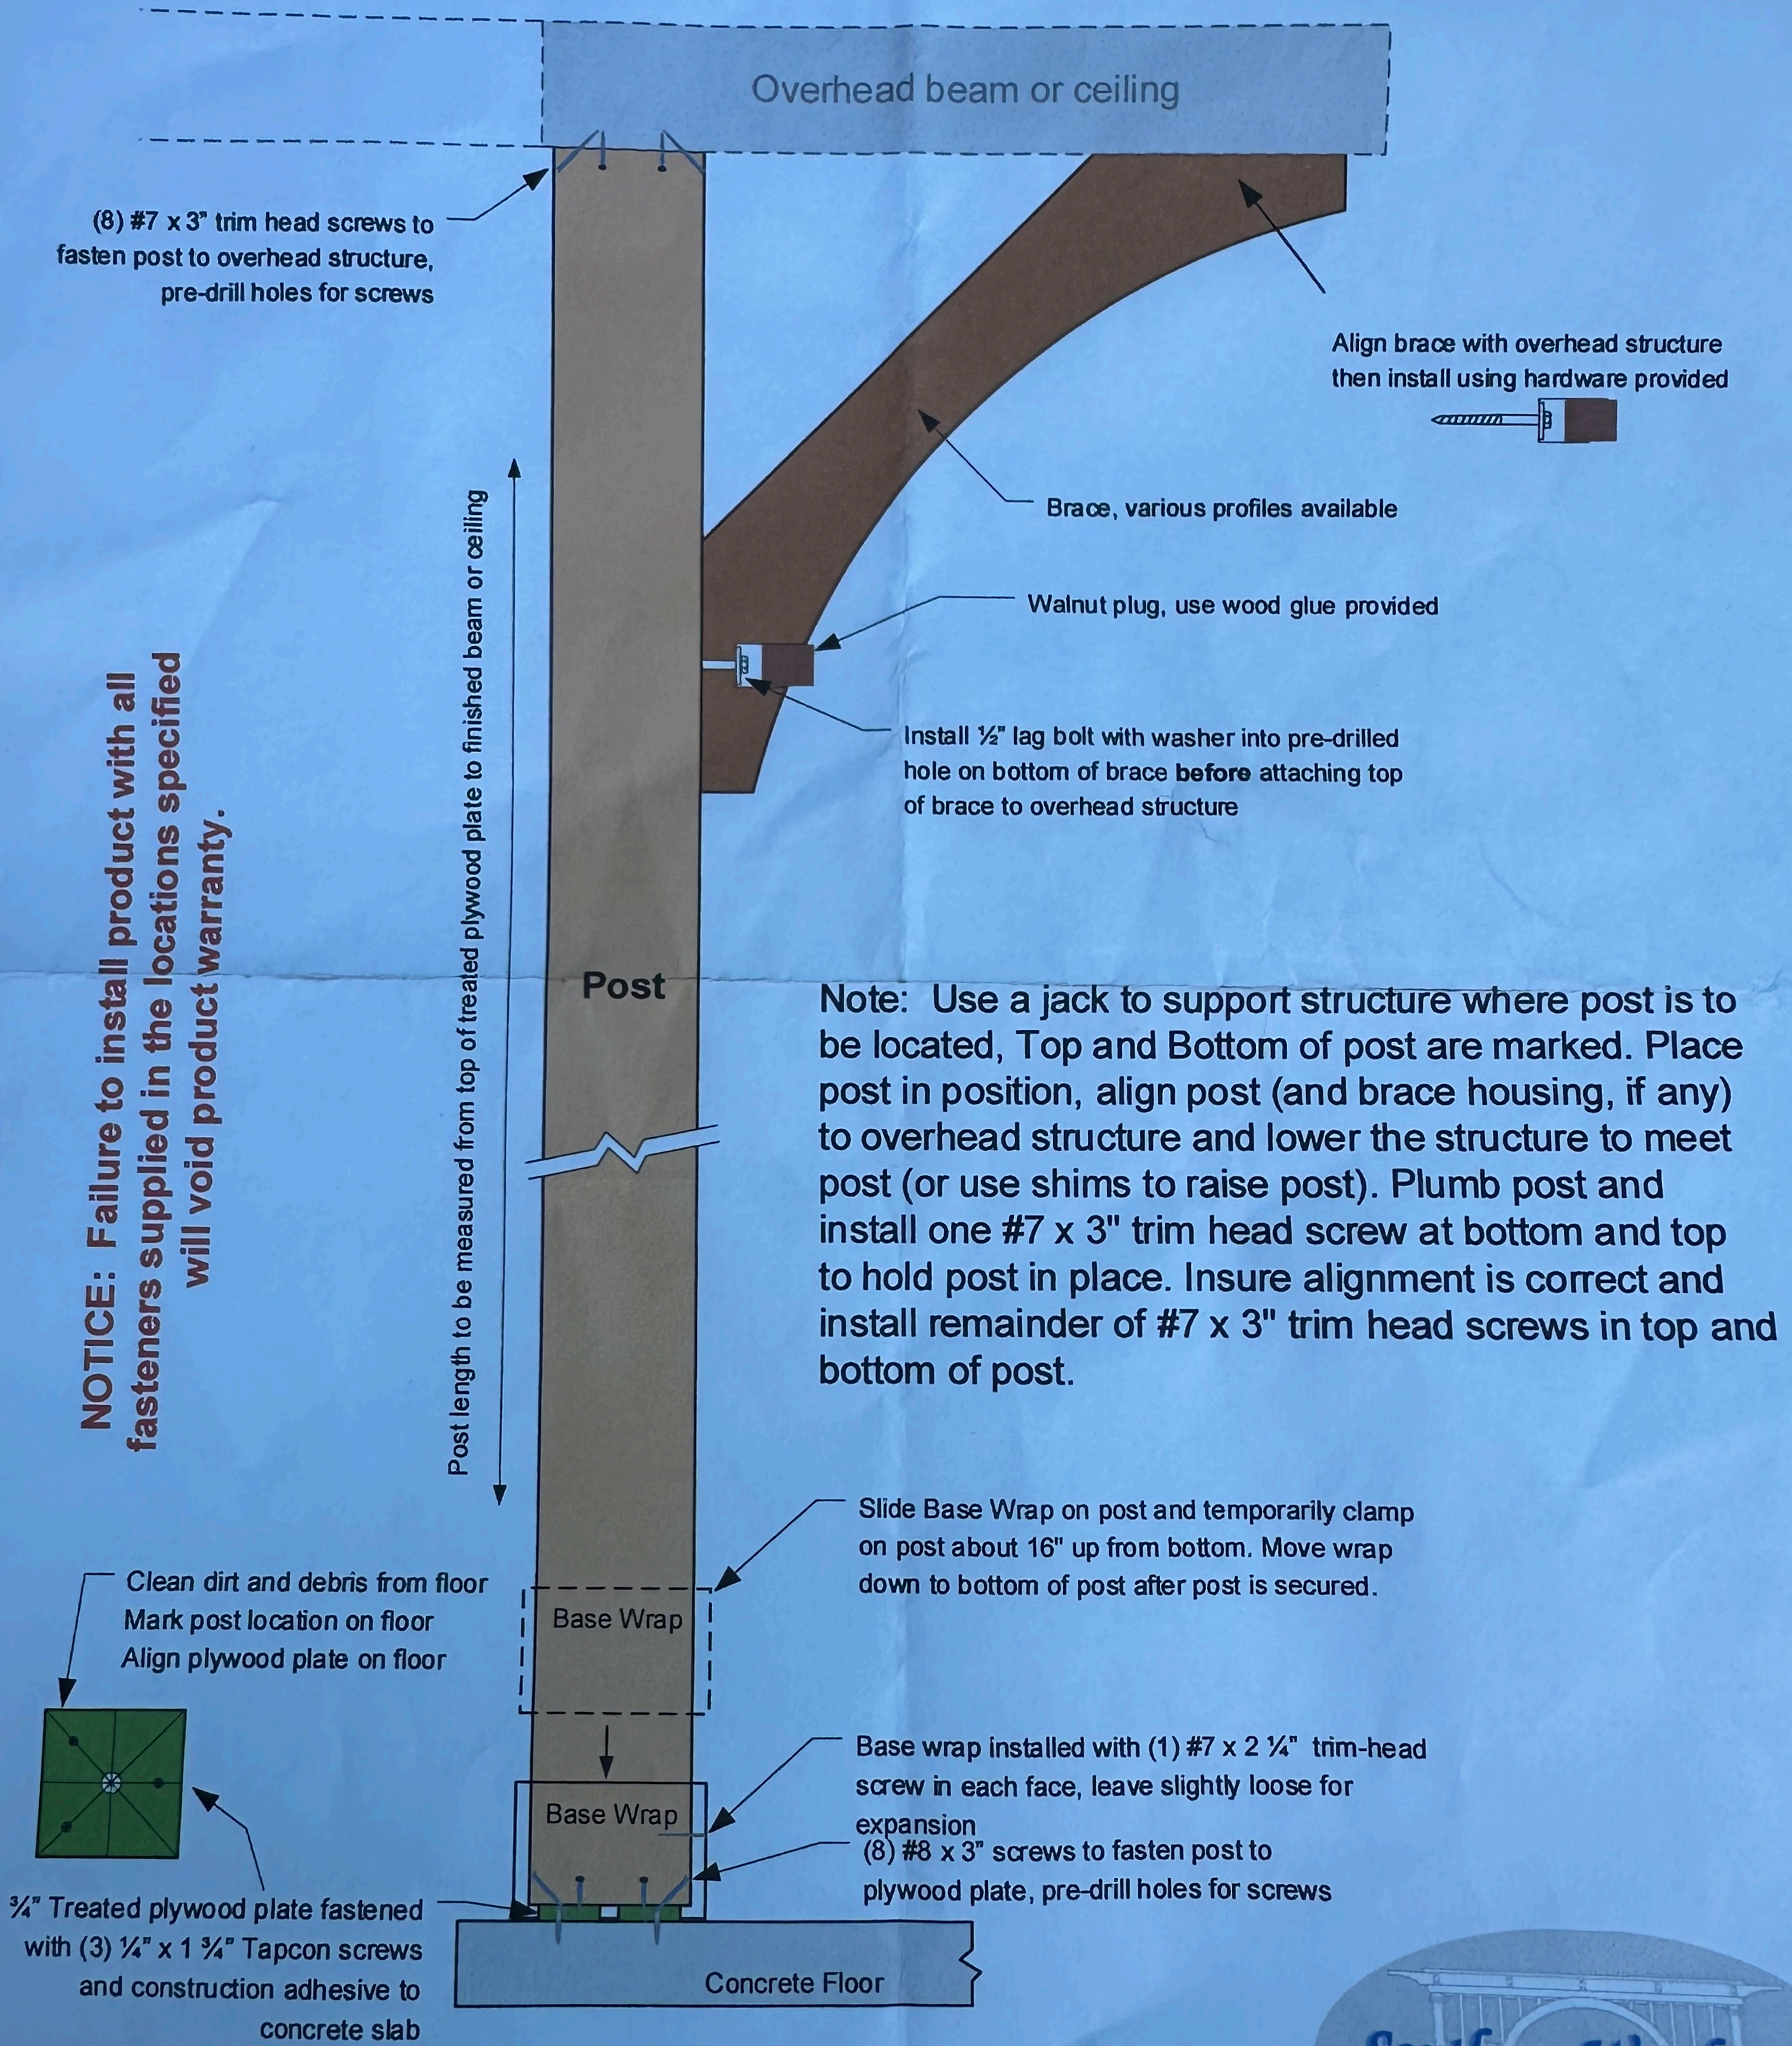

NOTICE: Failure to install product with all fasteners supplied in the locations specified will void product warranty.

Note: Use a jack to support structure where post is to be located, Top and Bottom of post are marked. Place post in position, align post (and brace housing, if any) to overhead structure and lower the structure to meet post (or use shims to raise post). Plumb post and install one #7 x 3" trim head screw at bottom and top to hold post in place. Insure alignment is correct and install remainder of #7 x 3" trim head screws in top and bottom of post.

