

▲ = Denotes Left End of Truss(Reference Engineered Truss Drawing)Do Not Erect Trusses Backwards

HNB SUGGEON (UF TO) (BEQUESTLES FOR (A) MY MEASES

3400

6600 2

10200 3

13600 4

17000 5

LOAD CHART FOR JACK STUDS

(0.495 ON ) MAPS 8502 5(1) A (6)) NUMBER OF JACK STUDG REQUIRE(DIR) (A CMD OF FEAGER/REGOER

> 2550 1 5100 2

7650 3

10200 4

12750 5

15300 6

1700 1 3400 2

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs.

Truss Placement Plan SCALE: 3/16" = 1'

Beam Legend							
PlotID	Length	Product	Plies	Net Qty			
BM1	8' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
BM3	7' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
BM2	6' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
GDH-1	14' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2			
GDH	23' 0"	1-3/4"x 14" LVL Kerto-S	2	2			


THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. **BUILDER** CITY / CO. Weaver Development Co. Inc. Harnett Co. / Harnett **ADDRESS** JOB NAME Lot 4 C.P. Stewart Rd. 606 C.P. Stewart Rd. PLAN The Lauren H / Elev. A / Cp / 3 Car MODEL Roof **SEAL DATE** 2/24/20 DATE REV. 05/10/21 QUOTE # Quote # DRAWN BY Curtis Quick Curtis Quick JOB # J0521-2902 SALES REP. Lenny Norris Curtis Quick

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com

ROOF & FLOOR TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

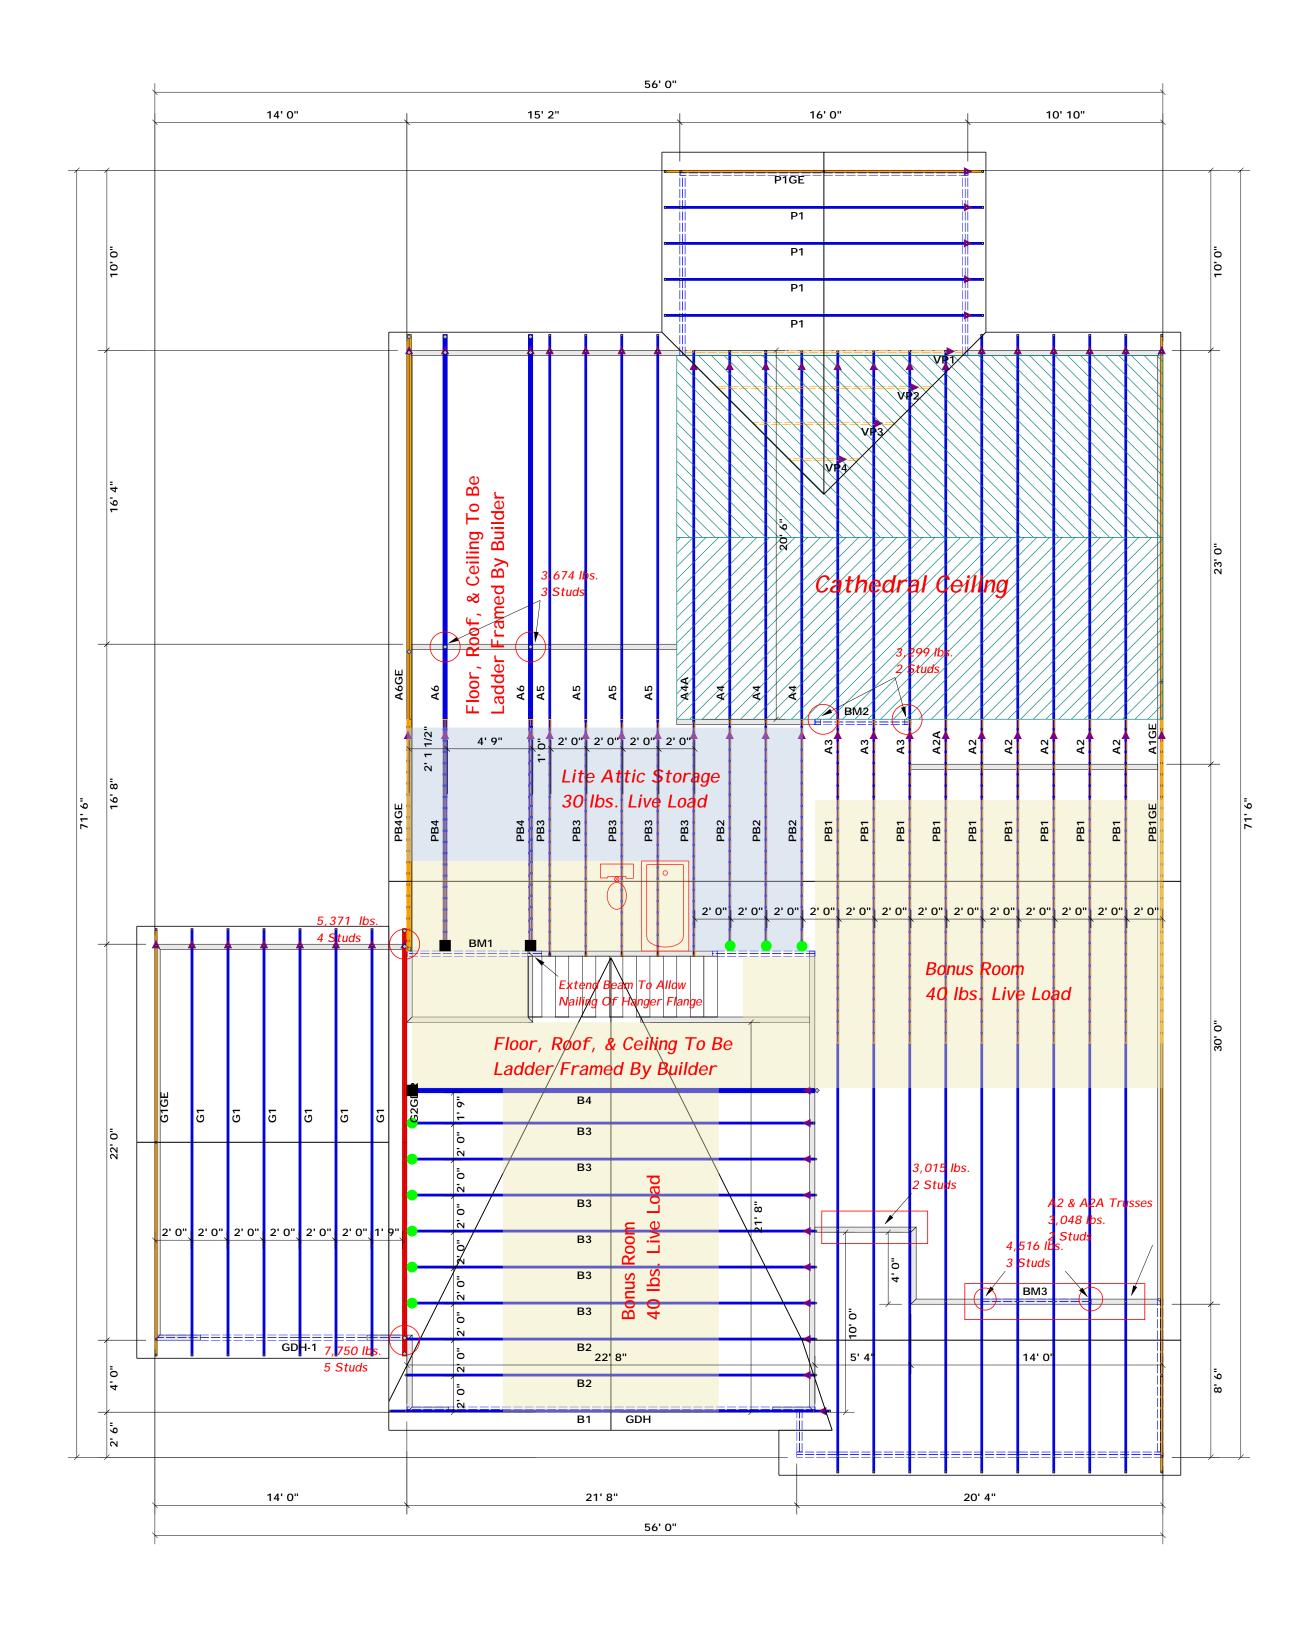

HANGER LEGEND						
= USP THD28-2 / Double 2x Hanger						
= USP HUS26 / Single 2x Hanger						

▲ = Denotes Left End of Truss
 (Reference Engineered Truss Drawing)
 Do Not Erect Trusses Backwards

(U\* TO)

3400

6600 2

10200 3

13600 4

17000 5

LOAD CHART FOR JACK STUDS

(0.495 ON ) MAPS 8502 5(1) A (6)) NUMBER OF JACK STUDG REQUIRE(DIR) (A CMD OF FEAGER/REGOER

> 2550 1 5100 2

7650 3

10200 4

12750 5

15300 6

1700 1 3400 2

5100 3

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs.

Truss Placement Plan SCALE: 3/16" = 1'

Beam Legend							
PlotID	Length	Product	Plies	Net Qty			
BM1	8' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
ВМ3	7' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
BM2	6' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2			
GDH-1	14' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2			
GDH	23' 0"	1-3/4"x 14" LVL Kerto-S	2	2			

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. **BUILDER** CITY / CO. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com Weaver Development Co. Inc. Harnett Co. / Harnett **ADDRESS** JOB NAME Lot 4 C.P. Stewart Rd. 606 C.P. Stewart Rd. The Lauren H / Elev. A / Cp / 3 Car PLAN MODEL Roof SEAL DATE 2/24/20 DATE REV. 05/10/21 QUOTE # Quote # DRAWN BY Curtis Quick Curtis Quick JOB # J0521-2902 Lenny Norris SALES REP. Curtis Quick



Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444