

Products					
PlotID	Length	Product	Plies	Net Qty	Fab Type
BM5 (Dropped)	7' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2	FF
BM6 (Dropped)	4' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2	FF
GDH-3 (Dropped)	13' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2	FF
GDH (Dropped)	23' 0"	1-3/4"x 14" LVL Kerto-S	2	2	FF
BM2 (Flush)	17' 0"	1-3/4"x 16" LVL Kerto-S	2	2	FF
BM7 (Flush)	14' 0"	1-3/4"x 16" LVL Kerto-S	2	2	FF
BM3 (Flush)	12' 0"	1-3/4"x 16" LVL Kerto-S	2	2	FF
BM4 (Flush)	7' 0"	1-3/4"x 16" LVL Kerto-S	2	2	FF
BM1 (Top Flush)	23' 0"	1-3/4"x 23-7/8" LVL Kerto-S	3	3	FF

Truss Placement Plan SCALE: 1/4" = 1'-0"

▲= Denotes Left End of Truss (Reference Engineered Truss Drawing)

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs. Reaction / # of Studs

SEAL DATE BUILDER QUOTE JOB THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com

соттесн

ROOF & FLOOR TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

earing reactions less than or equal to 3000# are semed to comply with the prescriptive Code quirements. The contractor shall refer to the tached Tables (derived from the prescriptive Cod quirements) to determine the minimum foundatic ze and number of wood studs required to support actions greater than 3000# but not greater than 3000#. A registered design professional shall be stained to design the support system for any faction that exceeds those specified in the attached ables. A registered design professional shall be stained to design the support system for all sections that exceed 15000#.

Christine Shivy

Christine Shivy

LOAD CHART FOR JACK STUDS (8ASED ON TABLES ROOF 5(1) & (b))

NUMBER OF JACK STUDS REQUIRED @ EA END OF HEADER/GITDER

END REACTION (JE TO) REQ'D STUDS FOR (3) ALY HEADER

2550 1

5100 2

7650 3

10200 4

12750 5

15300 6

3400 1

6800 2

10200 3

13600 4

17000 5

Christine Shivy

DRAWN BY SALES REP.

J0721-4305

Quote

Lenny Norris

1700 1

3400 2

5100 3

6800 4

8500 5

10200 6

11900 7 13600 8 15300 9

Spring Hill Chur

136

Farm Estates

Atkins

5-R


Lot

NAME

Weaver Development

Sanford / Harnett

CI TY / CO.

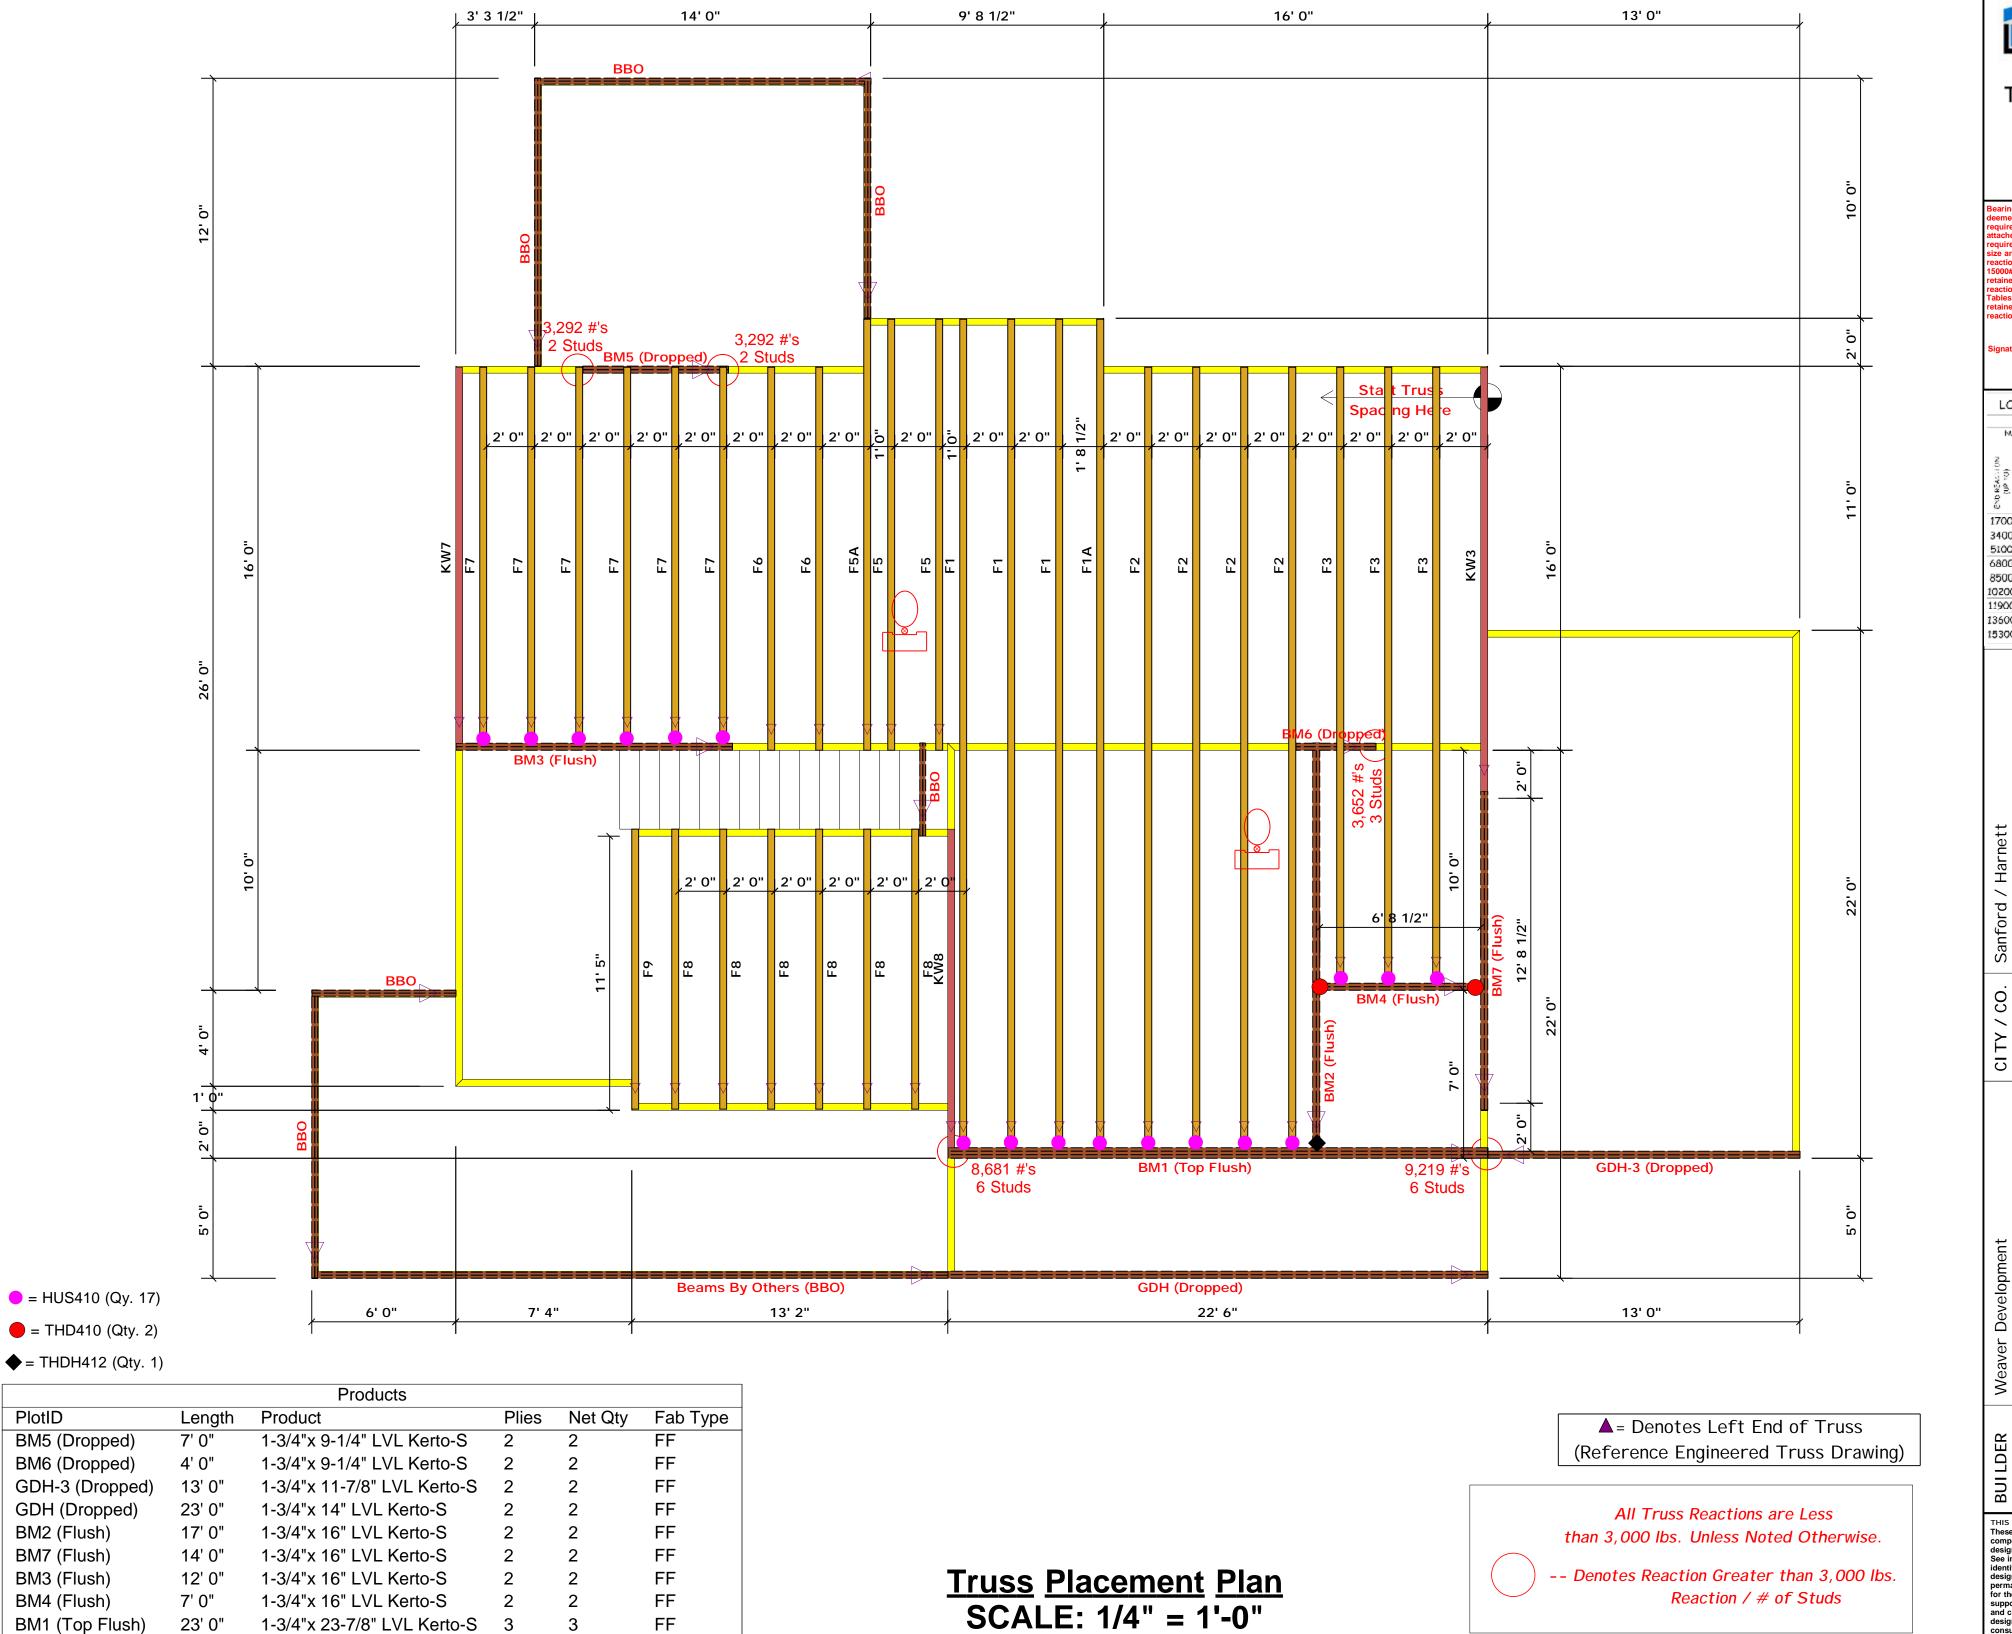

PlotID

BM5 (Dropped)

BM6 (Dropped)

GDH (Dropped)

BM2 (Flush)

BM7 (Flush)

BM3 (Flush)

BM4 (Flush)

BM1 (Top Flush)

23' 0"

1-3/4"x 16" LVL Kerto-S

1-3/4"x 23-7/8" LVL Kerto-S

FF

3

ROOF & FLOOR TRUSSES & BEAMS

соттесн

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

ng reactions less than or equal to 3000# are ed to comply with the prescriptive Code rements. The contractor shall refer to the ted Tables (derived from the prescriptive Corements) to determine the minimum foundationd number of wood studs required to suppo e and number or wood studs required to suppo-citions greater than 3000# but not greater than 000#. A registered design professional shall be ained to design the support system for any action that exceeds those specified in the attach bles. A registered design professional shall be ained to design the support system for all actions that exceed 15000#.

Christine Shivy

Christine Shivy

LOAD CHART FOR JACK STUDS

(BASED ON TABLES ROOF (1) Δ (b)) NUMBER OF JACK STUDS REQUIRED @ EA END OF HEADER/GITDER

Spring Hill Chur Sanford / Harnett Christine Shivy Lenny Norris 136 DRAWN BY SALES REP. CI TY / CO.

Farm J0721-4305 Seal Date Quote Lot **SEAL DATE** NAME QUOTE JOB

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com