▲= Denotes Left End of Truss (Reference Engineered Truss Drawing)

	HUS28	USP	15		16d/3-1/2	16d/3-1/2"
	THD28-2	USP	1	NA	16d/3-1/2"	10d/3"

Hatch Legend


= MAIN LOAD BEARING WALLS @ 9-1-8

	Estir	mation	
Name	Selection	Formula	Calculation
Roof Area	1st Floor	Roof Area	3338.42
Roof Decking	1st Floor	Roof Decking	115

		BEAM LEGEND		
PlotID	Length	Product	Plies	Net Qty
GDH9' 3-car(dropped)	14-00-00	1-3/4"x 11-7/8" LVL Kerto-S	2	2
GDH18' (dropped)	22-00-00	1-3/4"x 14" LVL Kerto-S	2	2

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs. Reaction / # of Studs

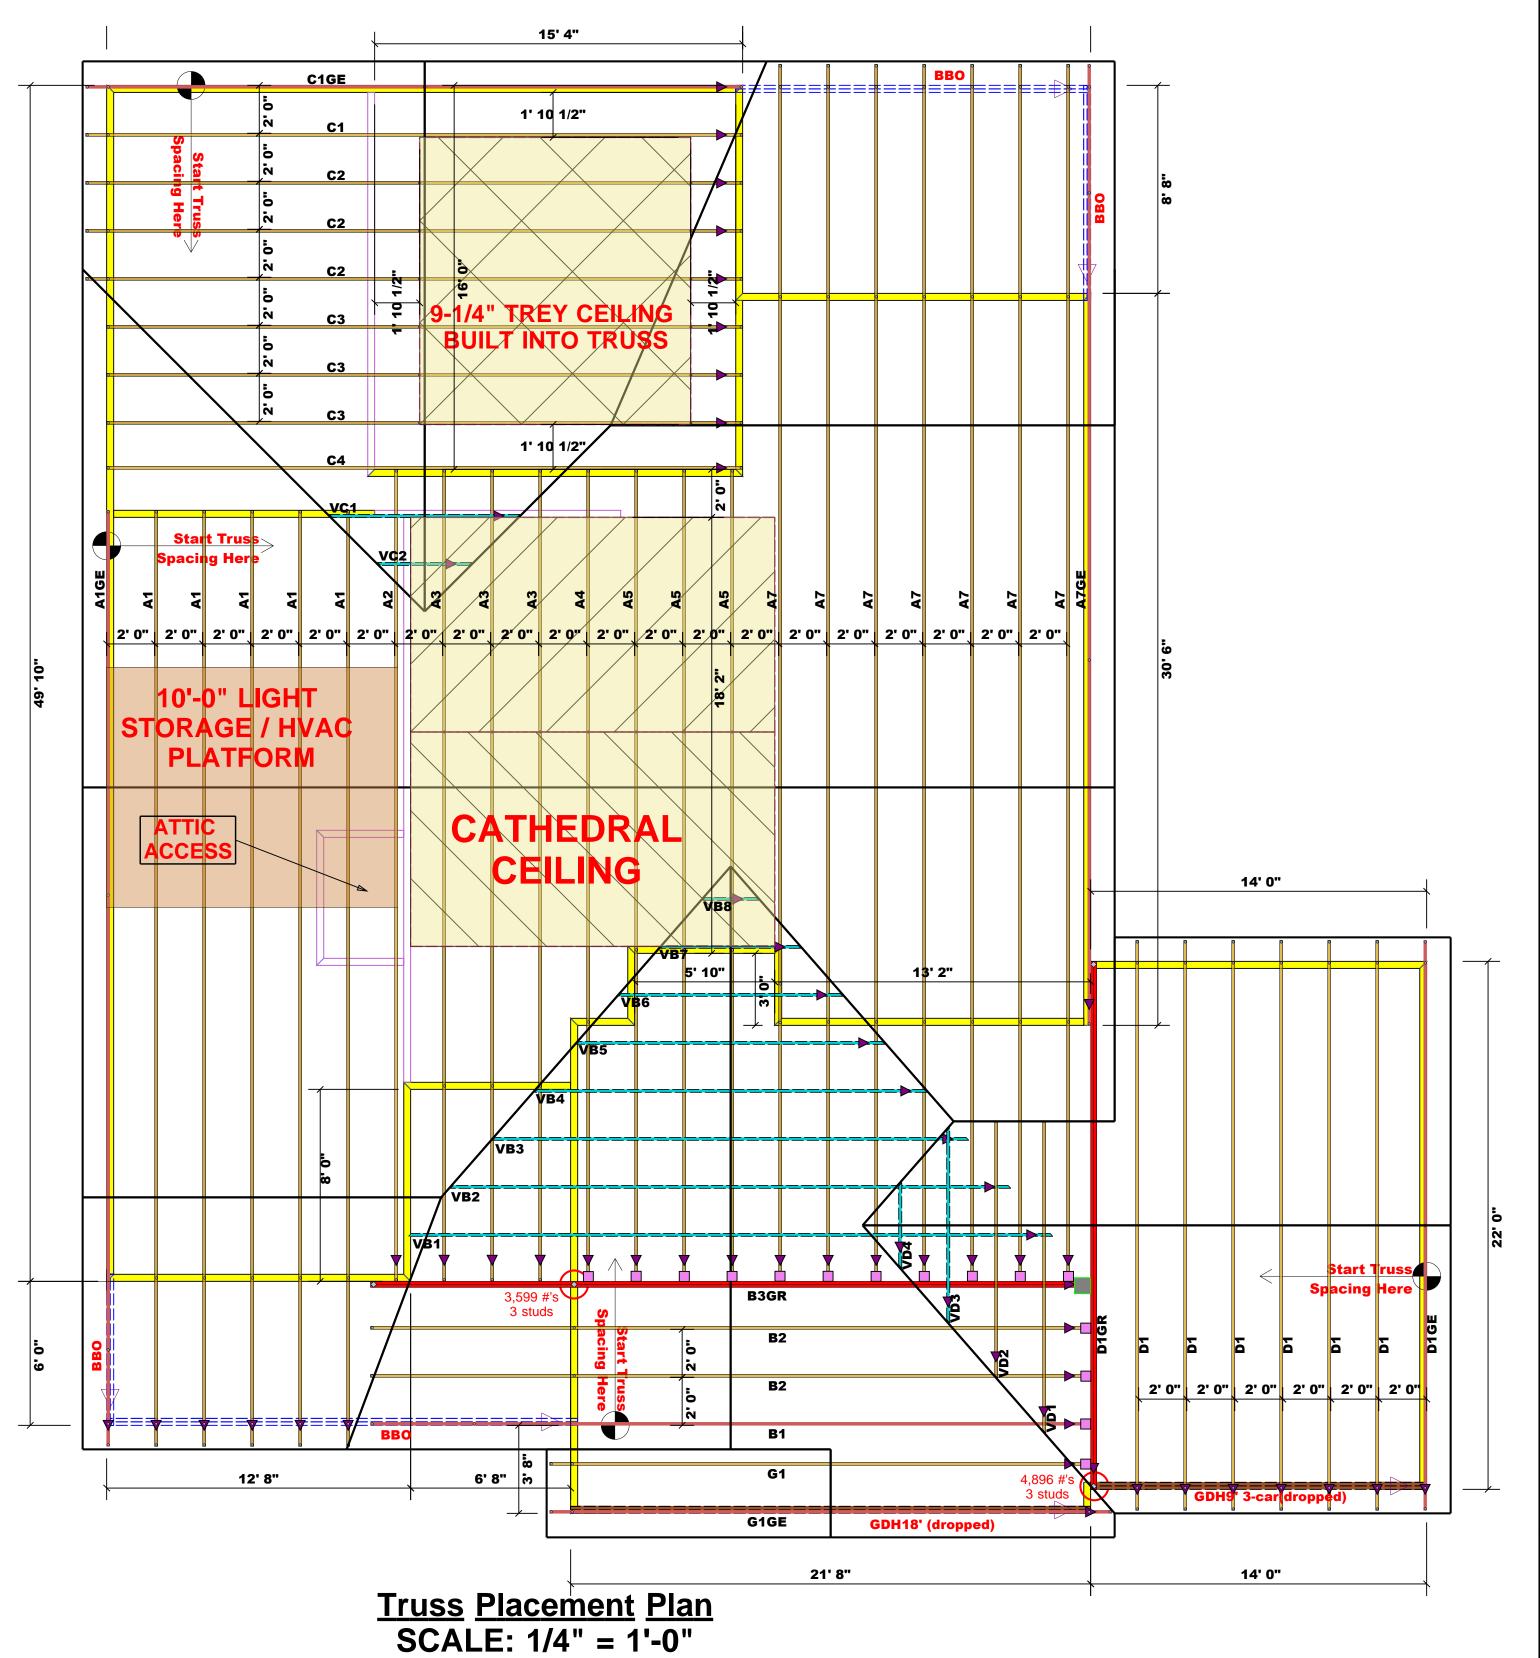

COMTECH **ROOF & FLOOR**

TRUSSES & BEAMS Reilly Road Industrial Park

Fayetteville, N.C. 28309

Phone: (910) 864-8787

Fax: (910) 864-4444

reactions less than or equal to 3000# are to comply with the prescriptive Code ments. The contractor shall refer to the d Tables (derived from the prescriptive Co

Lenny Norris

Lenny Norris

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b))

Sanford / Johnston Lenny Norris Lenny Norris DRAWN BY SALES REP. DATE REV. CITY / CO.

Lindsay 1553 B/*FP/3*CG* J0123-0240 Quote# JOB NAME SEAL DATE QUOTE # THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.
These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com

Weaver Development Co.

BUILDER



	HUS28	USP	15		16d/3-1/2	16d/3-1/2"
	THD28-2	USP	1	NA	16d/3-1/2"	10d/3"

Hatch Legend

= MAIN LOAD BEARING WALLS @ 9-1-8

	Estir	mation	
Name	Selection	Formula	Calculation
Roof Area	1st Floor	Roof Area	3338.42
Roof Decking	1st Floor	Roof Decking	115

		BEAM LEGEND			
PlotID	Length	Product	Plies	Net Qty	F
GDH9' 3-car(dropped)	14' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2	F
GDH18' (dropped)	22' 0"	1-3/4"x 14" LVL Kerto-S	2	2	F


All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

Start Truss

2

D1GE

-- Denotes Reaction Greater than 3,000 lbs. Reaction / # of Studs

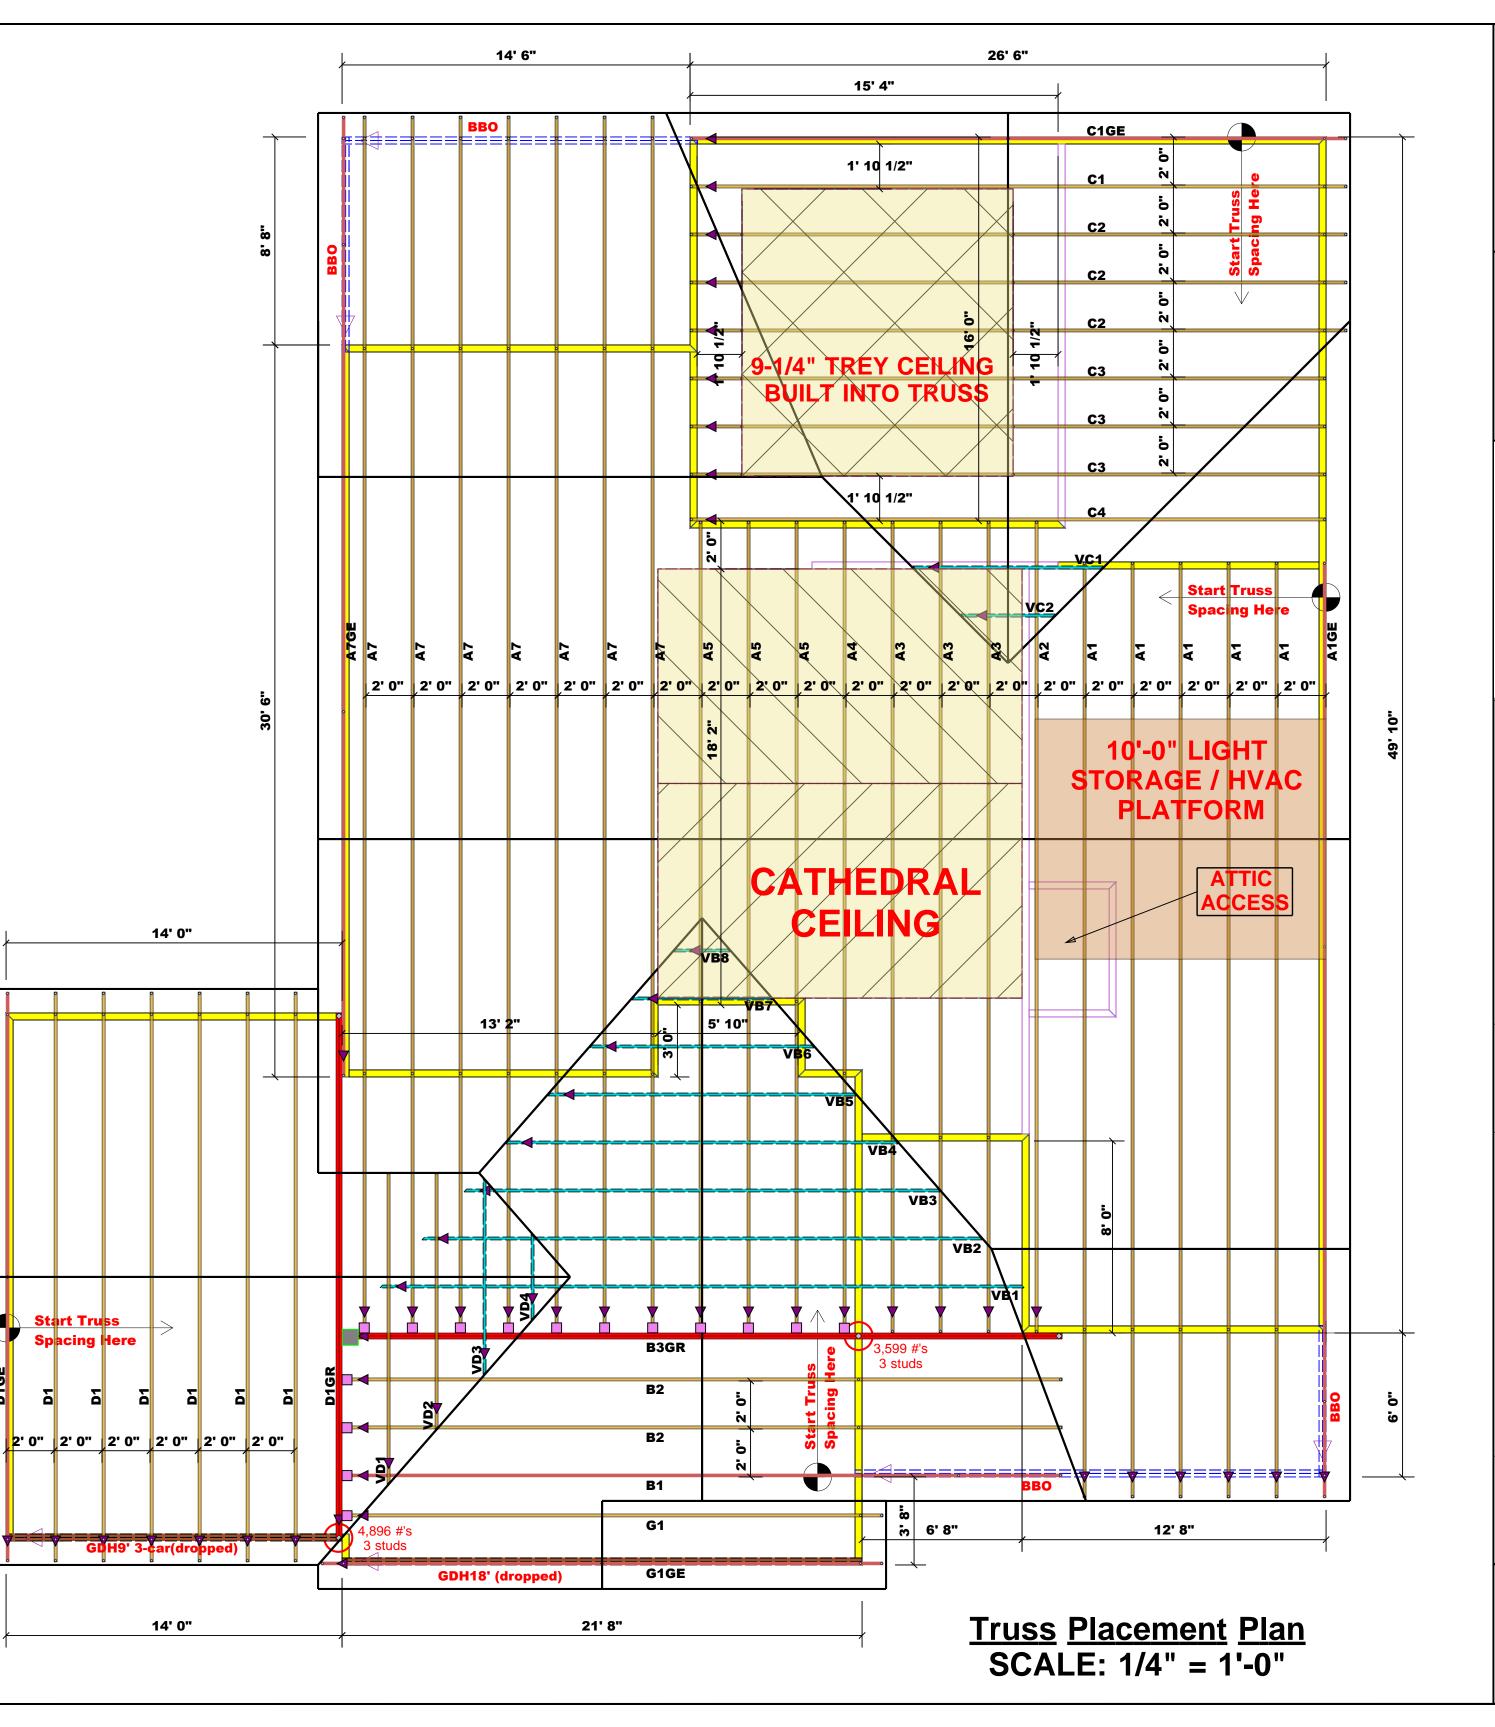



TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

aring reactions less than or equal to 3000# are med to comply with the prescriptive Code uirements. The contractor shall refer to the ached Tables (derived from the prescriptive Coduirements) to determine the minimum foundation and number of wood studs required to supportions greater than 3000# but not greater than 300#. A registered design professional shall be ained to design the support system for any ction that exceeds those specified in the attachelles. A registered design professional shall be

Lenny Norris

Lenny Norris

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b))

NU	MBER C	F JAC	K STUDS R HEADER/		A END OF	
END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER		END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR
1700	1		2550	1	3400	1
3400	2		5100	2	6800	2
5100	3		7650	3	10200	3
6800	4		10200	4	13600	4
8500	5		12750	5	17000	5
10200	6		15300	6		
11900	7					
13600	8					
15300	9					

Weaver Development Co. Inc.	CITY / CO.	CITY / CO. Sanford / Johnston
Lot 33R West Preserve	ADDRESS	Oleander Lane
Lindsay 1553 B/*FP/3 <i>CG</i>	WODEL	ROOF
Seal Date	DATE REV. //	//
Quote #	DRAWN BY	DRAWN BY Lenny Norris
J0123-0240	SALES REP.	SALES REP. Lenny Norris

JOB NAME SEAL DATE **QUOTE**# BUILDER THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.
These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

J0123-0240