

Dimension Notes All exterior wall to wall dimensions are to face of sheathing unless noted otherwise
 All interior wall dimensions are to face of stud unless noted otherwise
 All exterior wall to truss dimensions are to face of stud unless noted otherwise


All Walls Shown Are Considered Load Bearing

= Indicates Left End of Truss 🛕 (Reference Engineered Truss Drawing) Do Not Erect Trusses Backwards

WALL SCHE	DULE
1st Floor Walls	
2nd Floor Walls	
Non-Bearing Walls	
Garage Walls Dropped	

			Products		
Γ	Net Qty	Plies	Product	Length	PlotID
Γ	3	3	1-3/4"x 14" LVL Kerto-S	13' 0"	FB1
	2	2	1-3/4"x 14" LVL Kerto-S	11' 0"	FB2

Nail Info	ormation	Co	nnec	tor Infor	mation	
Truss	Header	Supported Member	Qty	Manuf	Product	Sym
16d/3-1/2"	16d/3-1/2"	NA	14	USP	HUS410	
10d/3"	10d/3"	Varies	15	USP	MSH422	

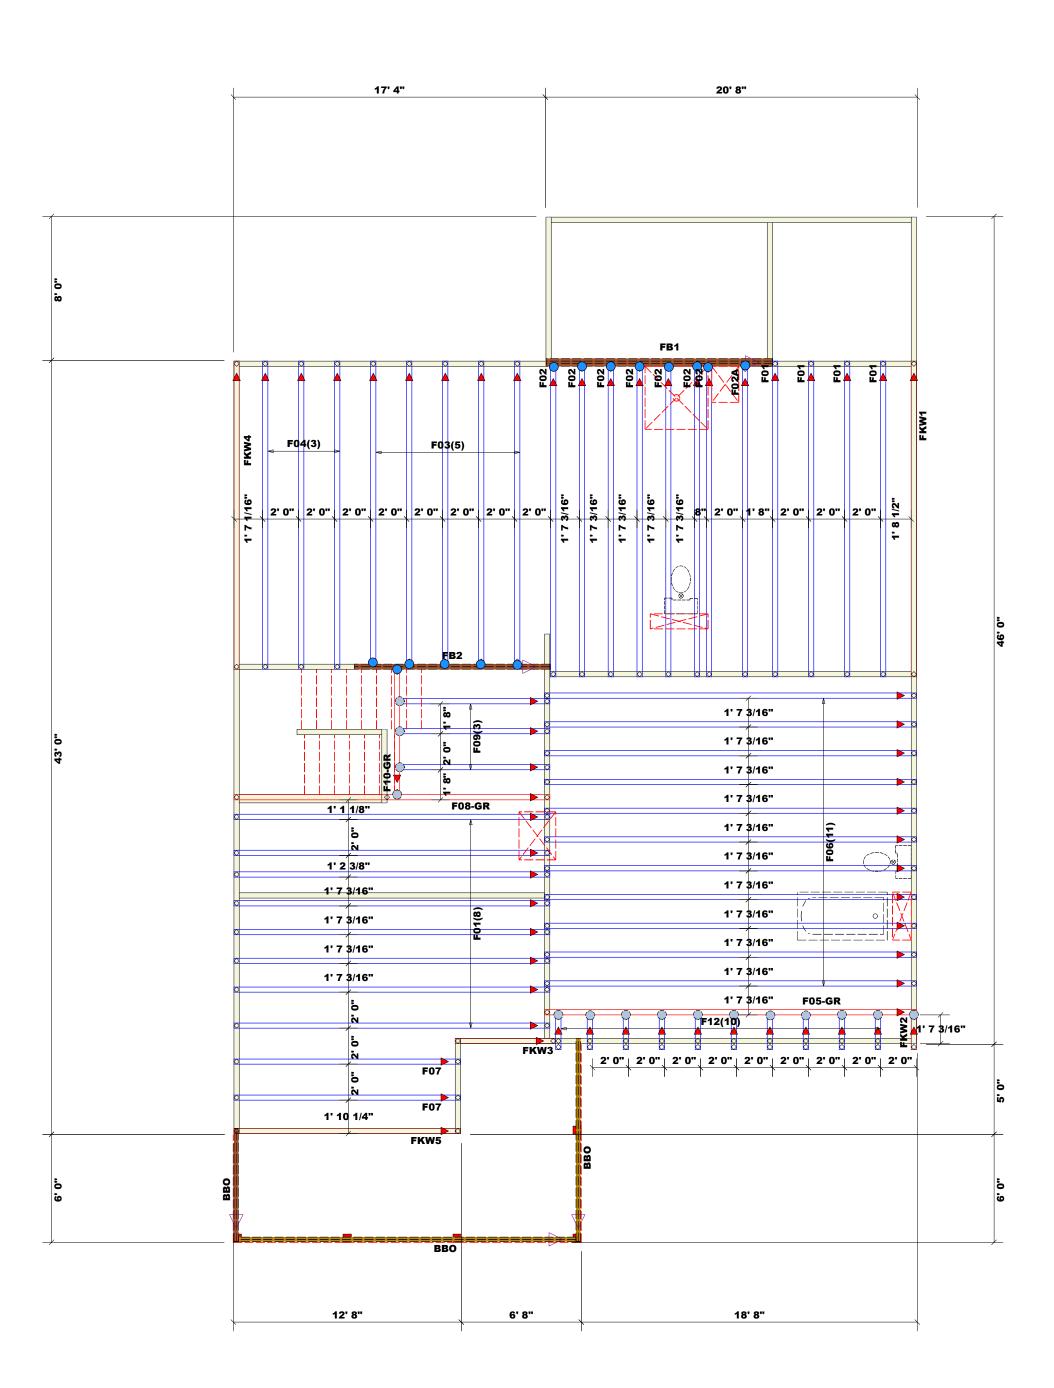

COMTECH **ROOF & FLOOR TRUSSES & BEAMS**

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

dearing reactions less than or equal to 3000# are eemed to comply with the prescriptive Code equirements. The contractor shall refer to the ttached Tables (derived from the prescriptive Code equirements) to determine the minimum foundation ize and number of wood studs required to support eactions greater than 3000# but not greater than 5000#. A registered design professional shall be etained to design the support system for any eaction that exceeds those specified in the attached ables. A registered design professional shall be etained to design the support system for all eactions that exceed 15000#.

Signature Johnnie Baggett

Johnnie Baggett

LOAD CHART FOR JACK STUDS

	(B	ASED	ON TABLES	5 R502.	.5(1) & (l	o))	
NUA	MBER C	OF JAC	K STUDS R HEADER/			A END O	F
END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER		END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER		END REACTION (UP TO)	REQ'D STUDS FOR (4) PLY HEADER
1700	1		2550	1		3400	1
3400	2		5100	2		6800	2
5100	3		7650	3		10200	3
6800	4		10200	4		13600	4
8500	5		12750	5		17000	5
10200	6		15300	6			
11900	7						
13600	8						
15300	9						

	CITY / CO.	CITY / CO. Lillington / Harnett
	ADDRESS	174 Duncan Creek Road
гry	MODEL	Floor
	DATE REV . 12/28/23	12/28/23
	DRAWN BY	DRAWN BY Johnnie Baggett
	SALES REP.	SALES REP. Paul Hawkins

English Count New Home Inc Quote# JOB NAME SEAL DATE QUOTE# BUILDER

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.
These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com