

HUS26	USP	8	NA	16d/3-1/2"	16d/3-1/2"
THD26-2	USP	1	NA	16d/3-1/2"	10d/3"

	Estir	mation	
Name	Selection	Formula	Calculation
Roof Area	1st Floor	Roof Area	3279.18
Roof Decking	1st Floor	Roof Decking	113

		BEAM LEGEND			
PlotID	Length	Product	Plies	Net Qty	Fab Type
GDH 9' FL (dropped)	13-00-00	1-3/4"x 11-7/8" LVL Kerto-S	2	2	FF
GDH 18' FL (dropped)	23-00-00	1-3/4"x 14" LVL Kerto-S	2	2	FF
PB1	18-00-00	2x10 SP No.2	2	2	FF
PB3	16-00-00	2x10 SP No.2	2	2	FF
PB2	6-00-00	2x10 SP No.2	2	2	FF

Truss Placement Plan SCALE: 1/4" = 1'0"

▲= Denotes Left End of Truss (Reference Engineered Truss Drawing)

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs. Reaction / # of Studs



Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

Lenny Norris

LOAD CHART FOR JACK STUDS

(BASED ON TABLES R502.5(1) & (b)) NUMBER OF JACK STUDS REQUIRED @ EA END OF

Lenny Norris Lenny Norris 303 SALESMAN DRAWN BY DATE REV. COUNTY


JOB NAME THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.con

Quote#

Sinclair (190320B) 3Car

Weaver Homes, Inc.

BUILDER

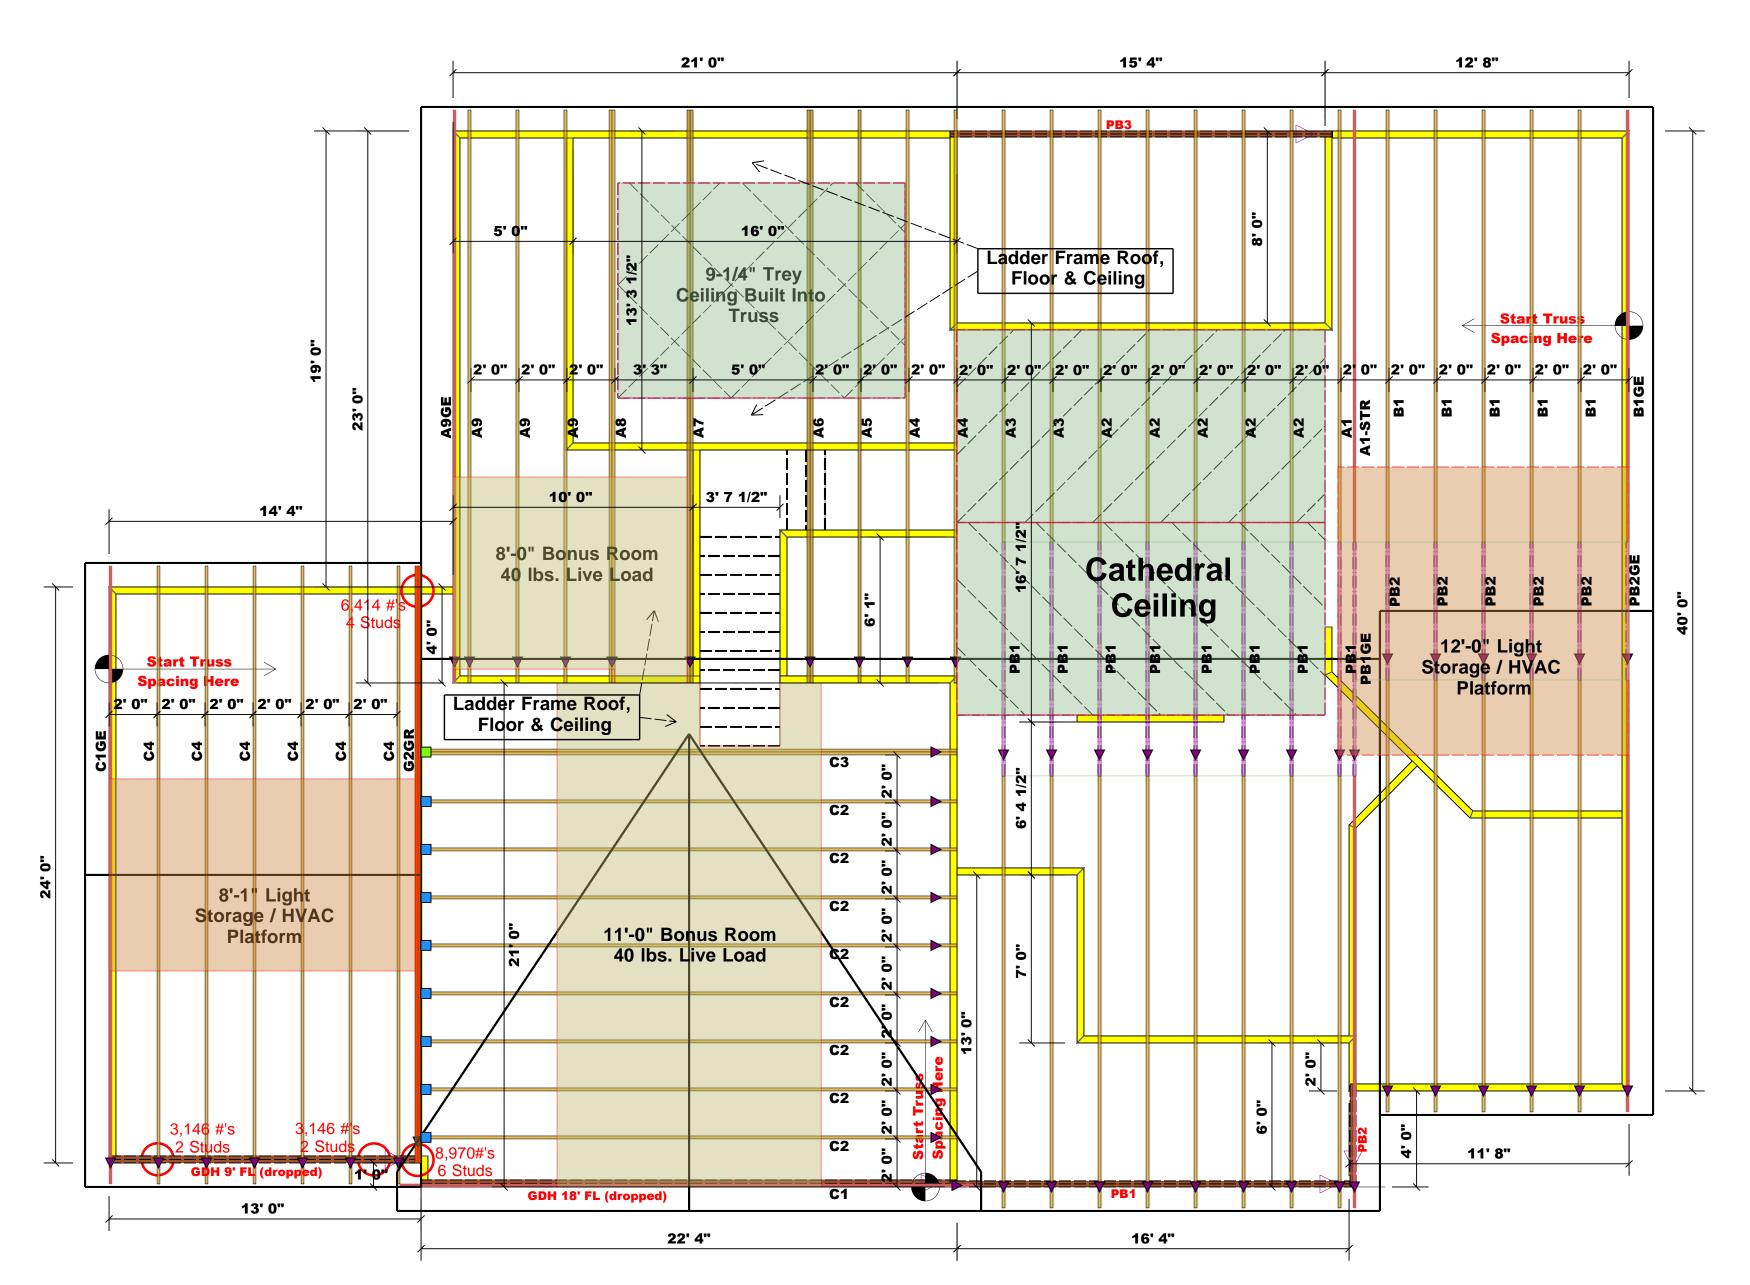

HUS26	USP	8	NA	16d/3-1/2"	16d/3-1/2"
THD26-2	USP	1	NA	16d/3-1/2"	10d/3"

	Estir	mation	
Name	Selection	Formula	Calculation
Roof Area	1st Floor	Roof Area	3279.18
Roof Decking	1st Floor	Roof Decking	113

		BEAM LEGEND			
PlotID	Length	Product	Plies	Net Qty	Fab Type
GDH 9' FL (dropped)	13' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2	FF
GDH 18' FL (dropped)	23' 0"	1-3/4"x 14" LVL Kerto-S	2	2	FF
PB1	18' 0"	2x10 SP No.2	2	2	FF
PB3	16' 0"	2x10 SP No.2	2	2	FF
PB2	6' 0"	2x10 SP No.2	2	2	FF

Truss Placement Plan SCALE: 1/4" = 1'0"

▲ = Denotes Left End of Truss (Reference Engineered Truss Drawing)

All Truss Reactions are Less than 3,000 lbs. Unless Noted Otherwise.

-- Denotes Reaction Greater than 3,000 lbs. Reaction / # of Studs

соттесн
ROOF & FLOOR
TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

Lenny Norris

LOAD CHART FOR JACK STUDS

(BASED ON TABLES R502.5(1) & (b))

No	NUI	MBER C	STUDS F HEADER/			A END	OF
3400 2 5100 2 6800 5100 3 7650 3 10200 6800 4 10200 4 13600 8500 5 12750 5 17000 10200 6 15300 6 11900 7 13600 8	END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER		END REACTION (UP TO)	400 34 IF3 4 OU
5100 3 7650 3 10200 6800 4 10200 4 13600 8500 5 12750 5 17000 10200 6 15300 6 11900 7 13600 8	1700	1	2550	1		3400	0
6800 4 10200 4 13600 8500 5 12750 5 17000 10200 6 15300 6 11900 7 13600 8	3400	2	5100	2		6800	0
8500 5 12750 5 17000 10200 6 15300 6 11900 7 13600 8	5100	3	7650	3		1020	0
10200 6 15300 6 11900 7 13600 8	6800	4	10200	4		1360	0
11900 7 13600 8	8500	5	12750	5		1700	0
13600 8	10200	6	15300	6			
	11900	7					
15300 a	13600	8					
	15300	9					
		1			- 1		

COUNTY	Harnett
ADDRESS	303 Thistle Court
MODEL	ROOF
DATE REV. //	//
DRAWN BY	DRAWN BY Lenny Norris
SALESMAN	SALESMAN Lenny Norris

Sinclair (190320B) 3Car Weaver Homes, Inc. Quote# JOB NAME SEAL DATE BUILDER QUOTE;

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.