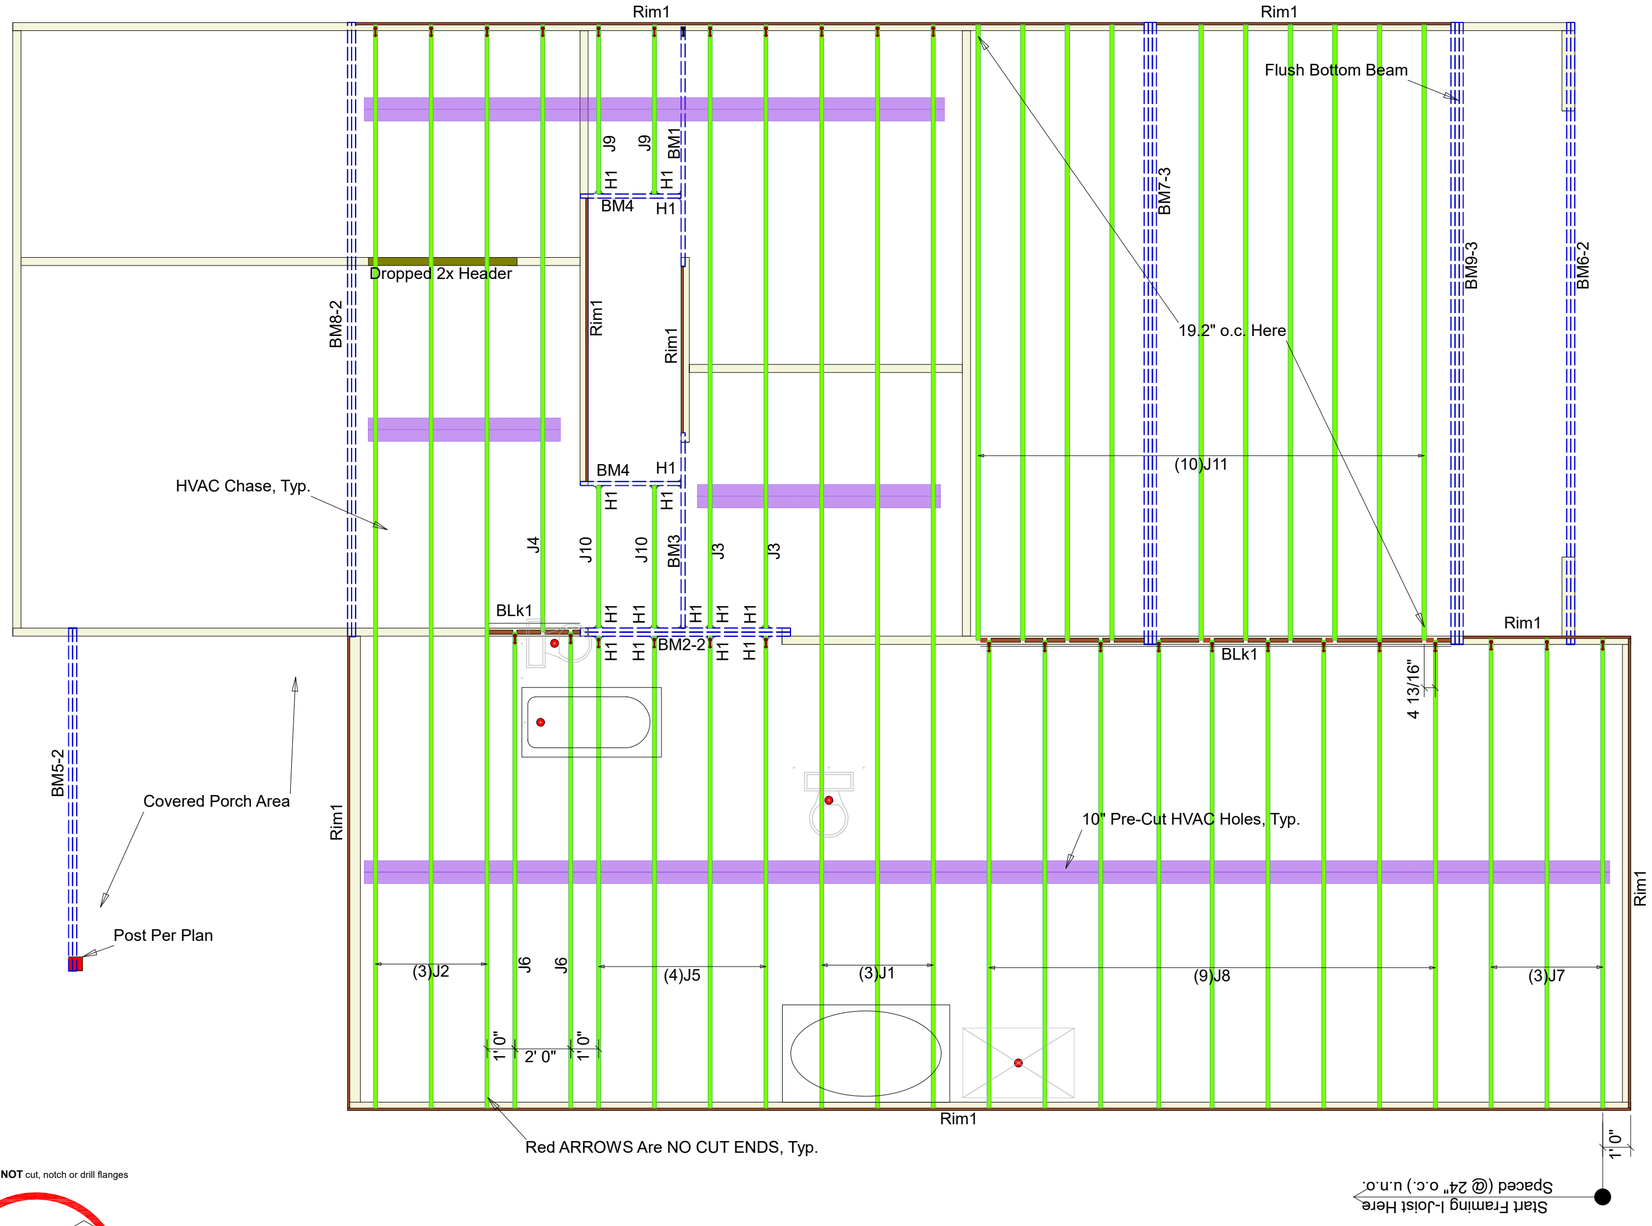

General Notes:

1.) "READ" Boise Installation Guide before installation of products.
2.) All, I-Joist, LVL beams, and Rim Board must be field cut to length.
3.) Contractor must verify and approve the material list.
4.) I-Joist may be moved 3" out of its own o.c. spacing, up to 19.2" o.c., to allow for plumbing drops.
5.) This layout, is a placement plan and, was designed in accordance with the original design of the structure (unless otherwise noted). See original plans for additional structural notes.
6.) Ceramic tile floors should be supported per APA standards. Additional joists may be required.
7.) HVAC & PLUMBER, "Review" Boise Installation Guide (Joist Hole Location & Sizing) Chart "BEFORE" cutting the I-joist product.
8.) "Blocking", are Random Length I-joist, Labeled as such.

I-Joist Plot ID # & Length on Top of Flange

Boise Cascade

84 LUMBER Build on what we know.™

200 Emmett Drive, Dunn, N.C. 28334 (910) 892 + 8400

DN01 **DO NOT** cut, notch or drill flanges

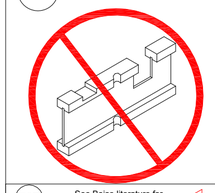

2ND FLOOR LAYOUT

Connector Summary				
PlotID	Qty	Manuf	Product	Flange
H1	15	Simpson	IUS 1.81/14	None

Products				
PlotID	Length	Product	Plies	Net Qty
J1	39' 0"	14" BCI® 4500s-1.8	1	3
J2	39' 0"	14" BCI® 4500s-1.8	1	3
J3	22' 0"	14" BCI® 4500s-1.8	1	2
J4	22' 0"	14" BCI® 4500s-1.8	1	1
J5	17' 4"	14" BCI® 4500s-1.8	1	4
J6	17' 4"	14" BCI® 4500s-1.8	1	2
J7	17' 0"	14" BCI® 4500s-1.8	1	3
J8	17' 0"	14" BCI® 4500s-1.8	1	9
J9	6' 4"	14" BCI® 4500s-1.8	1	2
J10	5' 4"	14" BCI® 4500s-1.8	1	2
J11	22' 4"	14" BCI® 5000s-1.8	1	10
BM1	9' 0"	14" BCI® 4500s-1.8	1	1
BM2-2	7' 8"	14" BCI® 4500s-1.8	2	2
BM3	7' 0"	14" BCI® 4500s-1.8	1	1
BM4	3' 8"	14" BCI® 4500s-1.8	1	2
BM5-2	14' 0"	1-3/4" x 9-1/4" VERSA-LAM® 2.0 3100 SP	2	2
BM6-2	24' 0"	1-3/4" x 11-7/8" VERSA-LAM® 2.0 3100 SP	2	2
BM7-3	24' 0"	1-3/4" x 14" VERSA-LAM® 2.0 3100 SP	3	3
BM8-2	22' 0"	1-3/4" x 14" VERSA-LAM® 2.0 3100 SP	2	2
BM9-3	24' 0"	1-3/4" x 16" VERSA-LAM® 2.0 3100 SP	3	3
Rim1	12' 0"	1" x 14" BC RIM BOARD OSB	1	12
BLk1	18' 0"	14" BCI® 4500s-1.8	1	1

Caviness Land Development

CL- 3090 CP
GOR

Scale: NTS

Date: 03.09.2017

By: J. Ciferni

DWG: 11558

Sheet: 1 of 1
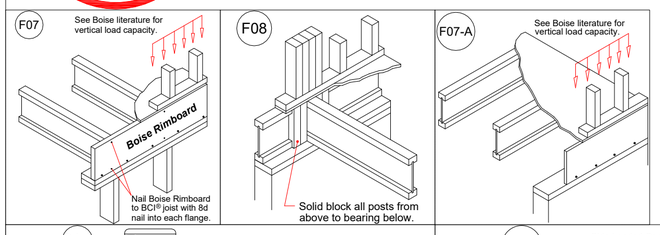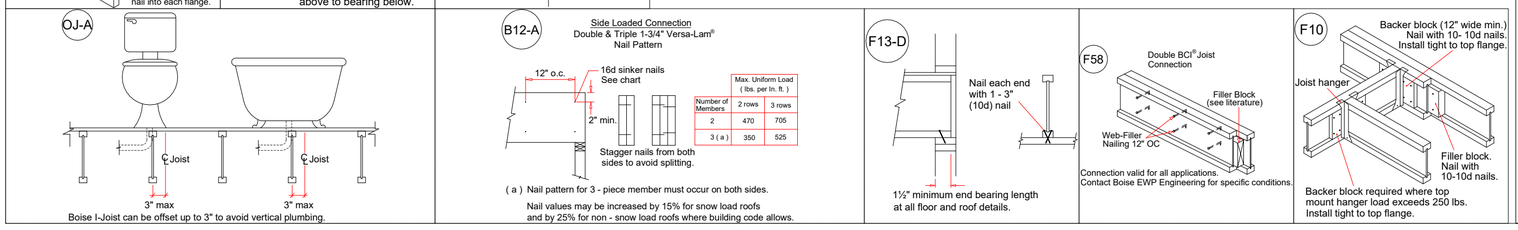
Note: Refer to current Boise Cascade Installation Guide for details not shown.