



HARNETT COUNTY
NORTH CAROLINA

HARNETT COUNTY DEPARTMENT OF PUBLIC HEALTH
Well Abandonment Permit

Department of Environmental Health

www.harnett.org

Permit Number: _____ Application Number: _____ Applicant Name: *Michael Hemby*

Harnett County Government Complex
307 W. Cornelius Harnett Boulevard
Lillington, NC 27546

Address: *2251 Penridge Rd Angier N.C.*

ph: 910-893-7547
fax: 910-893-9371

Type of Well: _____ Total Dept: *18'* Diameter: *35"* Grouted: _____ Static Water Level: *16'*


Directions to Site: *Hwy 210 to SR 1505 Penridge Rd + 1/2 Home on left Before Intersection*

Agent of the State: *James E. Marshant* Date: *4-15-21*

Abandonment Procedure: Abandonment Procedure: 1. Remove all plumbing or piping into the well, along with any obstructions inside the well; 2. Remove as much of the well tile casing a possible, but no less than to a depth of three feet below land surface; 3. remove all soil or other subsurface material present down to the top of the remaining well casing, and extending to a width of at least 12 inches outside of the well casing on all sides; 4. Using 5 oz. of hypochlorite solution (such as HTH), disinfect the well in accordance with 15A NCAC 2C .0111 of this Subchapter. Do not use a common commercial household liquid bleach, as this is too weak a solution to ensure proper disinfection; 5. Fill the well up to the top of the remaining casing with cement grout, concrete grout, bentonite grout, dry clay, or material excavated during drilling of the well and then compacted in place; 6. Pour a one foot thick concrete grout or cement grout plug that fills the entire excavated area about the top of the casing, including the area extending on all sided of the casing out to a width of at least 12 inches on all sides; 7. Complete the abandonment process by filling the remainder of the well above the concrete or cement plug with additional concrete grout, cement grout, or soil.

Note: Contact Harnett County Environmental Health for appointment prior to beginning of well abandonment procedure.

Well must be abandoned by a Certified North Carolina well driller/contractor.

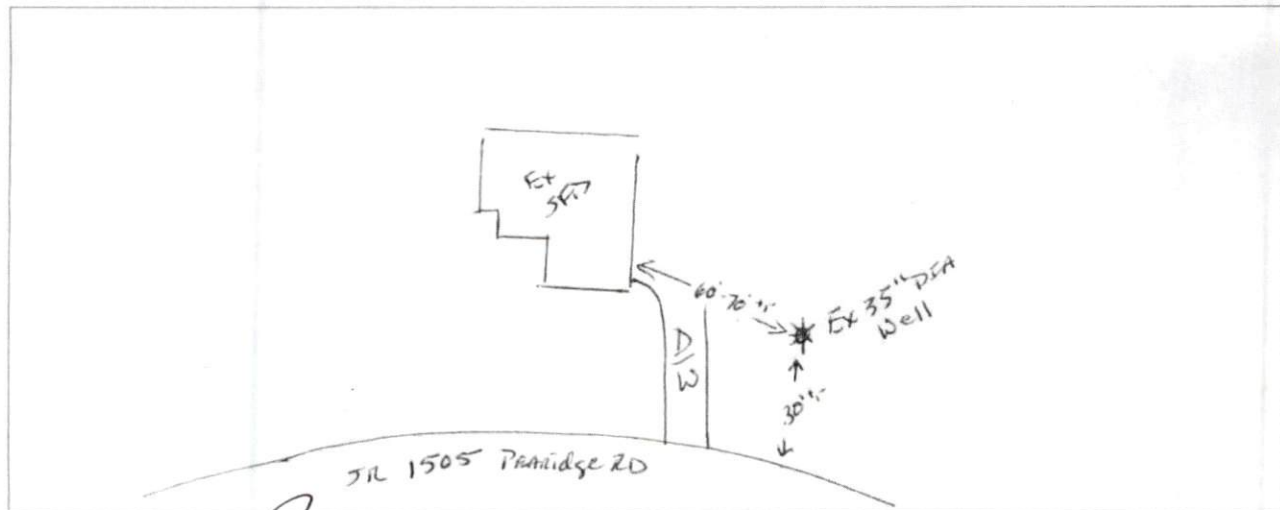

Michael Hemby
Property Owner's or Owners Legal Representative Signature Required

5/10/21
Date