



\* Overall sign depth may vary due to support size required by engineering.

First Choice Community Health - Anderson Creek Family Dentistry

VERSION #: z0927242



6750 Overhills Road #8872  
Spring Lake NC 28390

Scope of Work:

Electronic Message Center (EMC):

- 10mm, 96 x 224, 3'-0" x 7'-0", Cellular, Double
- (2) USMB-G3

Fabrication:

Standard ID Cabinet

- Aluminum stick/extrusion frame, skin painted, Routed Aluminum face, saddle mount

Vent Boxes

- (2) .063" aluminum, painted, routed holes for venting per plan

Monument:

- Foamcraft monument per plan

Structural:

- Steel tube per drawings
- New Concrete Caisson, 2,500 PSI

Installation:





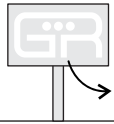



- Receive and inspect sign from GRS
- Remove existing sign
- Dig footer, pour concrete, set pole
- Mount and attach sign per drawings
- Connect sign to existing power (to be ran by others)
- Mount and connect Cellular antennas

\*\* Take completion photos.\*\*  
\*\* Remove and/or level out any excess spoils.\*\*  
\*\* Leave a clean job site.\*\*

Description of Work

Overview:

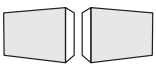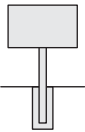


					120 volts 18 amps			
Double Sided	10mm	New Footer	GRS Install	GRS Remove Existing Sign	Dedicated Circuit(s)	Cellular Modem	Full Depth Cabinet	Routed Graphic

6.99" [ **FIRST CHOICE**

2.77" [ **COMMUNITY HEALTH CENTERS**

2.72" [ **"YOUR LINK TO QUALITY CARE"**

2.43" [ **ANDERSON CREEK FAMILY DENTISTRY**

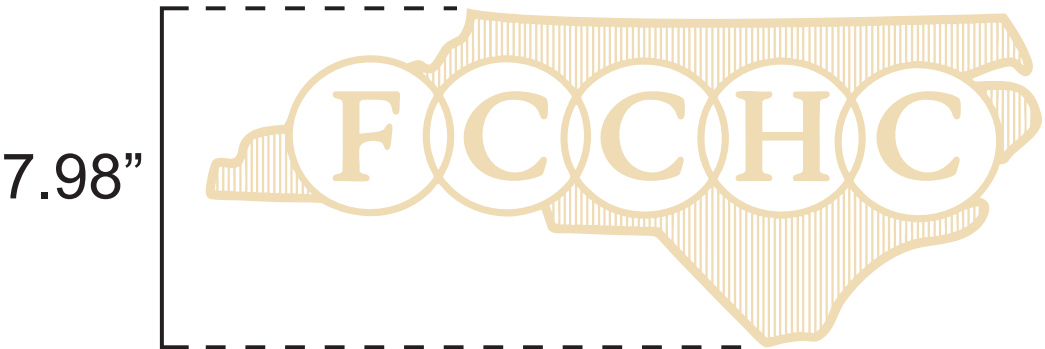




Colors used:

- Cabinet PMS Color: **PANTONE 350 C**  
Powdercoat Color RAL 6005
- Letters PMS Color: **PANTONE 7506 C**  
Powdercoat Color RAL 1015
- Topper PMS Color: **PANTONE 125 C**  
Powdercoat Color RAL
- Grout PMS Color: **PANTONE 7582 C**  
Powdercoat Color RAL


Signed Art:




Client is responsible for ensuring that the proof is correct in all areas. Double-check spelling, grammar, layout and design before approving artwork. If a proof containing errors is approved by client, the client is responsible for payment of original cost as well as corrections, revisions, and re-makes. This custom artwork is not intended to provide an exact match between ink, vinyl, paint or EMC color. Brickwork, masonry and landscaping is not included in the proposal unless otherwise specifically stated. EMC images shown are simulated. Sign is designed to be illuminated at all times. Sketches are based off of this premise. This is a custom made product, built by hand for people by people. Small blemishes/imperfections may occur and be expected with hand made products. Industry standard is to view this product from a minimum distance of 10 feet to determine quality acceptability.

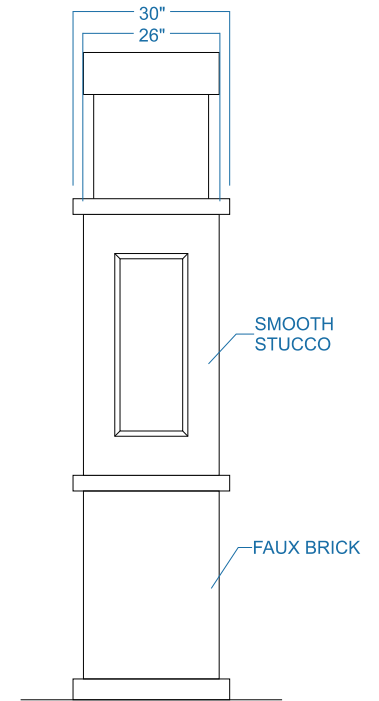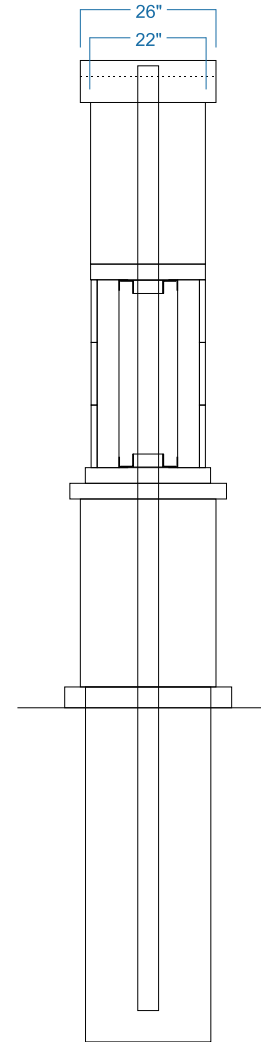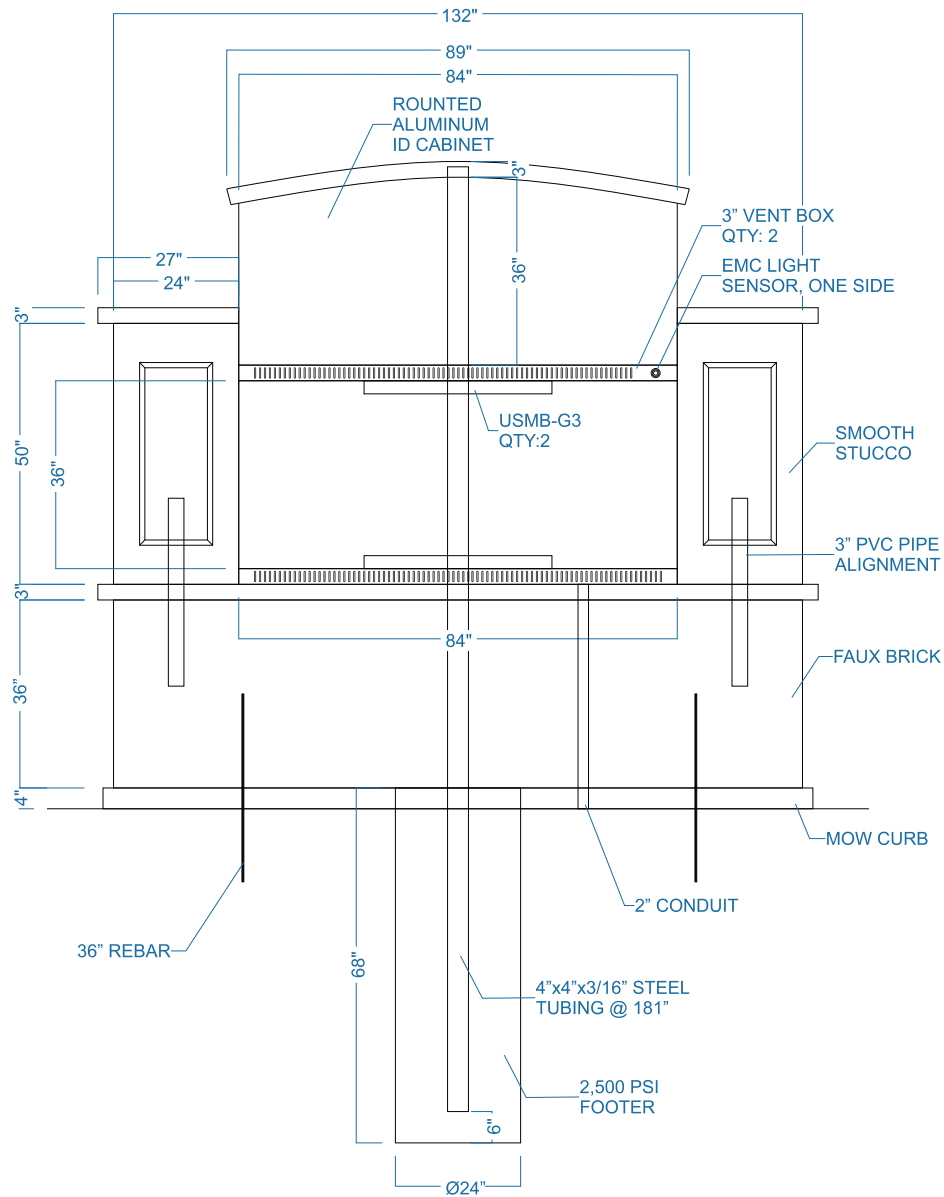


## Notes:





Double  
Sided




Full Depth  
Cabinet




New  
Footer

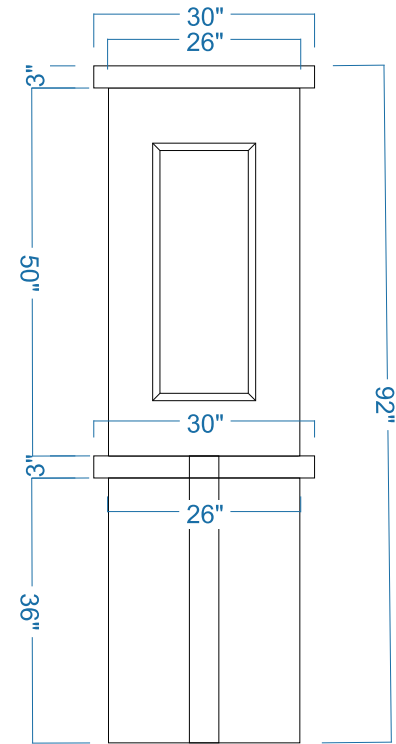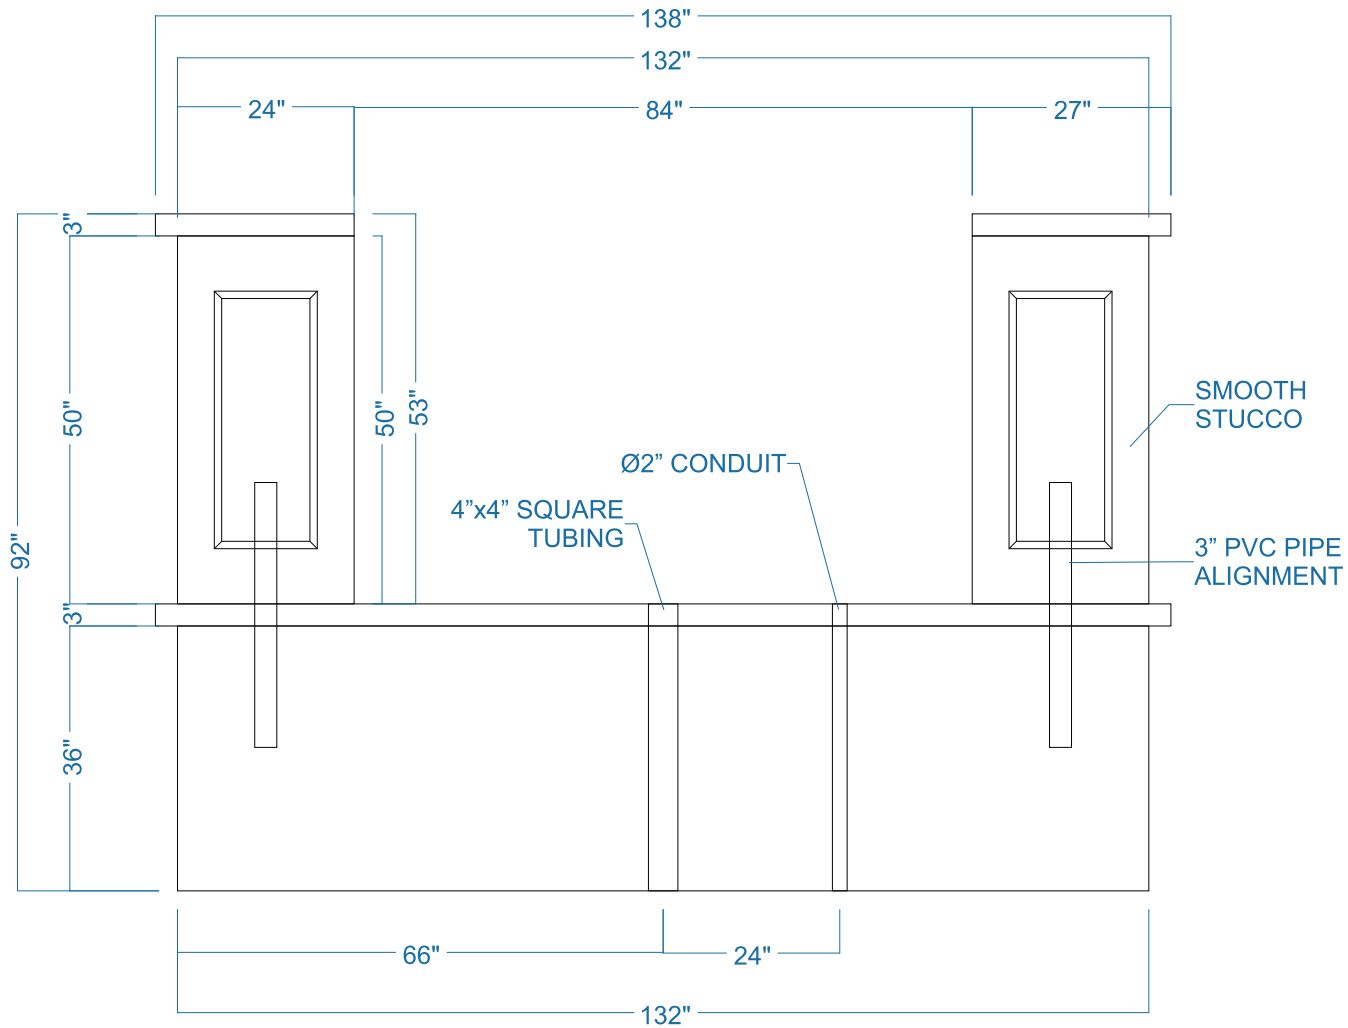


## Notes:



Double  
Sided





Full Depth  
Cabinet



New  
Footer

\*\*\*All ID Cabinet electrical components to be wide range power to serve up to 240 volts\*\*\*

## LIGHT SENSOR & DISCONNECT

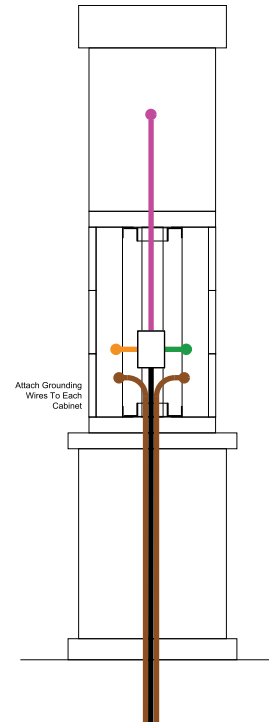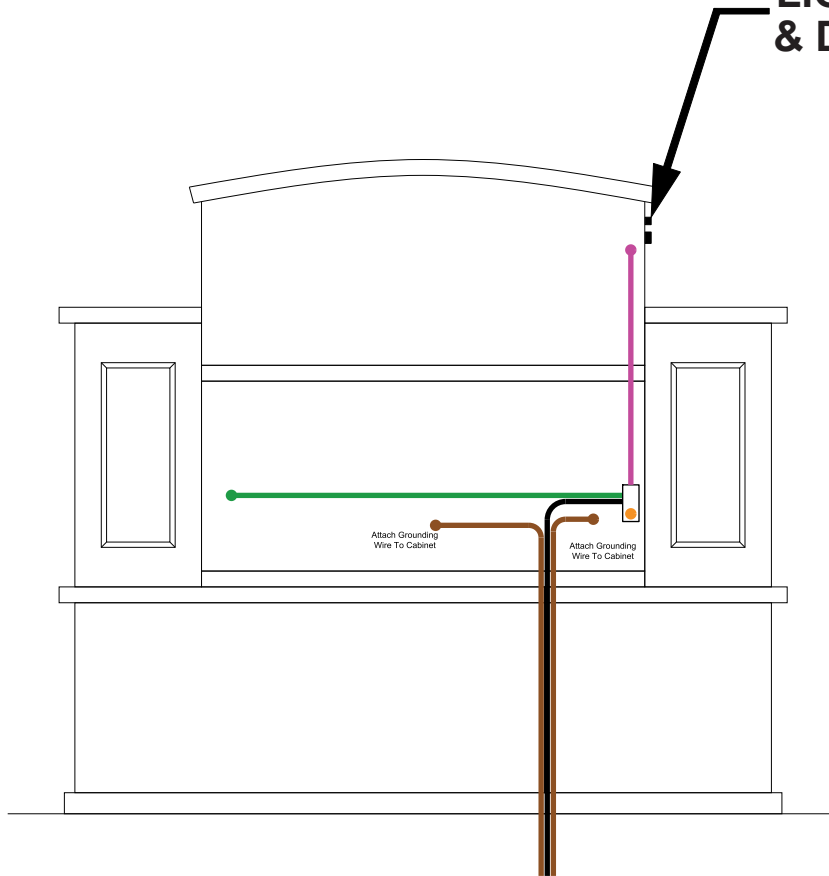

**120** volts  
**18** amps

Dedicated  
Circuit(s)

National Electric Code requires that lines not exceed 80% load of any one circuit.

LED  
Installation  
Manual



### Key:

- 6GA. COPPER AND 1/2" ROD X6'
- ID CABINET POWER WHIP
- PRIMARY EMC WHIP
- SECONDARY EMC WHIP
- CLIENT PROVIDED PRIMARY

GRS REQUIRES THAT THE SIGN OPERATE ON AT LEAST 1 DEDICATED CIRCUIT AND RECOMMENDS 1 CIRCUIT PER L.E.D. DISPLAY. WARRANTY REQUIRES EACH L.E.D. DISPLAY TO HAVE A MINIMUM 1/2" COPPER, IN-EARTH GROUND ROD WITH CONTINUOUS 6 GAUGE COPPER WIRE, 6' LONG LOCATED 8 FEET FROM THE BASE OF THE SIGN.



Cellular  
Modem

Visit  
[resource.  
impactledsigns.com](http://resource.impactledsigns.com)  
for more details





Notes:



Sign Location: