STRING CALCULATION						
String # No of Modules Power Imax Voc Vmpp Vrise (<= 2%)						
1	12	4,920 W	18.15 AC	<30	240V AC	1.47+0.38 = 0.85
2	11	4,510 W	16.63 AC	<30	240V AC	1.35+0.35 = 1.70
3	11	4,510 W	16.63 AC	<30	240V AC	1.37+0.37 = 1.74
4 11 4,510 W 16.63 AC <30 240V AC 1.30+0.34 = 1.64						

NEC Code (2020) and UL Standard Refrences					
Rapid Shut Down	NEC 690.12 (A-D), UL1741	Grounding	NEC Article 250.30(A)		
Disconnecting Means	NEC 690.13	Conduit Fill	NEC Table C.9, 310.15(B)(3)(a)		
Feeder Sizing	NEC Table 310, 15(B)(16, 17)	Interconnection	NEC 705.12		
Over current Protection	NEC 690.9				

Service Side Work: Power Drop Required

80A BREAKER CONNECTION

INSIDE THE IQ CONTROLLER 3

FROM UTILITY

Utility

Meter

IQ Controller 3

80A/

NFT

(3)

200A/2P

 $\circ \circ$

MAIN LOAD PANEL

#10 Green Cu

#8 Green Cu

Factory Installed

Quad Breaker

(20A & 40A)

, 2P

0 0

RSD

Enphase Rapid

Shut down switch

Harnett

100/80AF AC DISCONNECT

IQ Battery

5p (3)

4 x #12 THHN Cu

3 x #6 THHN Cu

Enphase Control Cable

(4 conductors) Lead Wire 18AWG, PVC

Extruded

3/4" EMT

3/4" EMT

3/06/2024

REV1

IQ COMBINER 4

20A/2P 0 0

20A/2P 0 0

15A/2P 0 0

20A/2P 0 0

20A/2P 00

Communication

Kit 2

IQ Battery

5p (1)

USB – A to USB – C

wire

IJ.Box

Gerald Rhodes

2923 Highway 87 N Sanford NC 27332

Customer Signature:

Sheet Name:

Electrical One Line Diagram

JOB NUMBER:

24-66-GR

Date:	Revision:
02/20/2024	A
Sheet Size:	Sheet Number:
ANSI C 17" X 22"	PV1

5112 Departure Drive, Raleigh NC 27616 O: 919.948.6474 E: info@8msolar.com **Customer Information:**

B.B RATING: 200A M.B RATING: 200A #Wire Conduit Size **Ground Wire** Sr.No Amperage • Grounding will be done via Pegasus grounding lugs and 3 x #4 THHN Cu 1" EMT 80 1 #8 Green Cu mid-clamps to ensure the rail and panels are continuously grounded. 2 3 x #3/0 THHN Cu 2" PVC 200 • Rapid Shutdown is included in the Micro Inverters, refer 3 3 x #3/0 THHN Cu 2" PVC #6 Green Cu 200 to Micro Inverter attached datasheets.

4

5

6

7

IQ Battery

5p (2)

• System Size: 18,450W DC

410W

290VA

String 2

String 3

String 4

ENPHASE IQ8PLUS-72-2-US MICROINVERTERS

RAPID SHUTDOWN EQUIPPED


- Battery Total Energy: 15.0 kWh
- (45) ENPHASE IQ8PLUS-72-2-US MICROINVERTERS
- Inverter Output: 1.21A max @ 240 VAC (each microinverter)
- 290 VA AC output max (each micro inverter)
- 13.05 kVA AC output max


• The load center / disconnect will be visible, lockable accessible to utility linesmen and will be properly labelled as per NEC requirements. It will be located on the exterior wall of the building, next to the utility meter.

CERTIFIED PV Installation Professional Ali Buttar

16

60

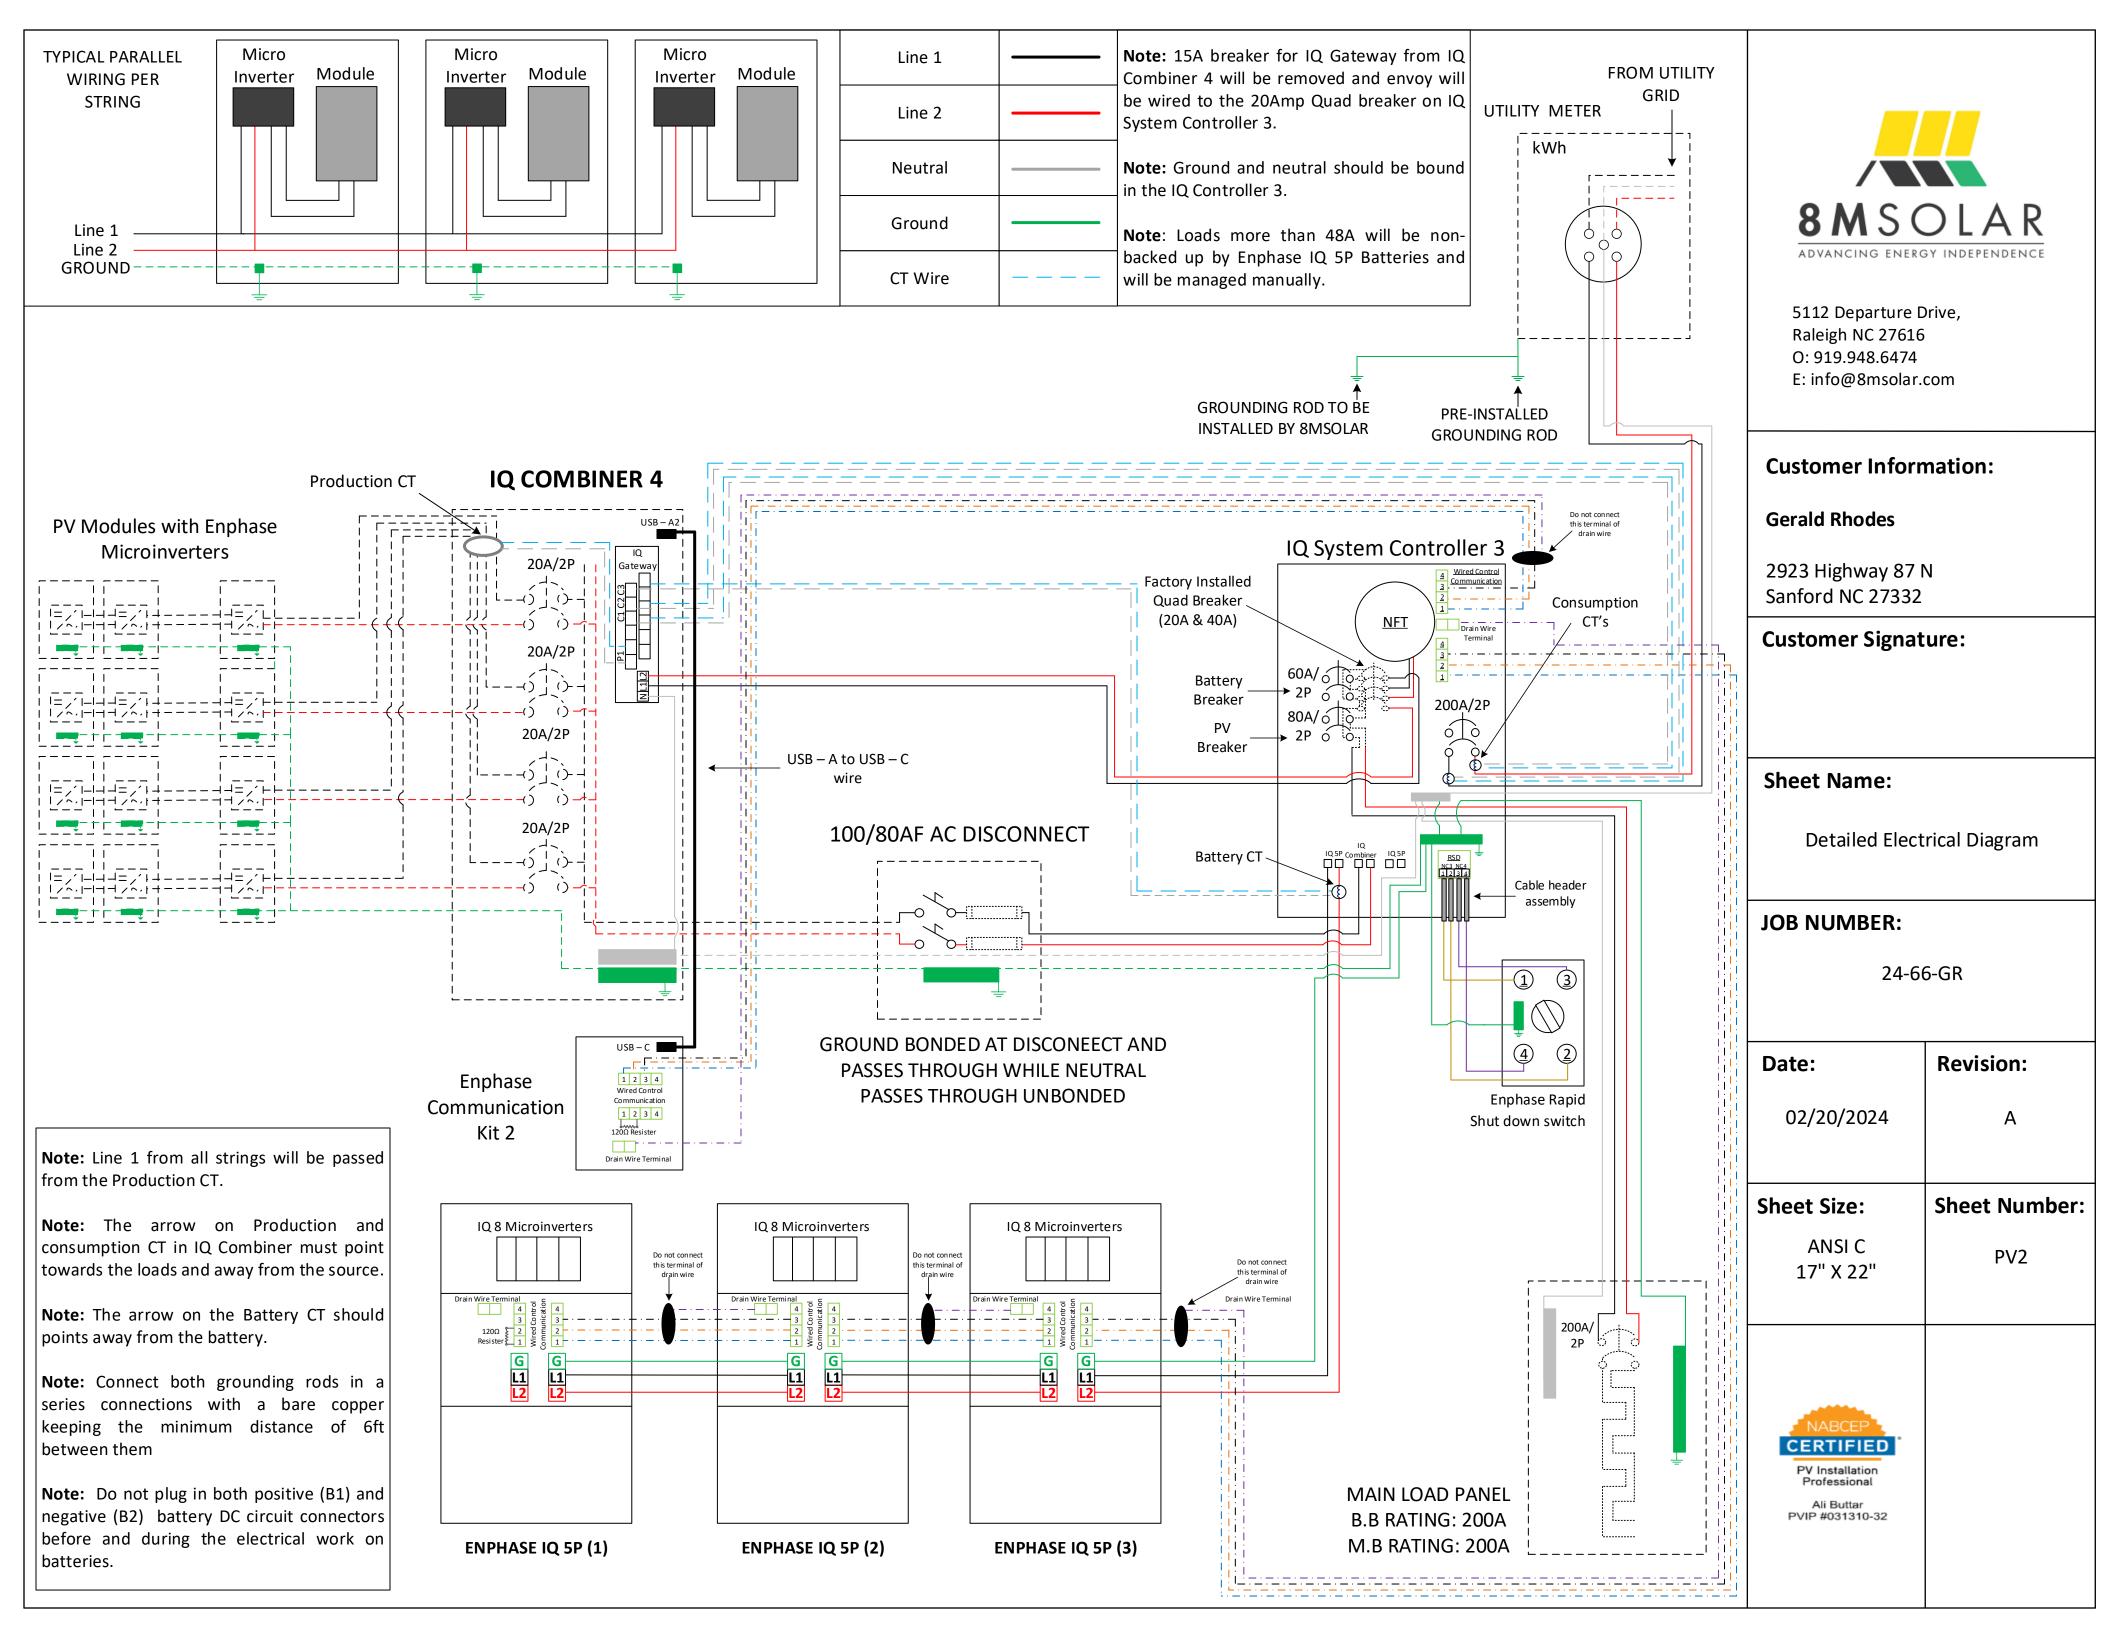

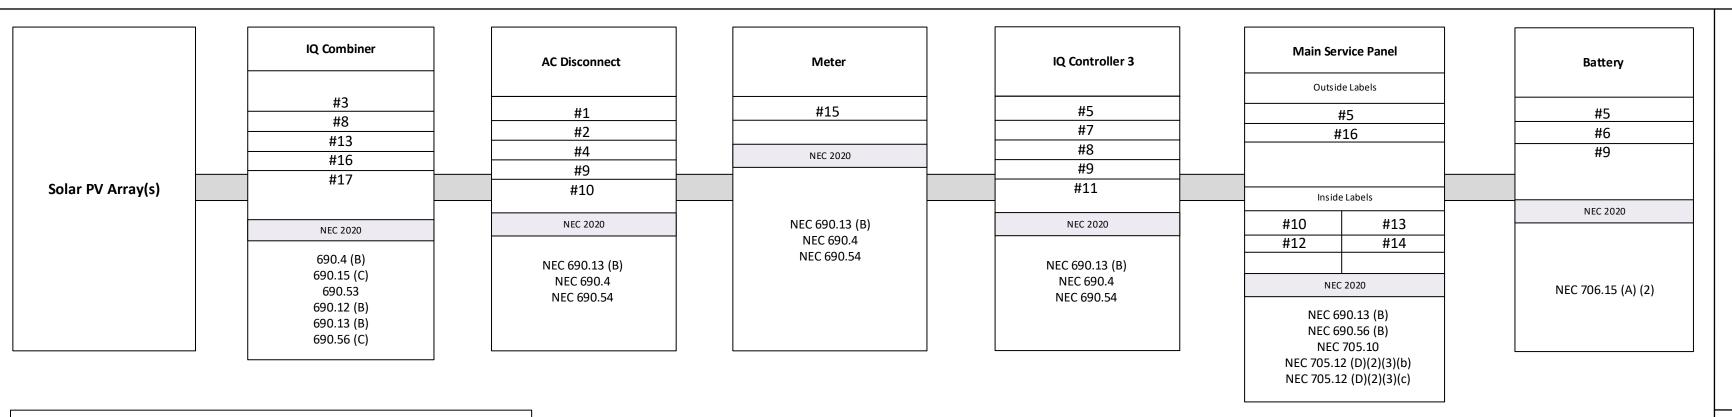

8MSOLAR

5112 Departure Drive, Raleigh NC 27616 0: 919.948.6474 E: info@8msolar.com

LABELING AND WARNING **SIGNS: NEC 2020**

A. PURPOSE

PROVIDE EMERGENCY RESPONDERS WITH APPROPRIATE WARNING AND GUIDANCE WITH RESPECT TO ISOLATING THE SOLAR ELECTRIC SYSTEM. THIS CAN FACILITATE IDENTIFYING ENERGIZED ELECTRICAL LINES THAT CONNECT THE SOLAR PANELS TO THE INVERTER, AS SHOULD NOT BE CUT WHEN VENTING FOR SMOKE REMOVAL.

B. MAIN SERVICE DISCONNECT:

- 1. RESIDENTIAL BUILDINGS- THE MARKING MAY BE PLACED WITHIN THE MAIN SERVICE DISCONNECT. THE MARKING SHALL BE PLACED ON THE OUTSIDE COVER IF THE MAIN SERVICE DISCONNECT IS OPERABLE WITH THE SERVICE PANEL CLOSED.
- 2. COMMERCIAL BUILDINGS- THE MARKINGS SHALL BE PLACED ADJACENT TO THE MAIN SERVICE DISCONNECTCLEARLY VISIBLE FROM THE LOCATION WHERE THE LEVER IS OPERATED
- 3. MARKINGS, VERBIAGE, FORMAT AND TYPE OF MATERIAL
 - a. VERBIAGE: CAUTION; SOLAR ELECTRIC SYSTEM CONNECTED b. FORMAT:
 - (1) WHITE LETTERING ON A RED BACKGROUND (2) MINIMUM 3/8 INCH LETTER HEIGHT
 - (3) ALL LETTERS SHALL BE CAPITALIZED
 - (4) ARIAL OR SIMILAR FONT, NON-BOLD

c. MATERIAL:

(1) REFLECTIVE, WEATHER RESISTANT MATERIAL SUITABLE FOR THE ENVIRONMENT (USE UL-969) AS STANDARD FOR WEATHER RATING): DURABLE ADHESIVE MATERIALS MEET THIS REQUIREMENT.

C. MARKING REQUIREMENTS ON CONDUIT, RACEWAYS, ENCLOSURES, CABLE ASSEMBLIES, COMBINERS AND JUNCTION BOXES;

- 1. MARKING: PLACEMENT, VERBIAGE, FORMAT AND TYPE OF MATERIAL.
 - a. PLACEMENT: MARKINGS SHALL BE PLACED EVERY 10 (TEN) FEET ON ALL INTERIOR AND EXTERIOR DC CONDUITS, RACEWAYS, ENCLOSURES AND CABLE ASSEMBLIES, AT TURNS ABOVE AND/OR BELOW PENETRATIONS, ALL COMBINERS AND JUNCTION BOXES.
 - b. VERBIAGE: CAUTION SOLAR CIRCUIT c. THE FORMAT AND TYPE OF MATERIAL SHALL ADHERE TO
- D. INVERTERS ARE NOT REQUIRED TO HAVE CAUTION MARKINGS

SECTION B-3.B & C ABOVE



RAPID SHUTDOWN

SWITCH FOR

SOLAR PV SYSTEM

#3 PHOTOVOLTIVC POWER SOURCE

OPERATING AC VOLTAGE

MAXIMUN OPERATING

AC DISCONNECT

PHOTOVOLTAIC SYSTEM **POWER SOURCE**

RATED AC **54.45** AMPS

NOMINAL OPERATING AC VOLTAGE 240 VOLTS

AC OUTPUT CURRENT

#2

#4


#5

#6 **BATTERY**

MAIN BATTERY

SYSTEM DISCONNECT

#12 **WARNING** TURN OFF PHOTOVOLTAIC AC DISCONNECT PRIOR TO **WORKING INSIDE PANEL**

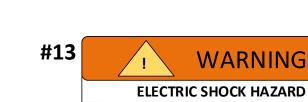

ELECTRIC SHOCK HAZARD TERMINAL ON THE LINE AND LOAD SIDES MAY BE ENERGIZED IN THE OPEN **POSITION**



#7

#9 SERIVCE DISCONNECT LOCATED IN THE IQ CONTROLLER 3

#10 **BATTERY DISCONNECT LOCATED** IN THE IQ CONTROLLER 3

WARNING

SOLAR ELECTRIC CIRCUIT BREAKER IS

BACKFEED

SOLAR AC DISCONNECT LOCATED AT SOUTH SIDE WALL OF THE HOUSE BESIDE THE **UTILITY METER**

#11

240

54.45



#14

WARNING

POWER SOURCE OUTPUT CONNECTION DO NOT RELOCATE THIS **OVERCURRENT DEVICE**

#15 **WARNING**

> THIS SERVICE METER IS ALSO SERVED BY A PHOTOVOLTAIC SYSTEM

#16 **SOLAR PV SYSTEM EQUIPPED WITH** RAPID SHUTDOWN

> TURN RAPID SHUTDOWN SWITCH TO THE"OFF" POSITION TO SHUT DOWN PV SYSTEM AND REDUCE SHOCK HAZARD IN THE ARRAY

#17 PHOTOVOLTAIC SYSTEM COMBINER PANEL DO NOT ADD LOADS

Customer Information:

Gerald Rhodes

2923 Highway 87 N Sanford NC 27332

Customer Signature:

Sheet Name:

PV Labels


JOB NUMBER:

24-66-GR

Revision: Date: 02/20/2024 **Sheet Number: Sheet Size:** ANSI C PV3 17" X 22"



ROOF DESCRIPTION				MODULE DIMENSIONS	Daile and Calines - DCD DO4 (DLACK)	Doof Attack mount of Colours at
ROOF	PITCH	AZIMUTH	NO. OF MODULES	40.5 in ↓	Rails and Splices : PSR-B84 (BLACK)	Roof Attachment : S5 SolarFoot
А	22°	258°	45	73.4 in.	Rafter Spacing: 24 in	There is an exposed fastened 9" AG panel metal roof
					Attachment Span: 4ft	The roof is located in 110mph wind zone

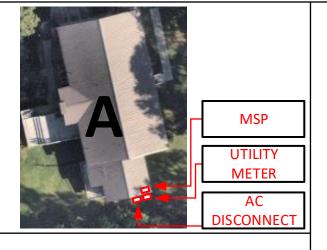



5112 Departure Drive, Raleigh NC 27616 O: 919.948.6474 E: info@8msolar.com

Customer Information:

Gerald Rhodes

2923 Highway 87 N Sanford NC 27332

Customer Signature:

Sheet Name:

Bill of Material

JOB NUMBER:

24-66-GR

Date:	Revision:
02/20/2024	А
Sheet Size:	Sheet Number
ANSI C 17" X 22"	PV4
NABCEP CERTIFIED *	
PV Installation Professional	

Ali Buttar

ELECTRICAL ITEMS

- 01 x COMMS-KIT-02: Enphase Communication Kit 2
- 01 x SC200D111C240US01: IQ System Controller 3
- 03 x IQBATTERY-5P-1P-NA: IQ Battery 5P
- 01 x CTRL-SC3-NA-01: Enphase Control Cable (70 ft.)
- 01 x X-IQ-NA-HD-125A: Hold down kit for Eaton circuit breaker with screws
- 01 x BRK-200A-2P-240V: Main Breaker, 2-Pole, 200Amps(Eaton CSR2200N)
- 01 x BRK-60A-2P-240V: Circuit Breaker, 2 pole, 60A (Eaton BR260)
- 01 x BRK-80A-2P-240V: Circuit Breaker, 2 pole, 80A (Eaton BR 280)

PV LABELS				
Sr No Code Qty				
01	03-302	01		
02	02-316	02		
03	03-390	01		
04	03-306	01		
05	8M-001	05		
06	03-395	03		
07	03-304	01		
08	03-230	03		
09	8M-002	05		
10	8M-004	02		
11	05-342	01		
12	05-372	01		
13	05-215	04		
14	05-216	01		
15	07-359	01		
16	07-111	02		
17	03-355	01		
18	03-351	02		

BILL OF MATERIAL
SCALE: 1/8" - 1'







IQ Battery 5P

The IQ Battery 5P all-in-one AC-coupled system is powerful, reliable, simple, and safe. It has a total usable energy capacity of 5.0 kWh and includes six embedded grid-forming microinverters with a 3.84 kVA continuous power rating. It provides backup capability, and installers can quickly design the right system size to meet the customer needs.

Dimensions

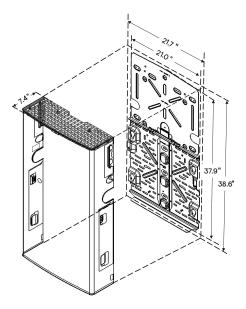

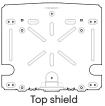

Bottom mounting bracket







LISTED



UL 9540A Certified

Powerful

- Provides 3.84 kVA continuous and 7.68 kVA peak power
- Doubles the available power per kWh of prior generations of IQ Battery
- Includes six embedded IQ8D-BAT Microinverters

Reliable

- 15-year limited warranty
- Cools passively with no moving parts or fans
- Uses wired communication for fast and consistent connection
- Updates software and firmware remotely

Simple

- · Fully integrated AC battery system
- · Installs and commissions easily
- Supports Backup, Self-Consumption, and time-of-use (TOU) modes
- Offers homeowners remote monitoring and control from the Enphase App
- · Field replaceable components

Safe

- Evaluated to UL 9540A for large scale fire testing and reduced separation distance as required in 2021 IRC R328.3.1, 2021 IFC 1207.1.5, and 2023 NFPA 855 15.3.1 and 9.1.5.1
- Uses lithium iron phosphate (LFP) chemistry for maximum safety and longevity

¹Follow all installation instructions when installing Enphase ESS.

IQ Battery 5P

WHAT'S IN THE BOX O Battery SP unit (BOS-TOZ-USDO-I-S) D cover and conduit cover IQ Battery SP unit (BOS-TOZ-USDO-I-S) D cover and conduit cover IQ Battery SP unit (BOS-TOZ-USDO-I-S) D cover and conduit cover IV	MODEL NUMBER	
Decident and conduit cover Decident mounting bracket and top shield Bettom mounting bracket for	IQBATTERY-5P-1P-NA	
Decement and conduit cover ID Battery SP cover with two conduit covers for the left and right sides of the unit Bottom mounting bracket and top shield Bottom mounting bracket for mounting the battery on the wall. One top shield is required for UL9540A 45 selemic screws Two M5 selemic screws for securing the battery unit on the bottom mounting bracket 45 Decemend of the cover of the CMI/EMC requirement 45 Decemend of the CMI/EMC requirement 50 Decemend of the CMI/EMC require	WHAT'S IN THE BOX	
Bottom mounting bracket and top shield Seatering screws Two MS seismic acrews for securing the battery on the wall. One top shield is required for UL9940A MS seismic acrews for securing the battery unit on the bottom mounting bracket Wis Discover grounding screws Two MS grounding acrews for securing the top shield on the bottom mounting bracket Wis Discover grounding screws Six cable tee Six cable tee for securing the location to the bottom mounting bracket Wis Discover grounding screws for the EM/EMC requirement State tee Six cable tee for securing field cables to the unit Control (CTRL) connector with resistor Spare CTRL connector without resistor for CTRL wiring Control (CTRL) connector with resistor for CTRL wiring Control (CTRL) connector without resistor for CTRL wiring Control (CTRL) connector with resistor for CTRL wiring Conformation instructions Control (CTRL) connector with resistor for CTRL wiring Conformation instructions Control (CTRL) connector	IQ Battery 5P unit	IQ Battery 5P unit (B05-T02-US00-1-3)
Two M5 seismic screws Two M4 grounding screws for securing the battery unit on the bottom mounting bracket Two M4 grounding screws for securing the top shield on the bottom mounting bracket Two M5 ID cover grounding screws for securing the top shield on the bottom mounting bracket Two M5 ID cover grounding screws for the EMI/EMC requirement Six cable ties Six cable ties for securing field cables to the unit Six cable ties Control (CTRL) connector Spare CTRL connector with resistor for CTRL wiring Control (CTRL) connector with resistor Spare CTRL connector with resistor for CTRL wiring Duck Install Guide (Olio) Olf for IO Battery unit installation instructions PITIONIAL ACCESSORIES AND REPLACEMENT PARTS ORD-BAT-RMA IO Bettery SP Battery unit for field replacement IO Battery SP Battery unit for field replacement IO Battery SP cover for field replacement IO Battery SP cover for field replacement. IO Battery SP cover for field replacement. IO Battery SP cover for field replacement. Includes one left-side and one right-side conduit plate SIGN-CP-086-O IO Battery SP Wall bracket for field replacement. Includes one bottom mounting bracket and one top shield SIGN-BMSNA-0490-O IO Battery SP MC filter board for field replacement IO Battery SP MC filter board for field replacement IO Battery SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field replacement IO Battery SP SP MC filter board for field	ID cover and conduit cover	IQ Battery 5P cover with two conduit covers for the left and right sides of the unit
Two M4 grounding screws Two M5 ID cover grounding screws for the EMI/EMC requirement Six cable ites Six cable ites of securing field cables to the unit Control (CTRL) connector Spare CTRL connector without resistor for CTRL wiring Control (CTRL) connector with resistor Spare CTRL connector without resistor for CTRL wiring Could install Guide (OIG) OIG for IO Battery unit installation instructions DIDIVIAL ACCESSORIES AND REPLACEMENT PARTS BIOS-RAT RIMA IOBS-BAT Microinverter for field replacement IOBS-CX-OSSO-O IO Battery SP Deterty unit for field replacement IOBS-CX-OSSO-O IO Battery SP Deterty unit for field replacement IOBS-CX-OSSO-O IOBSTERY-HNDL-S IOBSTERY-HNDL-S IOBSTERY-HNDL-S IOBSTERY-HNDL-S IOBSTERY-HNDL-S IOBSTERY-HNDL-S IOBSTERY-SP Wall bracket for field replacement IOBSTERY-SP Wall bracket for field replacement IOBSTERY-SP Wall bracket for field replacement IOBSTERY-SP Wall bracket for field replacement. Includes one left-side and one right-side conduit plate IOBSTERY-HNDL-S IOBSTERY-SP Wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel IOBSTERY-SP Wall bracket for field replacement IOBSTERY-SP WALL BRACKET WALL BRACKET WALL BRA	Bottom mounting bracket and top shield	Bottom mounting bracket for mounting the battery on the wall. One top shield is required for UL9540A
Two MS ID cover grounding screws Two MS ID cover grounding screws for the EMI/EMC requirement Six cable ties for securing field cables to the unit Spare CTRL connector Spare CTRL connector without resistor for CTRL wiring Control (CTRL) connector with resistor Darket Install Guide (CIG) Old For IO Battery unit installation instructions DIFIGURAL ACCESSORIES AND REPLACEMENT PARTS DISTORMAN ACCESSORIES AND REPLACEMENT PARTS DISTORMAN ACCESSORIES AND REPLACEMENT PARTS DISTORMAN ID Battery SP Battery unit for field replacement ID Battery SP Deatery unit for field replacement ID Battery SP podestal mount ID Battery SP wall bracket for field replacement. Includes one left-side and one right-side conduit plate of field replacement. Includes one left-side and one right-side conduit plate of field replacement. Includes one left-side and one right-side conduit plate of field replacement. Includes one left-side and one right-side conduit plate of field replacement. Includes one left-side and one right-side ifting handle. ID Battery SP MG filter board for field replacement. Includes one left-side and one right-side ifting handle. ID Battery SP MG filter board for field replacement. Includes one left-side and one right-side ifting handle. ID Battery SP MG filter board for field replacement. ID Battery SP MG filter board for field replacement. ID Battery SP MG Stated for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field replacement. ID Battery SP Control communication board for field re	M5 seismic screws	Two M5 seismic screws for securing the battery unit on the bottom mounting bracket
Six cable ties Six cable ties or securing field cables to the unit Control (CTRL) connector Spare CTRL connector without resistor for CTRL wiring QIG for IQ Battery unit installation instructions DIPITIONAL ACCESSORIES AND REPLACEMENT PARTS GBD-BAT-RMA (IQB-BAT Microlinverter for field replacement (IQB-BAT Microlinverter field replacement	M4 grounding screws	Two M4 grounding screws for securing the top shield on the bottom mounting bracket
Control (CTRL) connector Spare CTRL connector with resistor for CTRL wiring Spare CTRL connector with resistor for CTRL wiring Julick Install Guide (QIQ) QIG for IQ Battery unit installation instructions PTIONAL ACCESSIORIES AND REPLACEMENT PARTS JOB-BAT-RIMA JOB-BAT-RIMA JOB-BAT Microinverter for field replacement JOB-BAT-RIMA JOB-BAT-RIMA JOB-BAT Microinverter for field replacement JOB-BAT-SPANA JOB-BAT-RIMA JOB-BAT-	M5 ID cover grounding screws	Two M5 ID cover grounding screws for the EMI/EMC requirement
Spare CTRL connector with resistor Spare CTRL connector with resistor for CTRL wiring Olid for IQ Battery unit installation instructions OBD-BAT Microinverter for field replacement OBD-CX-0550-O IQ Battery 5P pedestal mount OBD-CX-0550-O IQ Battery 5P conduit plates for field replacement. Includes one left-side and one right-side conduit plate OBD-CX-0550-O IQ Battery 5P wall bracket for field replacement. Includes one left-side and one right-side conduit plate OBD-CX-0543-O IQ Battery 5P Wall bracket for field replacement. Includes one left-side and one right-side iffting handle IQ Battery 5P Wall bracket for field replacement OBD-CX-0548-080-O IQ Battery 5P MSD board for field replacement OBD-CX-0549-080-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0549-053-O IQ Battery 5P Control communication board for field replacement OBD-CX-0	Cable ties	Six cable ties for securing field cables to the unit
Dutck Install Guide (OIG) OIG for IO Battery unit installation instructions ORD-BAT Microinverter for field replacement ORD-CP-096-O IO Battery 5P power for field replacement. Includes one left-side and one right-side conduit plate ORD-WB-0543-O IO Battery 5P will bracket for field replacement. Includes one bottom mounting bracket and one top shiel ORD-WB-0543-O IO Battery 5P Mill bracket for field replacement. Includes one bottom mounting bracket and one top shiel ORD-WB-0543-O IO Battery 5P Exposed for field replacement ORD-WB-0543-O IO Battery 5P Exposed for field replacement ORD-WB-0540-O ORD-WB-0540-O IO Battery 5P Exposed for field replacement ORD-WB-0540-O ORD-WB-0540-O IO Battery 5P Control communication board for field replacement ORD-WB-0540-O OR	Control (CTRL) connector	Spare CTRL connector without resistor for CTRL wiring
Company Comp	Control (CTRL) connector with resistor	Spare CTRL connector with resistor for CTRL wiring
OBD-BAT-RMA IQBD-BAT Microinverter for field replacement IQB Battery 5P Battery unit for field replacement IQB Battery 5P Battery unit for field replacement IQBD-BAT-RMA IQBD-BAT-	Quick Install Guide (QIG)	QIG for IQ Battery unit installation instructions
IQ Battery SP Battery unit for field replacement IQ Battery SP pedestal mount IQ Battery SP pe	OPTIONAL ACCESSORIES AND REPLACEMENT PARTS	
IQ Battery 5P cover for field replacement IQ Battery 5P pedestal mount IQ Battery 5P conduit plates for field replacement. Includes one left-side and one right-side conduit plate IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel IQ Battery 5P wall bracket for field replacement. Includes one left-side and one right-side lifting handle IQ Battery 5P wall bracket for field replacement IQ Battery 5P wall bracket and one right-side and one right-side information in the print of field replacement IQ Battery 5P wall bracket for	IQ8D-BAT-RMA	IQ8D-BAT Microinverter for field replacement
IQ Battery 5P pedestal mount IQ Battery 5P pedestal mount IQ Battery 5P conduit plates for field replacement. Includes one left-side and one right-side conduit plate 305-WB-0543-O IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel CQ BATTERY-HNDL-5 IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel CQ BATTERY-HNDL-5 IQ Battery 5P Wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel CQ BATTERY-HNDL-5 IQ Battery 5P Wall bracket for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field	B05-T02-US00-1-3-RMA	IQ Battery 5P Battery unit for field replacement
IO Battery 5P conduit plates for field replacement. Includes one left-side and one right-side conduit plate for field replacement. Includes one left-side and one right-side conduit plate for field replacement. Includes one bottom mounting bracket and one top shield DBATTERY-HNDL-5 IO Battery 5P wall bracket for field replacement. Includes one left-side and one right-side lifting handles IOS-ACFB-080-0 IO Battery 5P AC filter board for field replacement IOS BATTERY-HNDL-5 IO Battery 5P BMS board for field replacement IOS BATTERY-HNDL-5 IOS	B05-CX-0550-O	IQ Battery 5P cover for field replacement
IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shiel OBATTERY-HNDL-5 IQ Battery 5P lifting handles. Includes one left-side and one right-side lifting handle 305-ACFB-080-0 IQ Battery 5P AC filter board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P Control switch is preinstalled on the wiring cover for field replacement IQ	B05-PI-0550-O	IQ Battery 5P pedestal mount
QBATTERY-HNDL-5 IQ Battery 5P lifting handles. Includes one left-side and one right-side lifting handle 305-ACFB-080-O IQ Battery 5P AC filter board for field replacement 305-BMSNA-0490-O IQ Battery 5P BMS board for field replacement 305-CANB-063-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O, B05-NUCS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O IQ Battery 5P control communication board for field replacement 305-NICS-0524-O IQ Battery 5P control sement 305-NICS-0524-O IQ Battery 5P control sement 305-NICS-0524-O IQ Battery 5P control sement	B05-CP-096-O	IQ Battery 5P conduit plates for field replacement. Includes one left-side and one right-side conduit plate
IQ Battery 5P AC filter board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P BMS board for field replacement IQ Battery 5P Control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Ba	B05-WB-0543-O	IQ Battery 5P wall bracket for field replacement. Includes one bottom mounting bracket and one top shield
IQ Battery 5P BMS board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P bmS board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P bmS board for field replacement IQ Battery 5P bmS board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled	IQBATTERY-HNDL-5	IQ Battery 5P lifting handles. Includes one left-side and one right-side lifting handle
IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control communication board for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement	B05-ACFB-080-O	IQ Battery 5P AC filter board for field replacement
IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement OBSTANCS-0524-O, B05-NUCS-0524-O OBSTANCS-0524-O OBSTANCS-0524	B05-BMSNA-0490-O	IQ Battery 5P BMS board for field replacement
DUTPUT (AC) @240 VAC ² Rated (continuous) output power 3.84 kVA Peak output power 7.68 kVA (3 seconds), 6.14 kVA (10 seconds) Nominal voltage/range 240/211–264 VAC Nominal frequency/range 60/57–63 Hz Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 20 A (3 seconds), 25.6 A (10 seconds) Load start capability Power factor (adjustable) Maximum units per 20 A branch circuit One unit (single-phase) Maximum conductor size supported Divercurrent protection device (OCPD) for 3 AWG cable Interconnection Single-phase	B05-CANB-063-O	IQ Battery 5P control communication board for field replacement
Rated (continuous) output power 7.68 kVA (3 seconds), 6.14 kVA (10 seconds) Nominal voltage/range 240/211-264 VAC Nominal frequency/range 60/57-63 Hz Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 32 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) Maximum units per 20 A branch circuit One unit (single-phase) Maximum conductor size supported 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable Interconnection 3.84 kVA 3.84 kVA (10 seconds) (11 seconds) (12 seconds) (13 seconds) (14 kVA (10 seconds) (15 seconds) (16 seconds) (17 seconds) (18 seconds) (19 seconds) (10 secon	B05-NICS-0524-O, B05-NUCS-0524-O	IQ Battery 5P control switch is preinstalled on the wiring cover for field replacement
Peak output power 7.68 kVA (3 seconds), 6.14 kVA (10 seconds) Nominal voltage/range 240/211–264 VAC Nominal frequency/range 60/57–63 Hz Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 32 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) 0.85 leading0.85 lagging Maximum units per 20 A branch circuit One unit (single-phase) Avaimum conductor size supported 3 AWG Divercurrent protection device (OCPD) for 3 AWG cable of the reconnection Single-phase	OUTPUT (AC)	@240 VAC ²
Alominal voltage/range 240/211–264 VAC Alominal frequency/range 60/57–63 Hz Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 32 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) 0.85 leading0.85 lagging Maximum units per 20 A branch circuit One unit (single-phase) Overcurrent protection device (OCPD) for 3 AWG cable Interconnection Single-phase	Rated (continuous) output power	3.84 kVA
Nominal frequency/range 60/57-63 Hz Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 32 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) 0.85 leading0.85 lagging Maximum units per 20 A branch circuit One unit (single-phase) Maximum conductor size supported 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable 80 A Interconnection Single-phase	Peak output power	7.68 kVA (3 seconds), 6.14 kVA (10 seconds)
Rated output current (@240 VAC) 16 A Peak output current (@240 VAC) 20 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) Maximum units per 20 A branch circuit One unit (single-phase) Avaimum conductor size supported 3 AWG Divercurrent protection device (OCPD) for 3 AWG cable Interconnection 16 A 32 A (3 seconds), 25.6 A (10 seconds) Up to 48 A LRA ³ One unit (single-phase) 3 AWG Single-phase	Nominal voltage/range	240/211-264 VAC
Peak output current (@240 VAC) 32 A (3 seconds), 25.6 A (10 seconds) Load start capability Up to 48 A LRA ³ Power factor (adjustable) Maximum units per 20 A branch circuit One unit (single-phase) Auximum conductor size supported 3 AWG Description device (OCPD) for 3 AWG cable Neterconnection Single-phase	Nominal frequency/range	60/57-63 Hz
Load start capability Up to 48 A LRA ³ Ower factor (adjustable) One unit (single-phase) Maximum units per 20 A branch circuit One unit (single-phase) A WG Overcurrent protection device (OCPD) for 3 AWG cable Interconnection Up to 48 A LRA ³ One unit (single-phase) 80 A Single-phase	Rated output current (@240 VAC)	16 A
Ower factor (adjustable) O.85 leadingO.85 lagging Maximum units per 20 A branch circuit One unit (single-phase) 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable nterconnection Single-phase	Peak output current (@240 VAC)	32 A (3 seconds), 25.6 A (10 seconds)
Maximum units per 20 A branch circuit One unit (single-phase) 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable nterconnection Single-phase	Load start capability	Up to 48 A LRA ³
Maximum units per 20 A branch circuit One unit (single-phase) 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable nterconnection Single-phase	Power factor (adjustable)	0.85 leading0.85 lagging
Maximum conductor size supported 3 AWG Overcurrent protection device (OCPD) for 3 AWG cable 80 A Interconnection Single-phase	Maximum units per 20 A branch circuit	
Divercurrent protection device (OCPD) for 3 AWG cable 80 A Interconnection Single-phase	Maximum conductor size supported	
nterconnection Single-phase	••	
	Interconnection	
	AC round-trip efficiency ⁴	

 $^{^2\,\}mbox{Supported}$ in both grid-connected and backup/off-grid operation

³ Load start capability may vary

 $^{^4 \}mbox{AC}$ to the battery to AC at 50% power rating

IQ Battery 5P

BATTERY	
Total capacity	5.0 kWh
Usable capacity	5.0 kWh
DC round-trip efficiency	96%
Nominal DC voltage	76.8 V
Maximum DC voltage	86.4 V
Ambient operating temperature range (charging)	-20°C to 50°C (-4°F to 122°F) non-condensing
Ambient operating temperature range (discharging)	-20°C to 55°C (-4°F to 131°F) non-condensing
Optimum operating temperature range	0°C to 30°C (32°F to 86°F)
Chemistry	Lithium iron phosphate (LFP)
MECHANICAL DATA	
Dimensions (HxWxD)	980 mm x 550 mm x 188 mm (38.6 in x 21.7 in x 7.4 in)
Lifting weight	66.3 kg (146.1 lbs)
Total installed weight	78.9 kg (174 lbs)
Enclosure	Outdoor-NEMA 3R
IQ8D-BAT Microinverter enclosure	NEMA type 6
Cooling	Natural convection
Altitude	Up to 2,500 meters (8,202 feet)
Mounting	Wall-mount or pedestal-mount (sold separately)
FEATURES AND COMPLIANCE	
Compatibility	Compatible with IQ and M Series Microinverters, IQ System Controller 3/3G, IQ Combiner 5/5C, and IQ Gateway for grid-tied and backup operation
Communication	Wired control communication
Services	Backup, Self-Consumption, TOU, and NEM integrity
Monitoring	Enphase Installer Platform and Enphase App monitoring options; API integration
Compliance	CA Rule 21 (UL 1741-SA), IEEE 1547:2018 (UL 1741-SB, 3rd Ed.) CAN/CSA C22.2 No. 107.1-16 UL 9540, UL 9540A, UN 38.3, UL 1998, UL 991, NEMA Type 3R, AC156 EMI: 47 CFR, Part 15, Class B, ICES 003 Cell module: UL 1973, UN 38.3 Inverters: UL 62109-1, IEC 62109-2
LIMITED WARRANTY	
Limited warranty	>60% capacity, up to 15 years or 6,000 cycles ⁵

⁵Whichever occurs first. Restrictions apply

Revision history

REVISION	DATE	DESCRIPTION
DSH-00010-2.0	July 2023	Added battery isometric view on the first page.Editorial updates.
DSH-00010-1.0	May 2023	Initial release.





IQ System Controller 3/3G

The Enphase IQ System Controller 3/3G connects the home to grid power, the IQ Battery system, and solar PV. It provides microgrid interconnect device (MID) functionality by automatically detecting and seamlessly transitioning the home energy system from grid power to backup power in the event of a grid failure. It consolidates interconnection equipment into a single enclosure and streamlines grid-independent capabilities of PV and storage installations by providing a consistent, pre-wired solution for residential applications.



IQ Series Microinverters

The high-powered smart grid-ready IQ Series Microinverters (M Series, IQ6, IQ7, and IQ8 Series) dramatically simplify the installation process



IQ Combiner 5/5C

Consolidates PV interconnection equipment into a single enclosure and streamlines IQ Series Microinverters and IQ Gateway installation by providing a consistent, pre-wired solution for residential applications



10-year limited warranty





IQ Battery 5P

Fully integrated AC battery system. Includes six field-replaceable IQ8D-BAT microinverters



IQ Load Controller

Helps prioritize essential appliances during a grid outage to optimize energy consumption and prolong battery life

Easy to Install

- Connects to service entrance¹ or main load center
- · Includes neutral-forming transformer
- Mounts on single stud with centered brackets
- Provides conduit entry from bottom, left, or right
- Includes color-coded wires for ease of wiring System Shutdown Switch
- Integrates hold-down functionality to eliminate the need for hold-down kits and special breakers

-lexible

- Can be used for Sunlight Backup, Home Essentials Backup, or Full Energy Independence
- IQ System Controller 3 integrates with IQ Battery 5P
- IQ System Controller 3G integrates with select AC standby generators. See Generator Integration Tech Brief for a list of generators
- Provides a seamless transition to backup

Safe and Reliable

- System Shutdown Switch can be used to disconnect PV, battery, and generator systems
- It acts as a rapid shutdown initiator of grid-forming IQ8 PV Microinverters for safety of maintenance technicians/first responders
- 10-year limited warranty



MODEL NUMBER	DESCRIPTION
SC200D111C240US01	IQ System Controller 3 streamlines grid-independent capabilities of PV and storage installations Integrates hold-down capability. Supports up to 40 kWH (without PCS*) and 80 kWh (with PCS*) IQ Battery 5P. Does not support generator integration
SC200G111C240US01	IQ System Controller 3G streamlines grid-independent capabilities of PV and storage installation Integrates hold-down capability. Supports up to 20 kWH (without PCS*) and 40 kWh (with PCS*) IQ Battery 5P. Supports generator integration
WHAT'S IN THE BOX	
2 System Controller 3/3G	Includes neutral-forming transformer (NFT) and microgrid interconnect device (MID)
system Shutdown Switch	Includes pre-wired red, black, orange and purple 12 AWG wire (EP200G-NA-02-RSD)
Nall-mounting bracket	Screws provided in the accessories kit for mounting
4-pole circuit breaker	Pre installed Quad breaker (BRK-20A40A-4P-240V), 20 A-40 A, 10 kAIC, Eaton BQC220240 ²
Accessories Kit	IQ System Controller 3/3G literature kit, including labels, CTRL headers, screws, filler plates, and QIG (EP200G-LITKIT)
OPTIONAL ACCESSORIES AND REPLACEMENT PARTS	
CT-200-SPLIT	200 A split core current transformers for metering (accuracy: ±2.5%) ³
CT-200-CLAMP	200 A clamp-type current transformers for metering (accuracy: ±2.5%) ³
Circuit breakers (order separately, as needed)4: BRK-100A-2P-240V: Main breaker, 2-pole, 100A, 25kAIC, CSR2100N or CSR2100 BRK-125A-2P-240V: Main breaker, 2-pole, 125A, 25kAIC, CSR2125N BRK-150A-2P-240V: Main breaker, 2-pole, 150A, 25kAIC, CSR2150N BRK-175A-2P-240V: Main breaker, 2-pole, 175A, 25kAIC, CSR2175N BRK-200A-2P-240V: Main breaker, 2-pole, 200A, 25kAIC, CSR2200N	Circuit breakers (order separately, as needed) ⁵ : BRK-20A-2P-240V-B: Circuit breaker, 2-pole, 20 A, 10 kAIC, BR220B/BR220 BRK-30A-2P-240V-B: Circuit breaker, 2-pole, 30 A, 10 kAIC, BR230 BRK-40A-2P-240V-B: Circuit breaker, 2-pole, 40 A, 10 kAIC, BR240B/BR240 BRK-60A-2P-240V: Circuit breaker, 2-pole, 60 A, 10 kAIC, BR260 BRK-80A-2P-240V: Circuit breaker, 2-pole, 80 A, 10 kAIC, BR280
EP200G-HNDL-R1	IQ System Controller 3/3G installation handle kit (order separately)
CTRL-SC3-NA-01	Control cable, 500 ft. spool (order separately)
ELECTRICAL SPECIFICATIONS	
Nominal voltage/Range (L-L)	240 V~6/±20%
Voltage measurement accuracy	±1% V nominal (±1.2V L-N and ±2.4V L-L)
Auxiliary (dry)contact for load control, excess PV control, and generator two-wire control	24 V, 1 A
Nominal frequency/Range	60 Hz/56-63 Hz
Frequency measurement accuracy	±0.1 Hz
Maximum continuous current rating	160 A
Maximum input overcurrent protection device	200 A
Maximum output overcurrent protection device	200 A
Maximum overcurrent protection device rating for generator circuit	80 A (IQ System Controller 3G only - SC200G111C240US01)
Maximum overcurrent protection device rating for storage circuit	2x80 A (IQ System Controller 3 - SC200D111C240US01), 1x 80 A (IQ System Controller $3G$ - SC200G111C240US01)
Maximum overcurrent protection device rating for PV combiner unit	80 A
nternal busbar rating	200 A
Neutral-forming transformer (NFT) Breaker rating (pre-installed): 40A between L1 and Neutral; 40A between L2 and Neutral	 Maximum continuous unbalance current: 30 A @ 120 V Peak rated power: 8,800 VA for 30 seconds Peak unbalanced current: 80 A @ 120 V for 2 seconds

⁽²⁾ Factory installed quad breaker (Siemens or Eaton). NFT pre-wired to 40 A terminal of the quad breaker.

⁽³⁾ Two unit of CT-200-SPLIT or CT-200-CLAMP to be bought separately for generator integration

⁽⁴⁾ The IQ System Controller 3 is rated at 22 kAIC.

 $[\]textbf{(5) Integrated hold down kit also support breakers (BR220/BR230/BR240) without predrilled hole}.\\$

^{(6) &}quot;~" indicates alternating current (AC) supply.



MECHANICAL DATA			
Dimensions (WxHxD)	50 cm x 91.6 cm x 24.6 cm (19.7 in x 36 in x 9.7 in)		
Weight	39.4 kg (87 lbs)		
Ambient temperature range	-40°C to 50°C (-40°F to 122°F)		
Cooling	Natural convection, plus heat shield		
Enclosure environmental rating	Outdoor, NEMA type 3R, polycarbonate construc	tion	
Maximum altitude	2,500 meters (8,200 feet)		
WIRE SIZES			
Connections (All lugs are rated to 90°C)	Main lugs and backup load lugs CSR breaker bottom wiring lugs AC combiner lugs, IQ Battery lugs, and generator lugs Neutral (large lugs)	Cu/Al: 6 AWG-300 kcmil Cu/Al: 2 AWG-300 kcmil 14 AWG-2 AWG Cu/Al: 6 AWG-300 kcmil	
Neutral and ground bars	Large holes (5/16-24 UNF) Small holes (10-32 UNF)	14 AWG-1/O AWG 14 AWG-6 AWG	
COMPLIANCE			
Compliance (under progress)	UL 1741, UL 1741 SA, IEEE 1547:2018 (UL 1741-SB, 3rd Ed.), UL 1741 PCS CRD, UL1 998, UL 869A, UL 675, UL 508 ⁷ , UL 508 ⁷ CSA 22.2 No. 107.1, 47 CFR Part 15 Class B, ICES 003, ICC ES AC156. The IQ System Controller 3/3G is approved for use as service equipment in the United States		
WARRANTY			
Limited warranty (restrictions apply)	Up to 10 years (EP200G-NA-02-RSD is warrantied for 5 years)		
COMPATIBILITY			
IQ Battery 5P	IQBATTERY-5P-1P-NA		
Microinverters	IQ6, IQ7, IQ8, and M ⁸ Series Microinverters ⁹		
IQ Combiner 5/5C	X-IQ-AM1-240-5C, X-IQ-AM1-240-5		
Communications Kit 2	COMMS-KIT-02		

⁽⁷⁾ Sections from these standards were used during the safety evaluation and included in the UL 1741 listing.
(8) M Series microinverters can only be supported in states that have not yet adopted IEEE 1547:2018.
(9) Enphase does not support mixing IQ8 Series Microinverters with other Series on the same IQ Gateway.

Figure 1A: Installing DER breakers for IQ8 System without generator




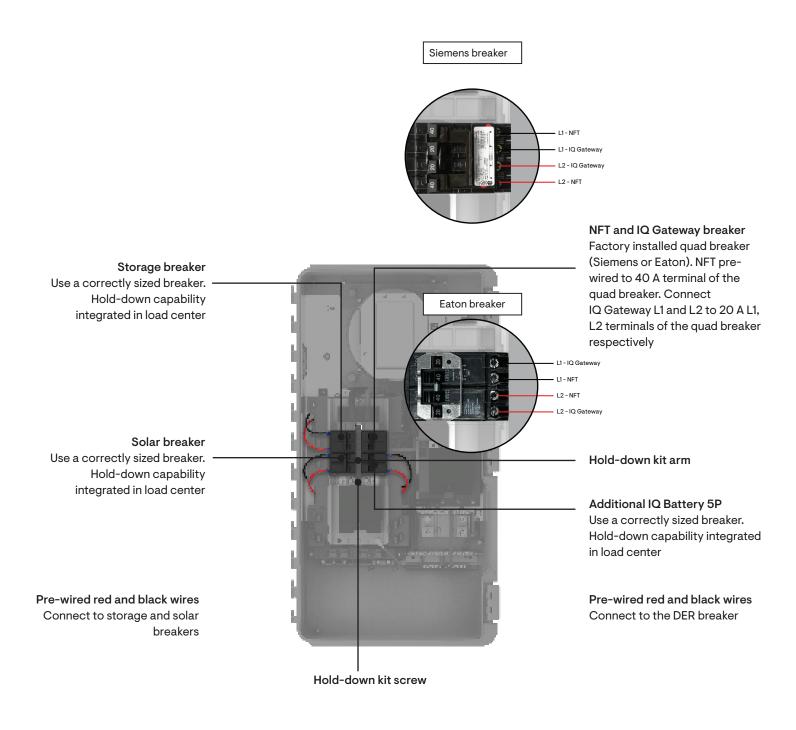


Figure 1B: Installing DER breakers for IQ8 System with generator

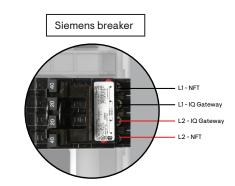

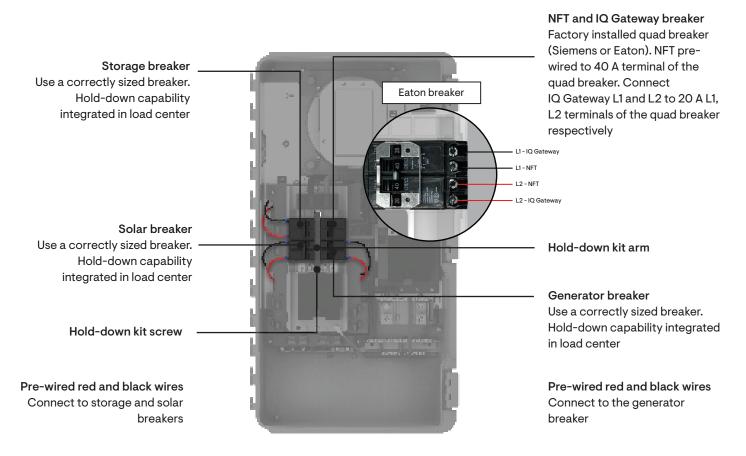

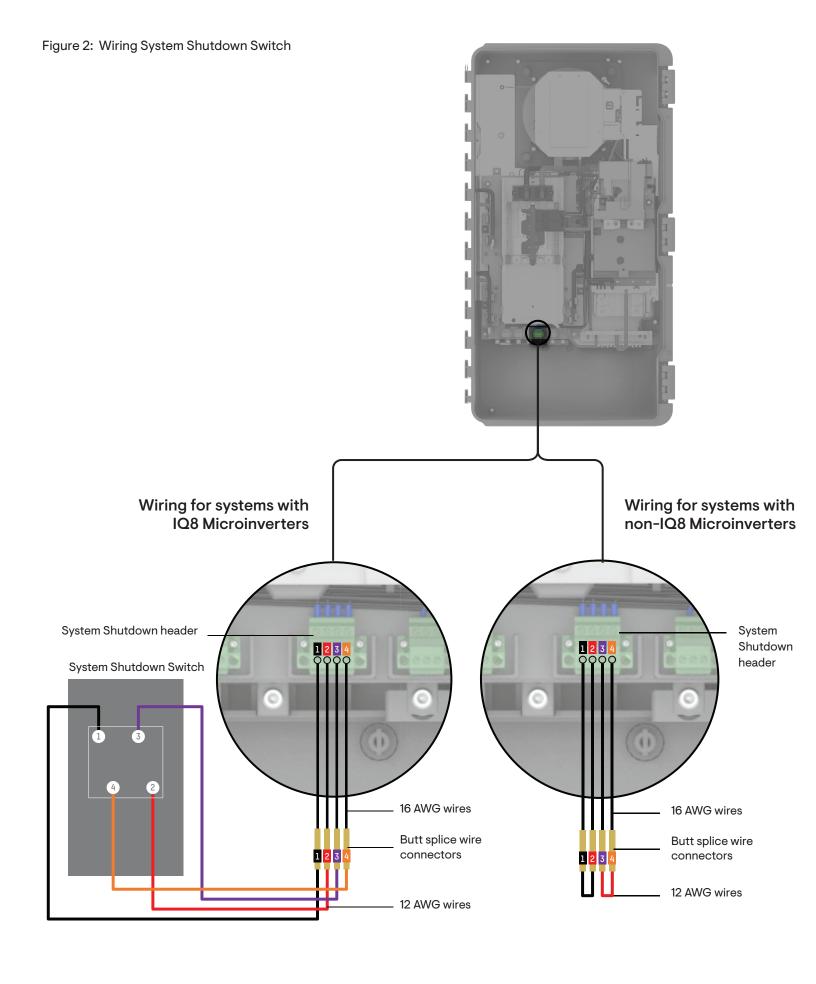

Revision history

REVISION	DATE	DESCRIPTION
DSH-00021-1.0	May 2023	Initial release

© 2023 Enphase Energy. All rights reserved. Enphase, the e and CC logos, IQ, and certain other marks listed at https://enphase.com/trademark-usage-guidelines are trademarks of Enphase Energy, Inc. in the US and other countries. Data subject to change.





Enphase Communications Kit 2

The Communications Kit 2 enables communication between IQ Gateway, IQ Battery 5P, and IQ System Controller 3/3G. The Communications Kit 2 cannot be used with prior versions of the IQ Battery or the IQ System Controller. The Communications Kit 2 can be used to upgrade PV-only sites to grid-tied or grid-forming systems in the absence of an IQ Combiner 5/5C. It is not needed when an IQ Combiner 5/5C is used because the IQ Combiner 5/5C integrates the functionality of the Communications Kit 2.



IQ Series Microinverters

The high-powered smart grid-ready IQ Series Microinverters (IQ6, IQ7, and IQ8 Series) dramatically simplify the installation process.



IQ Battery 5P

Powerful, fully-integrated AC battery with 5 kWh capacity. Includes six field-replaceable IQ8D-BAT Microinverters.



IQ System Controller 3/3G

Provides microgrid interconnection device (MID) functionality by automatically detecting grid failures and seamlessly transitioning the home energy system from grid power to backup power.



IQ Gateway or Envoy S Metered

Delivers solar production and energy consumption data to the Enphase Installer Portal for comprehensive, remote maintenance and management of Enphase systems.

Reliable

- 5-year limited warranty
- Uses wired control communication for fast and consistent communication

Safe

· Minimal voltage and easy to install

Backwards compatible

- Enables IQ Battery 5P and IQ System Controller 3/3G to be installed on sites with:
 - IQ Series Microinverters when using combiners or gateway versions older than IQ Combiner 5/5C*
 - M Series Microinverters when using an Envoy S Metered*

*See compatibility section in the following page



5-year limited warranty

Communications Kit 2

MODEL NUMBER	
COMMS-KIT-02	The Communications Kit 2 enables wired control communication between IQ Gateway (or Envoy S Metered), IQ Battery 5P, and IQ System Controller 3/3G
WHAT'S IN THE BOX	
Control adapter (COMMS-KIT-02)	One control adapter pre-mounted in a NEMA 3R enclosure to enable wired communication for IQ Gateway (or Envoy S Metered)
Enclosure	One NEMA 3R-rated enclosure in which the components are pre-installed and protected
Ground terminal block	One ground terminal block for grounding the control cable shield
DIN rails	Two DIN rails pre-installed in the enclosure. One has the control adapter mounted, while the other can mount an IQ Gateway or an Envoy S Metered if needed
IQ Battery CT	One battery metering clamp CT, shipped with the box, accurate up to 2.5%
USB cable	One USB 2.0 Type-A to USB Type-C cable for connecting the control adapter to an IQ Gateway (or Envoy S Metered)
Power jumper	One power jumper to short the two terminals marked "L2" and "X" in the IQ Gateway power terminal block**
Accessories	One spare control header and zip ties for wire management
POWER REQUIREMENTS	
Supply voltage	5 V (should be powered using a USB Type-A port on the IQ Gateway or Envoy S Metered)
Current	500 mA
BLE transmit power	8 dBm
CONNECTIVITY	
USB	One USB Type-C port for power and communication with IQ Gateway or Envoy S Metered
Control	Two control headers for wiring control cables
Drain	One drain and one PE terminal
MECHANICAL DATA	
Enclosure dimensions (WxHxD)	368 mm x 371 mm x 183 mm (14.48 in x 14.6 in x 7.2 in)
Adapter dimensions (WxHxD)	152 mm x 69 mm x 25 mm (5.98 in x 2.71 in x 0.98 in)
Weight	3.265 kg (7.1 lbs)
Ambient temperture	-40°C to 45°C (-40°F to 113°F)
Altitude	Up to 2,600 meters (8,530 feet)
Humidity	85% RH
NEMA rating	The enclosure is rated for NEMA 3R and can be used for outdoor installation
FEATURES AND COMPLIANCE	
Communication	Wired control communication
Certifications	US/FCC ID: MCQ-XBEE3 CAN/IC ID: 1846A-XBEE3
LIMITED WARRANTY	
Limited warranty	5-year limited warranty
COMPATIBILITY	
IQ System Controller	IQ System Controller 3/3G
IQ Battery	IQ Battery 5P
IQ Gateway/IQ Combiner	IQ GatewayEnvoy S MeteredIQ Combiner 3/3C/3-ES/3C-ES/4/4C
Microinverter and Gateway	IQ6, IQ7, and IQ8 Series Microinverters with an IQ Gateway or IQ Combiner 3/3C/3-ES/3C-ES/4/4C M Series Microinverter (M215 and M250) with Envoy S Metered

^{**} For Envoy S Metered, the installer needs to use a wire or a 3-pin Wago nut to short the terminals marked "B" and "C" on the power terminal block.

Refer Communication Kit 2 QIG for details.

Revision history

REVISION	DATE	DESCRIPTION
DSH-00108-1.0	July 2023	Initial release


Rapid shutdown is built-in

The 2014 edition of the National Electrical Code (NEC 2014) added new rapid shutdown requirements for PV systems installed on buildings. Enphase Microinverters fully meet rapid shutdown requirements in the new code without the need to install any additional electrical equipment.

What's new in NEC 2014?


NEC 2014, Section 690.12 applies to PV conductors over 10 feet from the PV array and requires that the conductors power down to 30 volts and 240 volt-amperes within 10 seconds of rapid shutdown initiation.

String inverters require work arounds for rapid shutdown

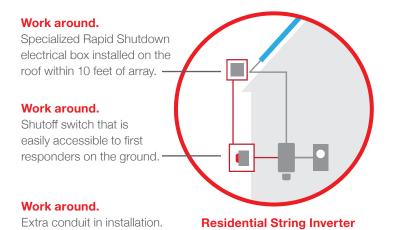

Work around.

String inverter installed on roof, a hostile environment that string inverters are not built to live in.

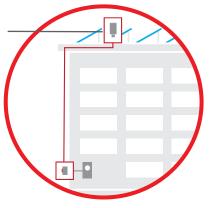

Commercial String Inverter

Enphase comes standard with rapid shutdown capability

All Enphase microinverters, even those that were previously installed, inherently meet rapid shutdown requirements, no additional equipment or workarounds needed



Enphase microinverters can safely shut down automatically, leaving only low-voltage DC electricity isolated to the PV module



Commercial Microinverter



Enphase P/N: EP200G-NA-02-RSD

Type 4X

IP66NW

IEC/AS 60947.3 SI. Series

Enphase Energy System

Shutdown Switch

IMO

IMO P/N: SI16-PEL64R-2-ENP



Technical Datasheet

Key Features

- **Enclosed Solar Isolator**
- 600VDC, 16A
- IP66 / NEMA 4X Protection Rating
- 2 Pole, 1 String
- Grey/Black Enclosure Cover & Handle











Technical Data for DC


Main Contacts	DC	Units	SI16 DC-PV1 (acc. to IEC 60947-3)	SI16 (acc. to UL508i)	
Rated Thermal Current I _{the}		А	16		
Rated Insulation Voltage UI ¹)		V	1000		
Rated Insulation Voltage UI ²)		V	1500		
Distance of Contacts (per pole)		mm	8		
Rated Operational Current I _e	300V	А	16	16	
	350V	А	16	16	
	400V	А	16	16	
	500V	А	16	16	
	600V	А	16	16	
Rated Conditional Short Circuit Current		kA _{eff}	5		
Max. Fuse Size	gL (gG)	А	40		
Mechanical Life		Ops	10,000		
Rated Short-time Withstand Current (1s) I _{cw}		А	800		
Short Circuit Making Capacity I _{cw}		А	800		
Size of Terminal Screw			M4 Pz2		
Cable Cross Sections (solid or stranded)		mm / AWG	4 - 16 / 12-10		
Fightening Torque		Nm / Ib.in	1.7 - 1.8 / 9 - 16		
Maximum Operation Ambient Temperature		°C	-40 to +45		
Maximum Storage Ambient Temperature		°C	-50 to +90		
Power Loss at I _{emax}		(A) / W	(16) / 1		

Contact Resistance per pole $1.75 m\Omega$

Dimensions (mm)

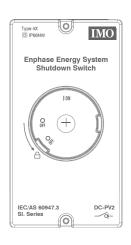

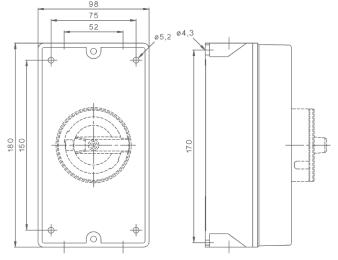

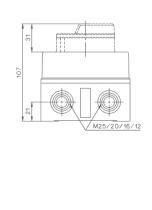



Suitable at overvoltage category I to III, pollution degree 3 (standard-industry): Uimp = 8kV.
 Suitable at overvoltage category I to III, pollution degree 2 (min. IP55): Uimp = 8kV.