


All Walls Shown Are Considered Load Bearing

Plumbing Drop Notes


- Plumbing drop locations shown are NOT exact.
 Contractor to verify ALL plumbing drop locations prior to setting Floor Trusses.
- 3. Adjust spacing as needed not to exceed 24"oc.

Dimension Notes
1. All exterior wall to wall dimensions are to
face of sheathing unless noted otherwise
2. All interior wall dimensions are to face of
frame wall unless noted otherwise
3. All exterior wall to truss dimensions are to
face of frame wall unless noted otherwise

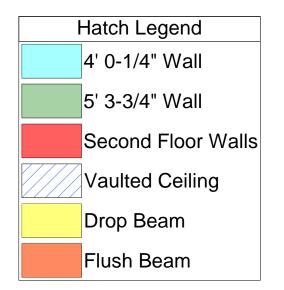

	Conne	ctor Info	rmati	ion	Nail Info	rmation
Sym	Product	Manuf	Qty	Supported Member	Header	Truss
	HUS410	USP	25	NA	16d/3-1/2"	16d/3-1/2"
\bigcirc	MSH422	USP	1	Varies	10d/3"	10d/3"

_					
			Products		
	PlotID	Length	Product	Plies	Net Qty
Ī	BM1	40' 0"	1-3/4"x 9-1/4" LVL Kerto-S	3	3
	BM2	6' 0"	1-3/4"x 9-1/4" LVL Kerto-S	2	2
	BM3	18' 0"	1-3/4"x 16" LVL Kerto-S	2	2
	GDH	22' 0"	1-3/4"x 18" LVL Kerto-S	3	3

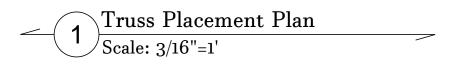

= Indicates Left End of Truss (Reference Engineered Truss Drawing) Do NOT Erect Truss Backwards

соттесн **ROOF & FLOOR TRUSSES & BEAMS**

> Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

reactions less than or equal to 3000# are to comply with the prescriptive Code nents. The contractor shall refer to the I Tables (derived from the prescriptive Co

David Landry

David Landry

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b))

NUA	MBER C	STUDS R		A END OF	7
END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR (4) PLY HEADER
700	1	2550	1	3400	1
400	2	5100	2	6800	2
100	3	7650	3	10200	3
800	4	10200	4	13600	4
500	5	12750	5	17000	5
200	6	15300	6		
900	7				
3600	8				
300	9				

CITY / CO.	Harnett Co. / Harnett
ADDRESS	1
WODEL	Floor
DATE REV.	01/11/23
DRAWN BY	Jonathan Landry
SALES REP.	Neil Baggett

Patim N/A JOB NAME BUILDER

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.
These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com