



All Walls Shown Are Considered Load Bearing

Roof Area = 1468.1 sq.ft. Ridge Line = 52.07 ft. Hip Line = 0 ft. Horiz. OH = 98.57 ft. Raked OH = 159.04 ft. Decking = 50 sheets

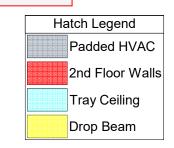

	Conne	ctor Info	rmati	ion	Nail Info	rmation
Sym	Product	Manuf	Qty	Supported Member	Header	Truss
	HUS26	USP	4	NA	16d/3-1/2"	16d/3-1/2"

		Products		
PlotID	Length	Product	Plies	Net Qty
BM1	12' 0"	1-3/4"x 16" LVL Kerto-S	2	2
BM2	15' 0"	1-3/4"x 16" LVL Kerto-S	2	2
BM3	12' 0"	2x10 SPF No.2	2	2
GDH	12' 0"	2x12 SPF No.2	2	2





Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

tearing reactions less than or equal to 3000# are eemed to comply with the prescriptive Code equirements. The contractor shall refer to the ttached Tables (derived from the prescriptive Code equirements) to determine the minimum foundation ize and number of wood studs required to support eactions greater than 3000# but not greater than 5000#. A registered design professional shall be etained to design the support system for any eaction that exceeds those specified in the attached ables. A registered design professional shall be etained to design the support system for all eactions that exceed 15000#.

David Landry

David Landry

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b))

NUM	ABER C	STUDS F HEADER/		A END C	١F
END REACTION (UP TO)	REQ'D STUDS FOR (2) PLY HEADER	END REACTION (UP TO)	REQ'D STUDS FOR (3) PLY HEADER	END REACTION (UP TO)	
1700	1	2550	1	3400	
3400	2	5100	2	6800	
5100	3	7650	3	10200)
6800	4	10200	4	13600)
8500	5	12750	5	17000)
10200	6	15300	6		
11900	7				
13600	8				
15300	9				

	SALES REP. Lenny Norris	SALES REP.	J0421-2292
	DRAWN BY David Landry	DRAWN BY	
	04/08/21	DATE REV.	
	Roof	WODEL	Hickory "A"
7 8 9	Lot 68 Thomas Farm	ADDRESS	Lot 68 Thomas Farm
11900 13600 15300	CITY / CO. Harnett / Harnett	CITY / CO.	Weaver Development Co. Inc.

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com

SEAL DATE

QUOTE#

J0421-2292

JOB NAME

BUILDER