





Front Elevation
Scale: 1/4"= 1'0"



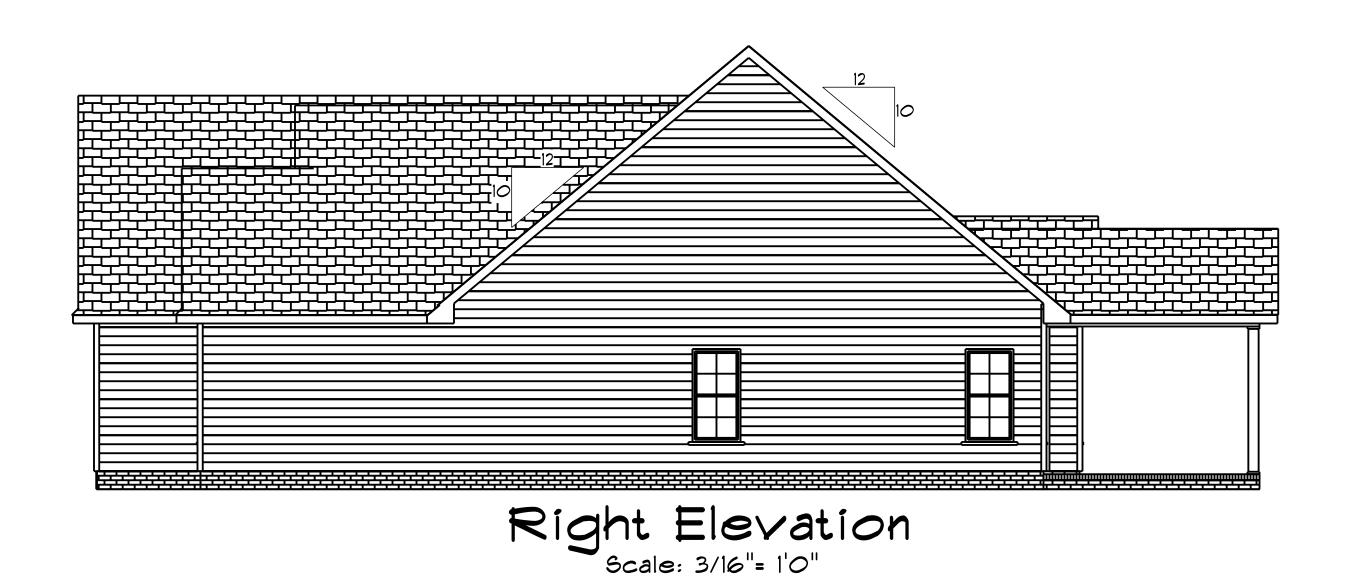

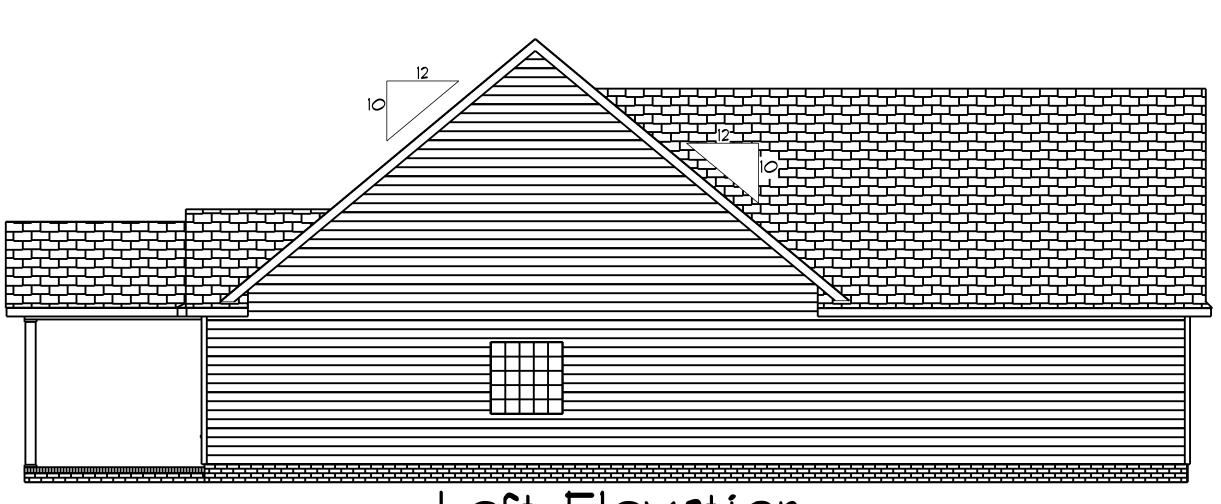


Left Elevation

Scale: 3/16"= 1'0"







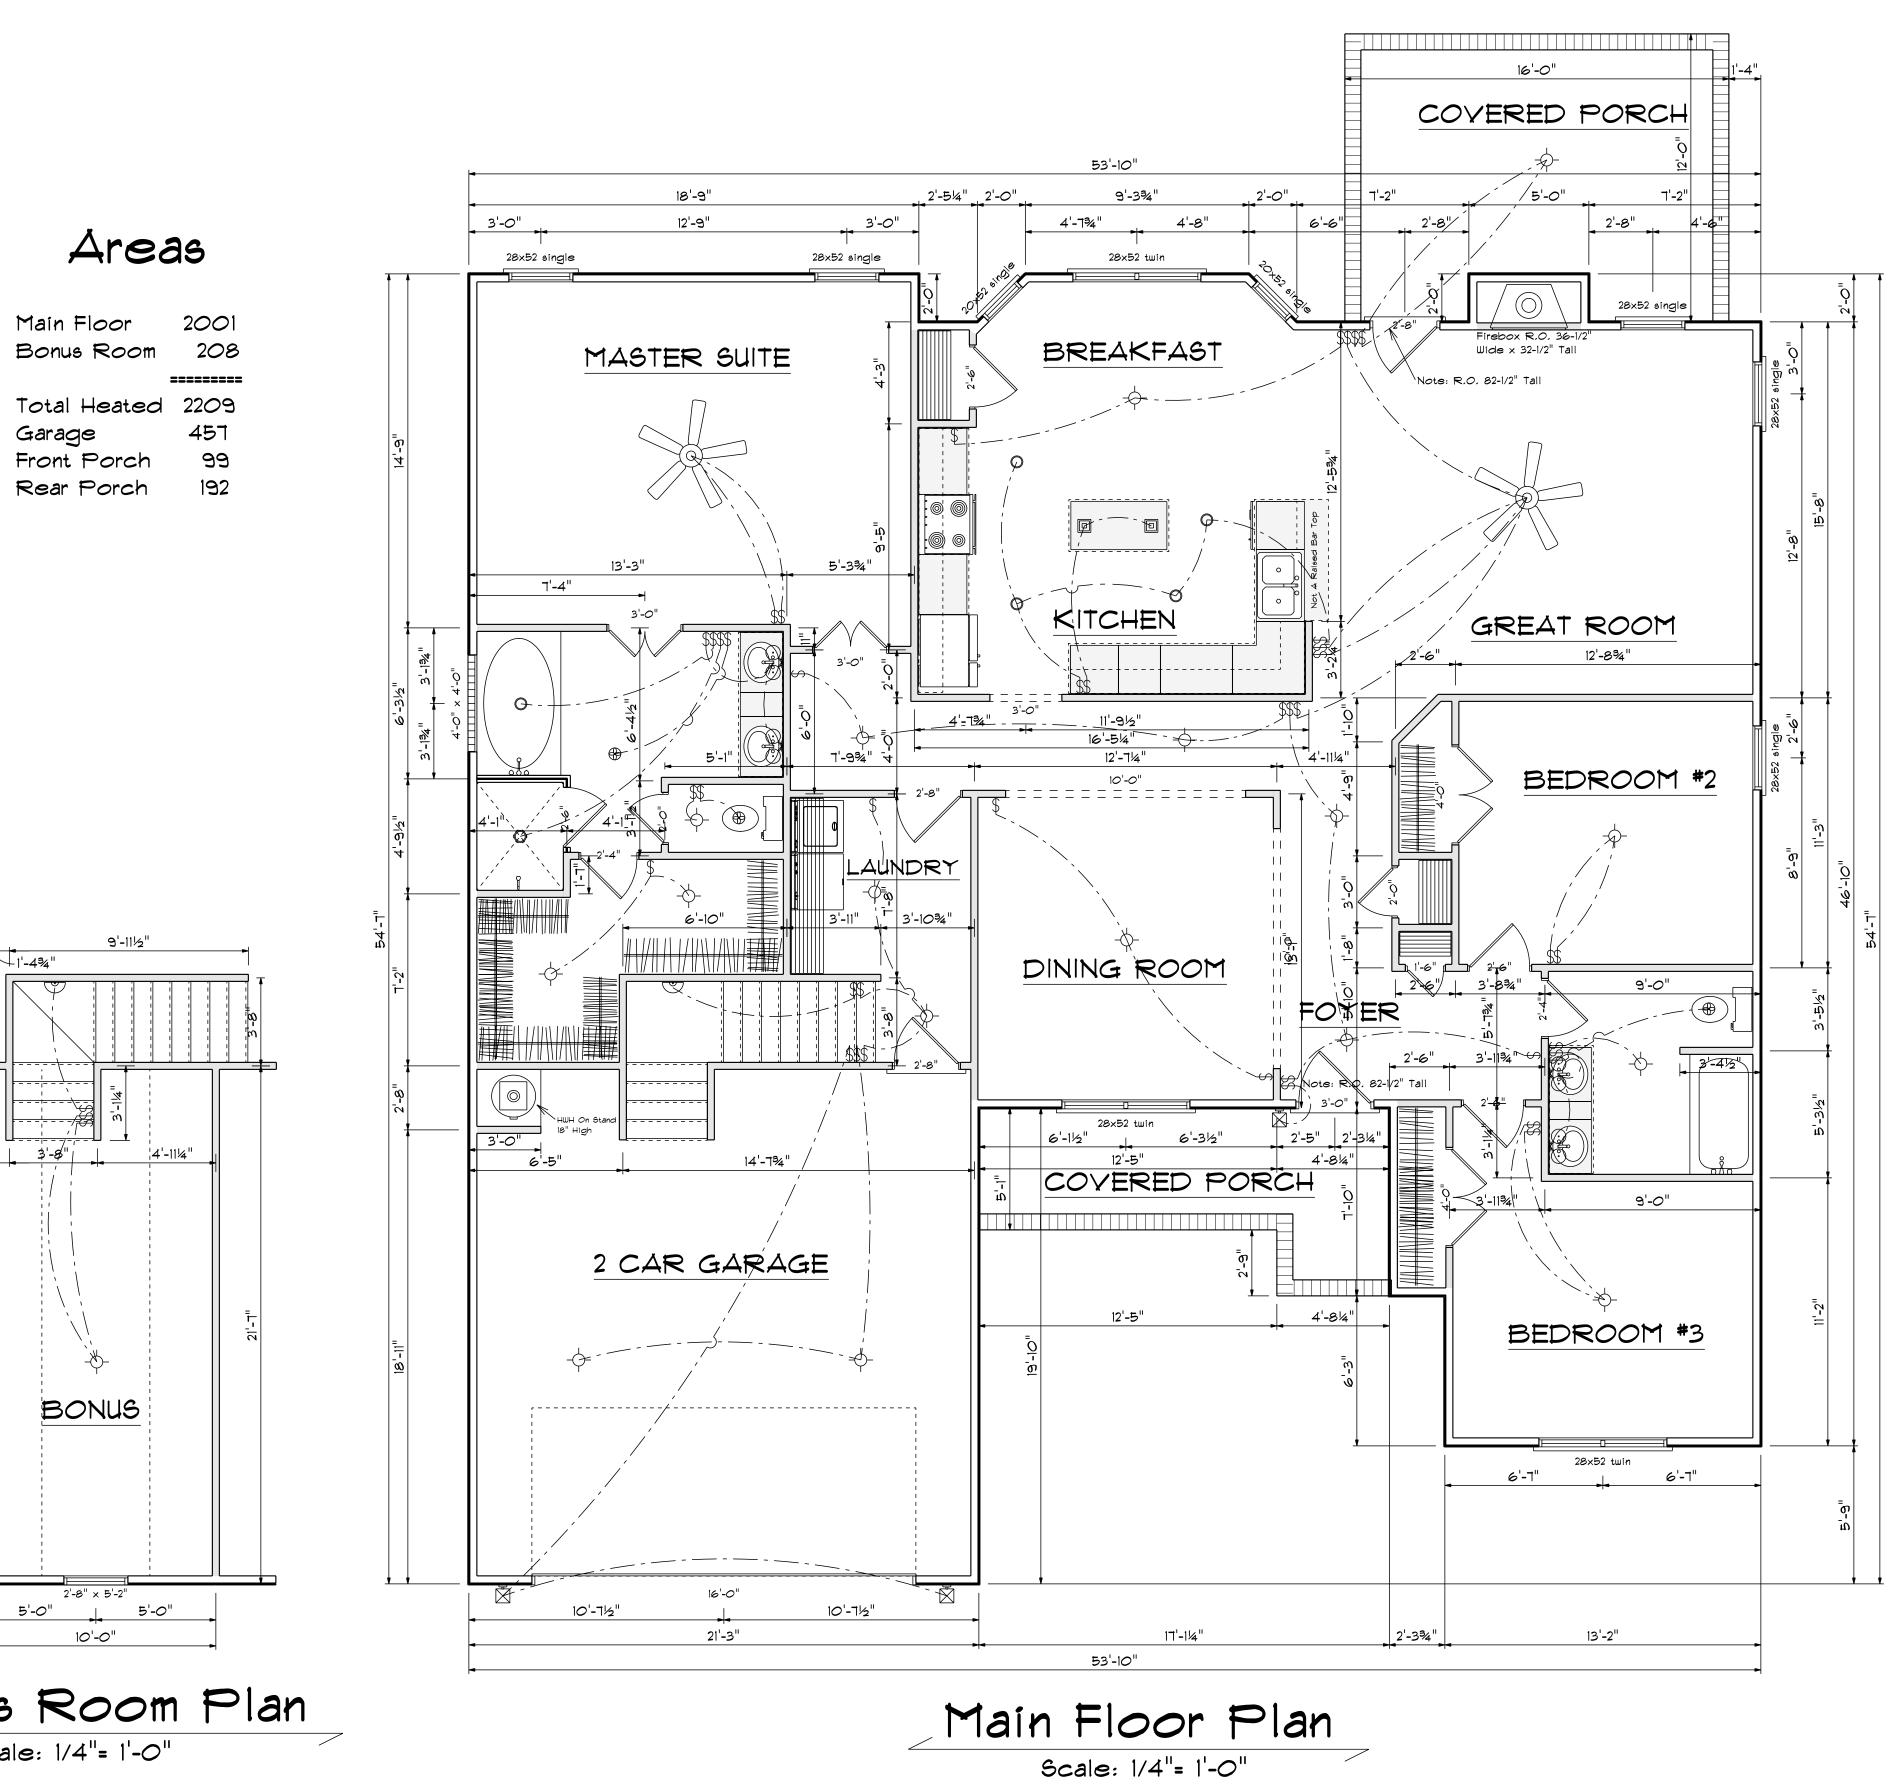



BONUS

Bonus Room Plan Scale: 1/4"= 1'-0"

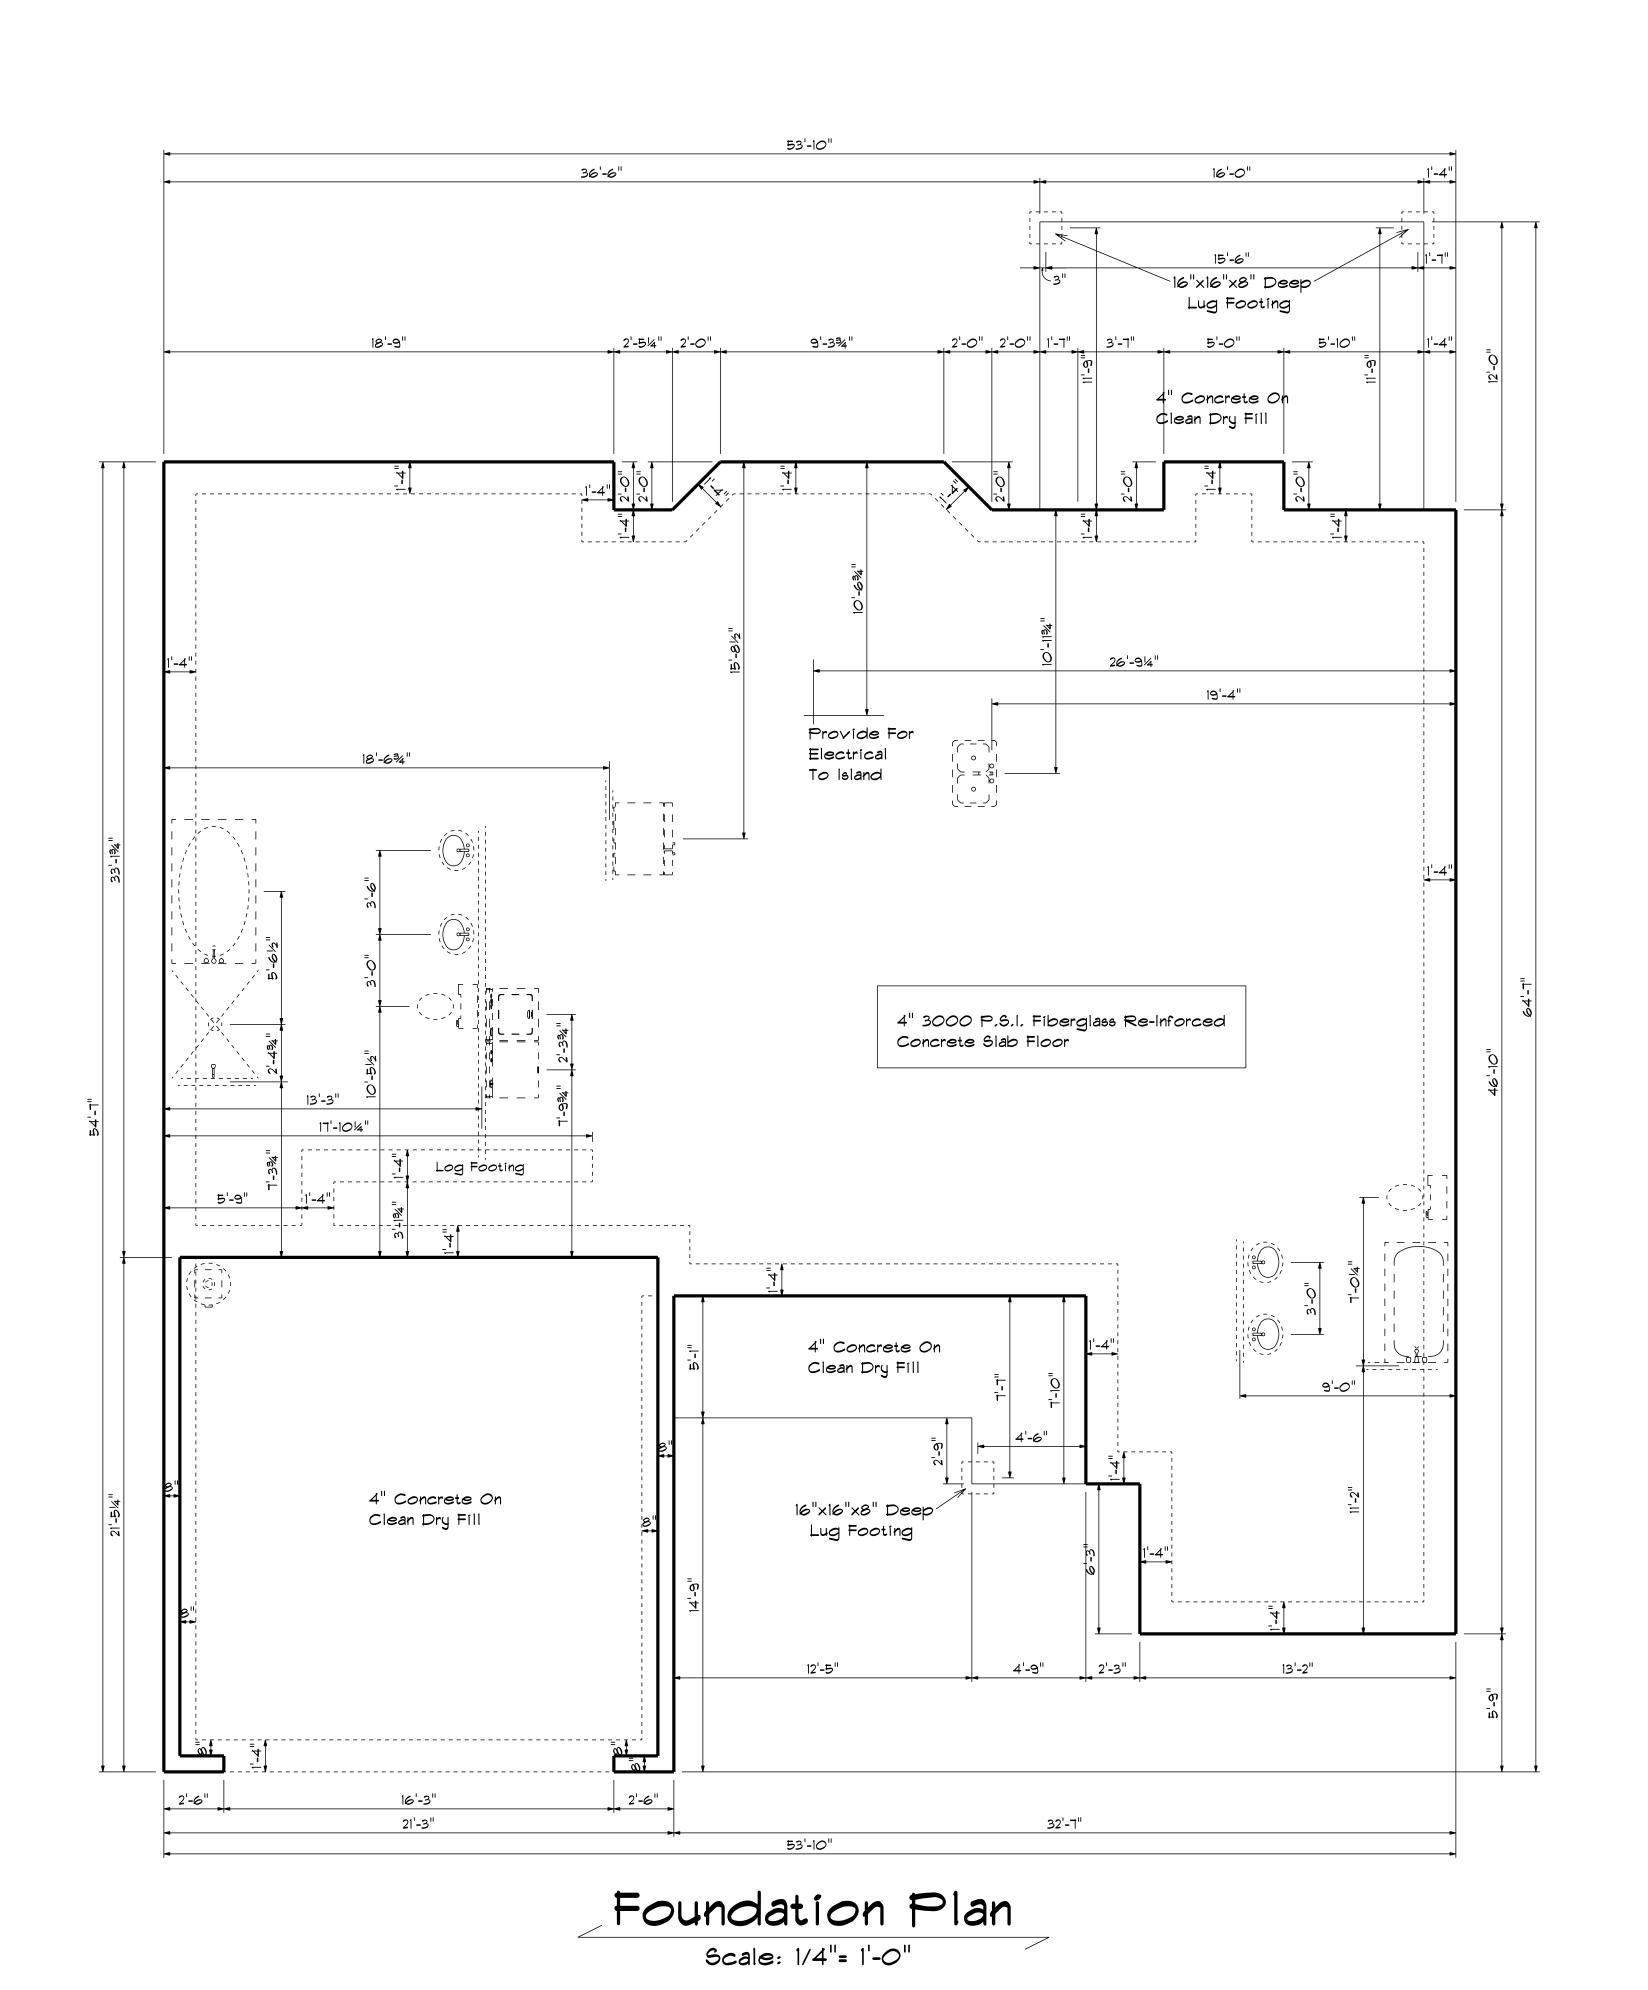


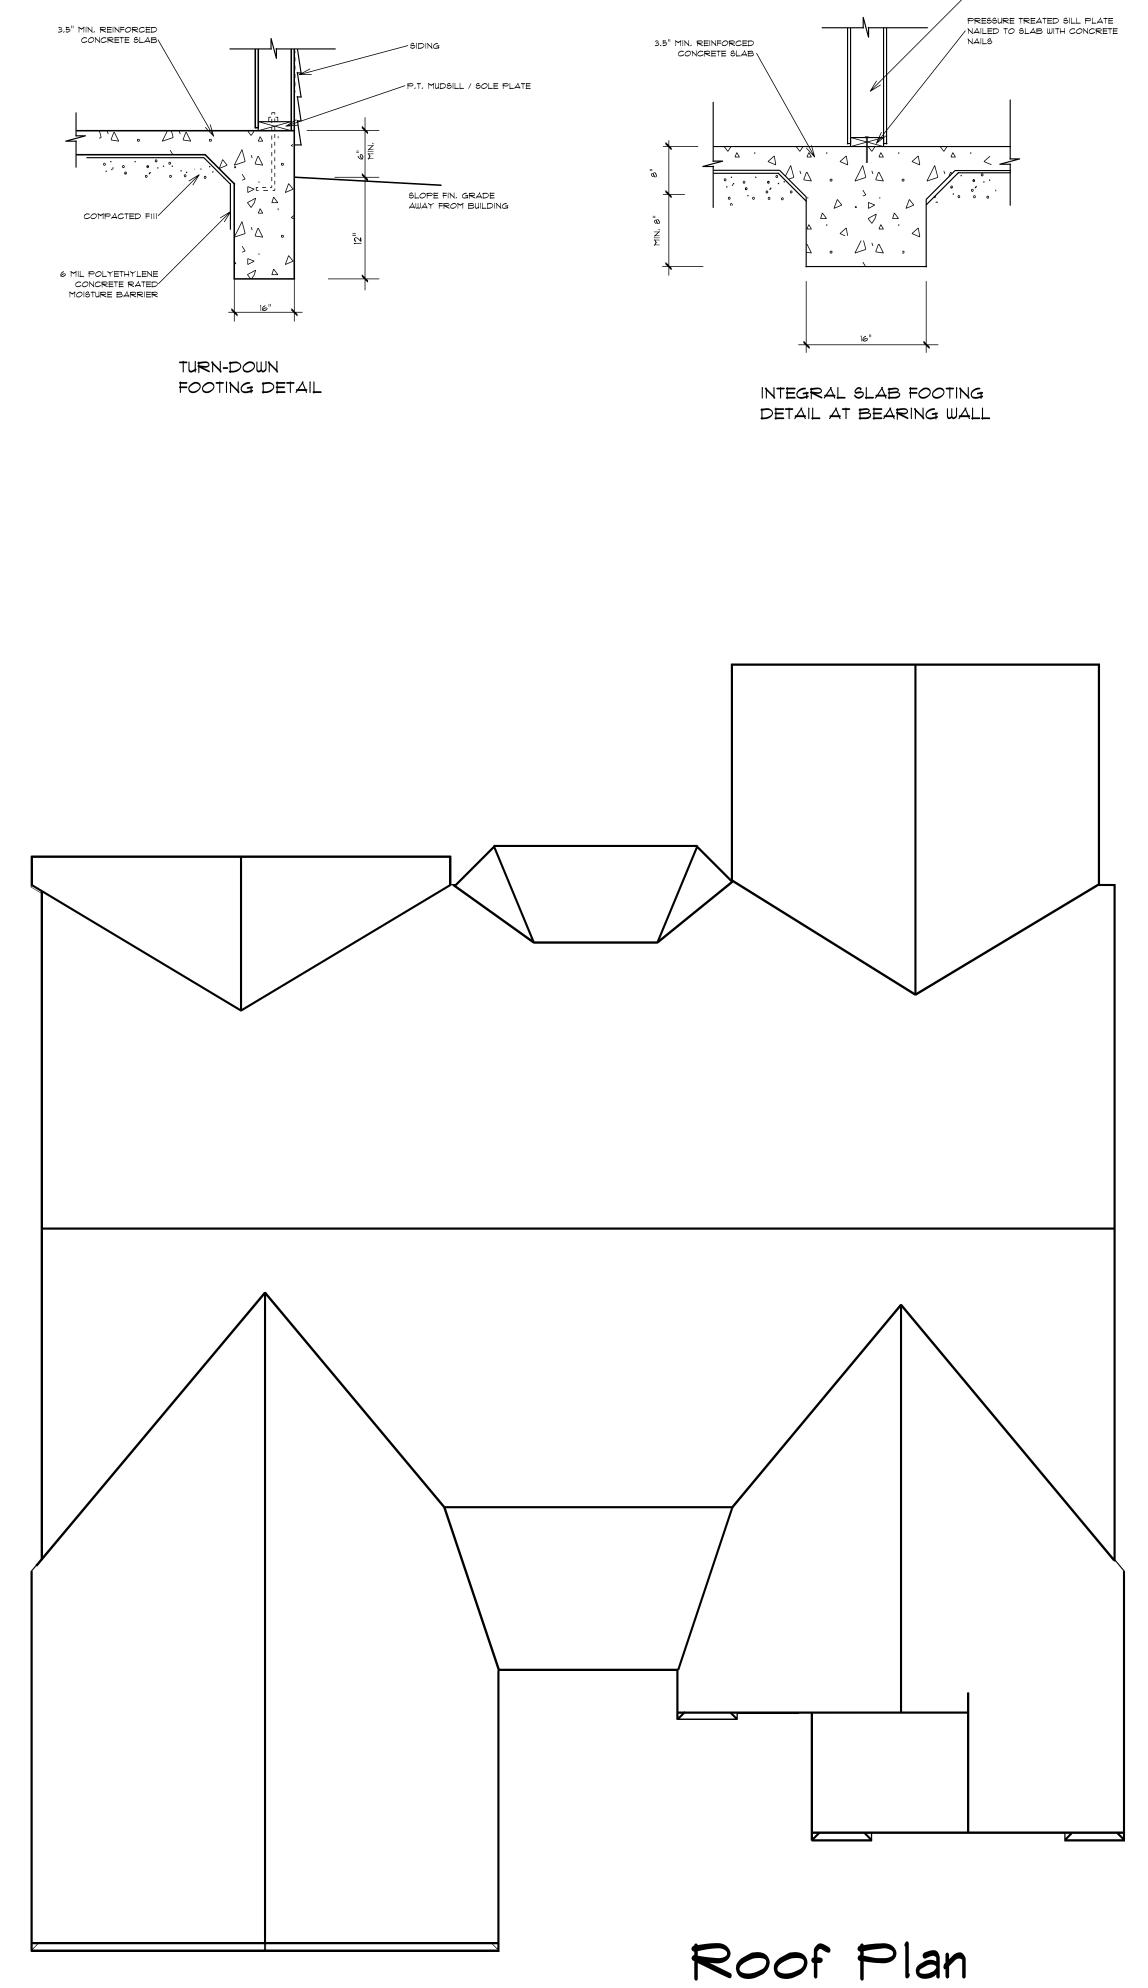


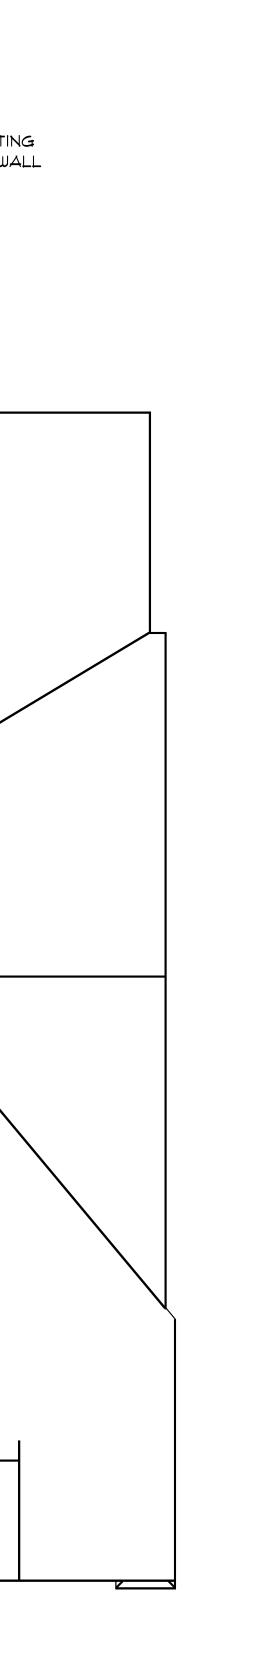


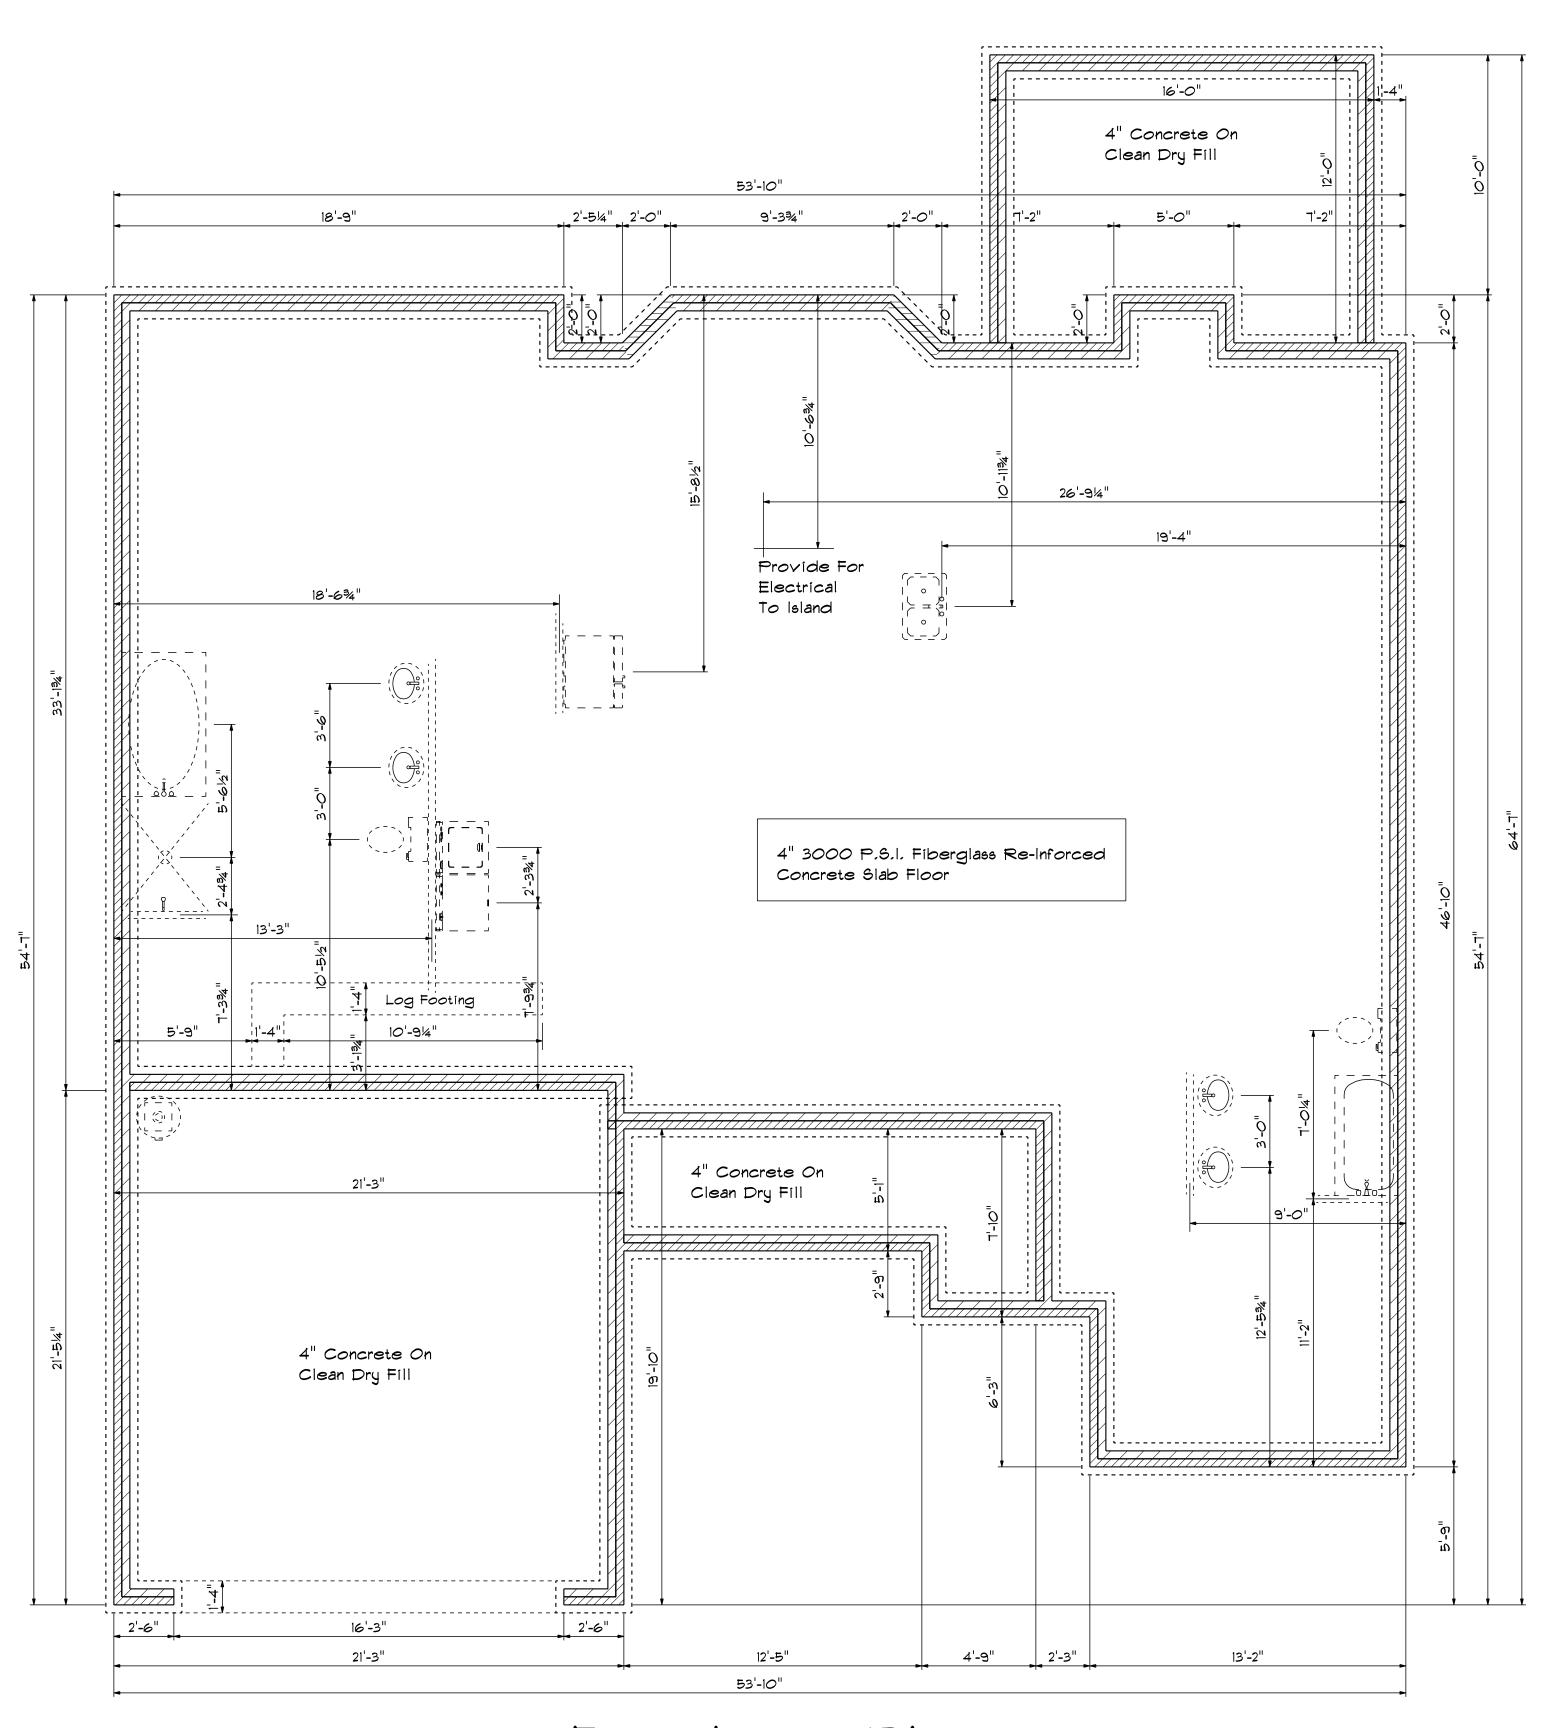



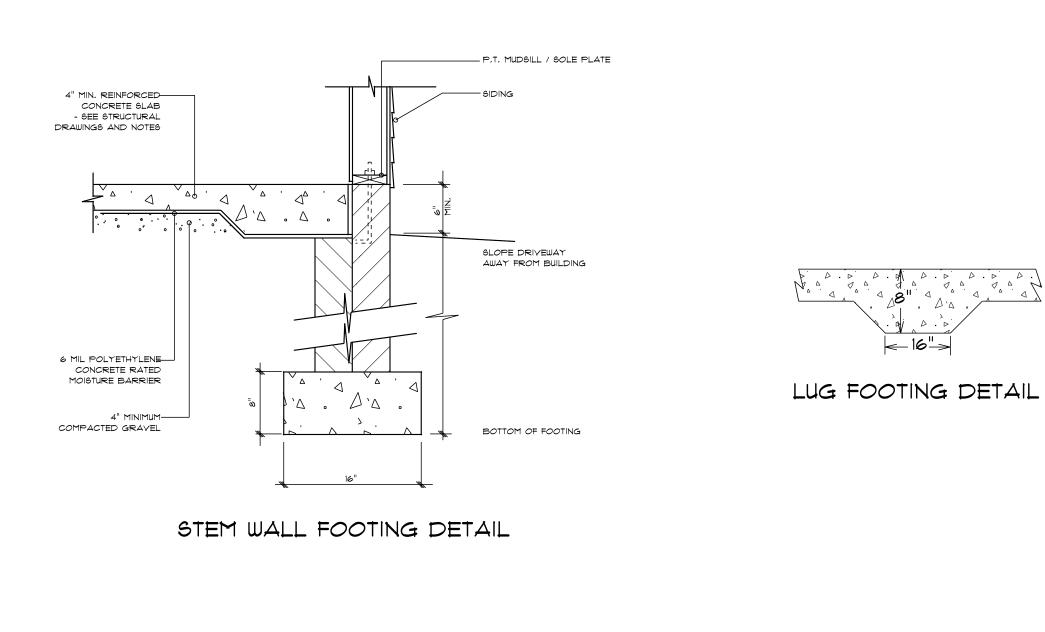

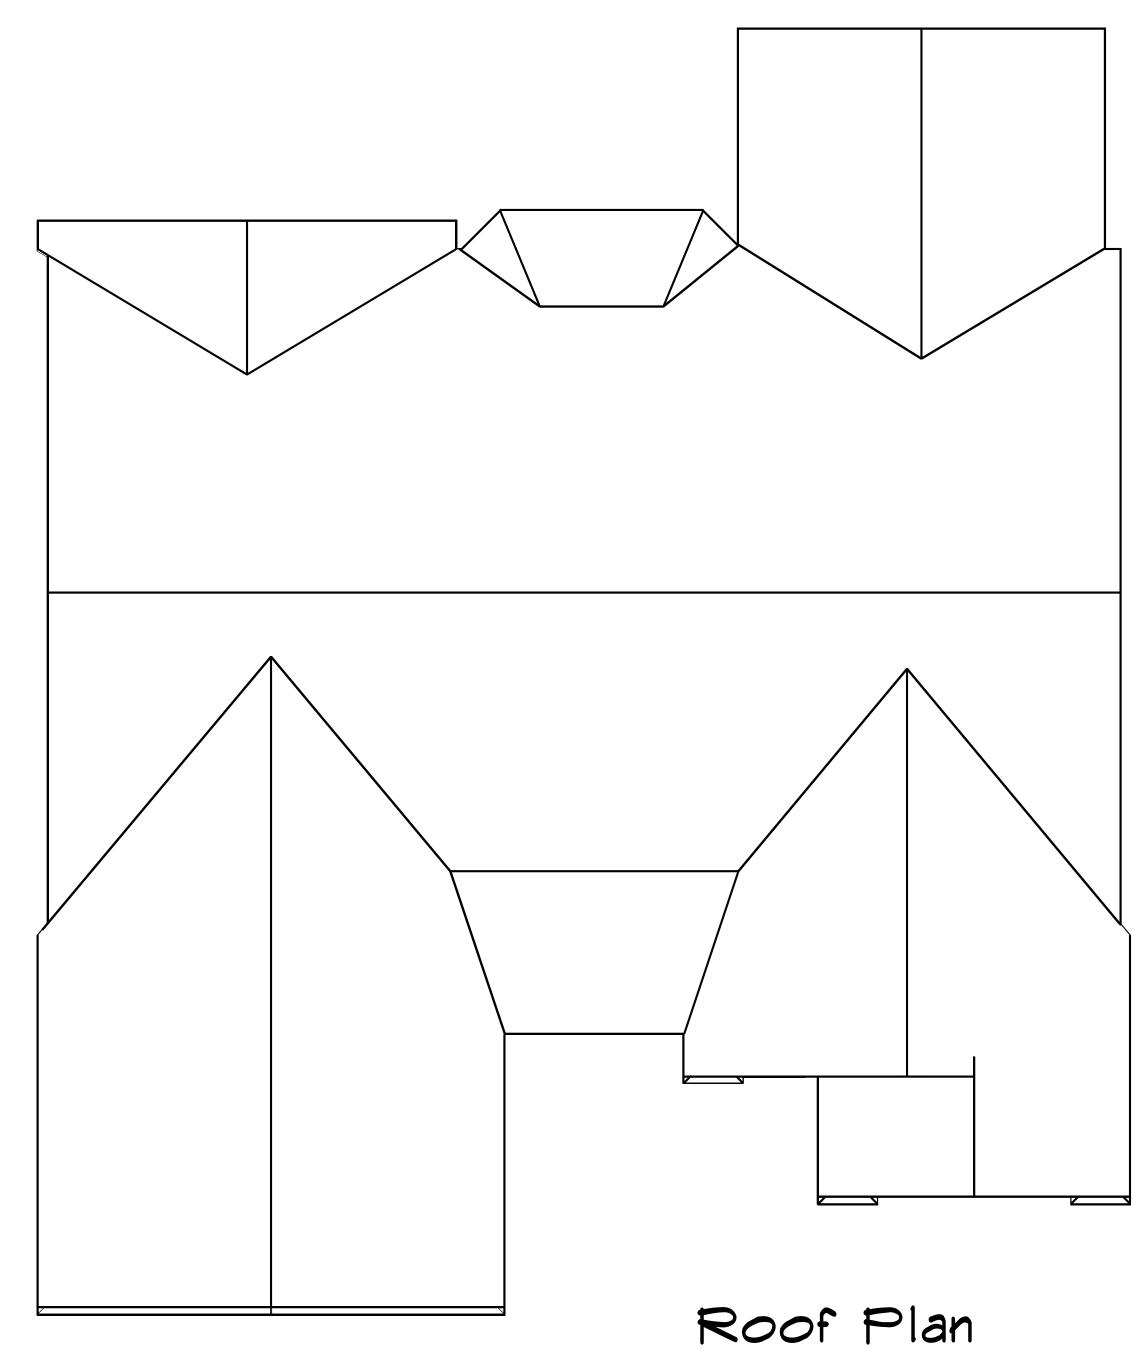

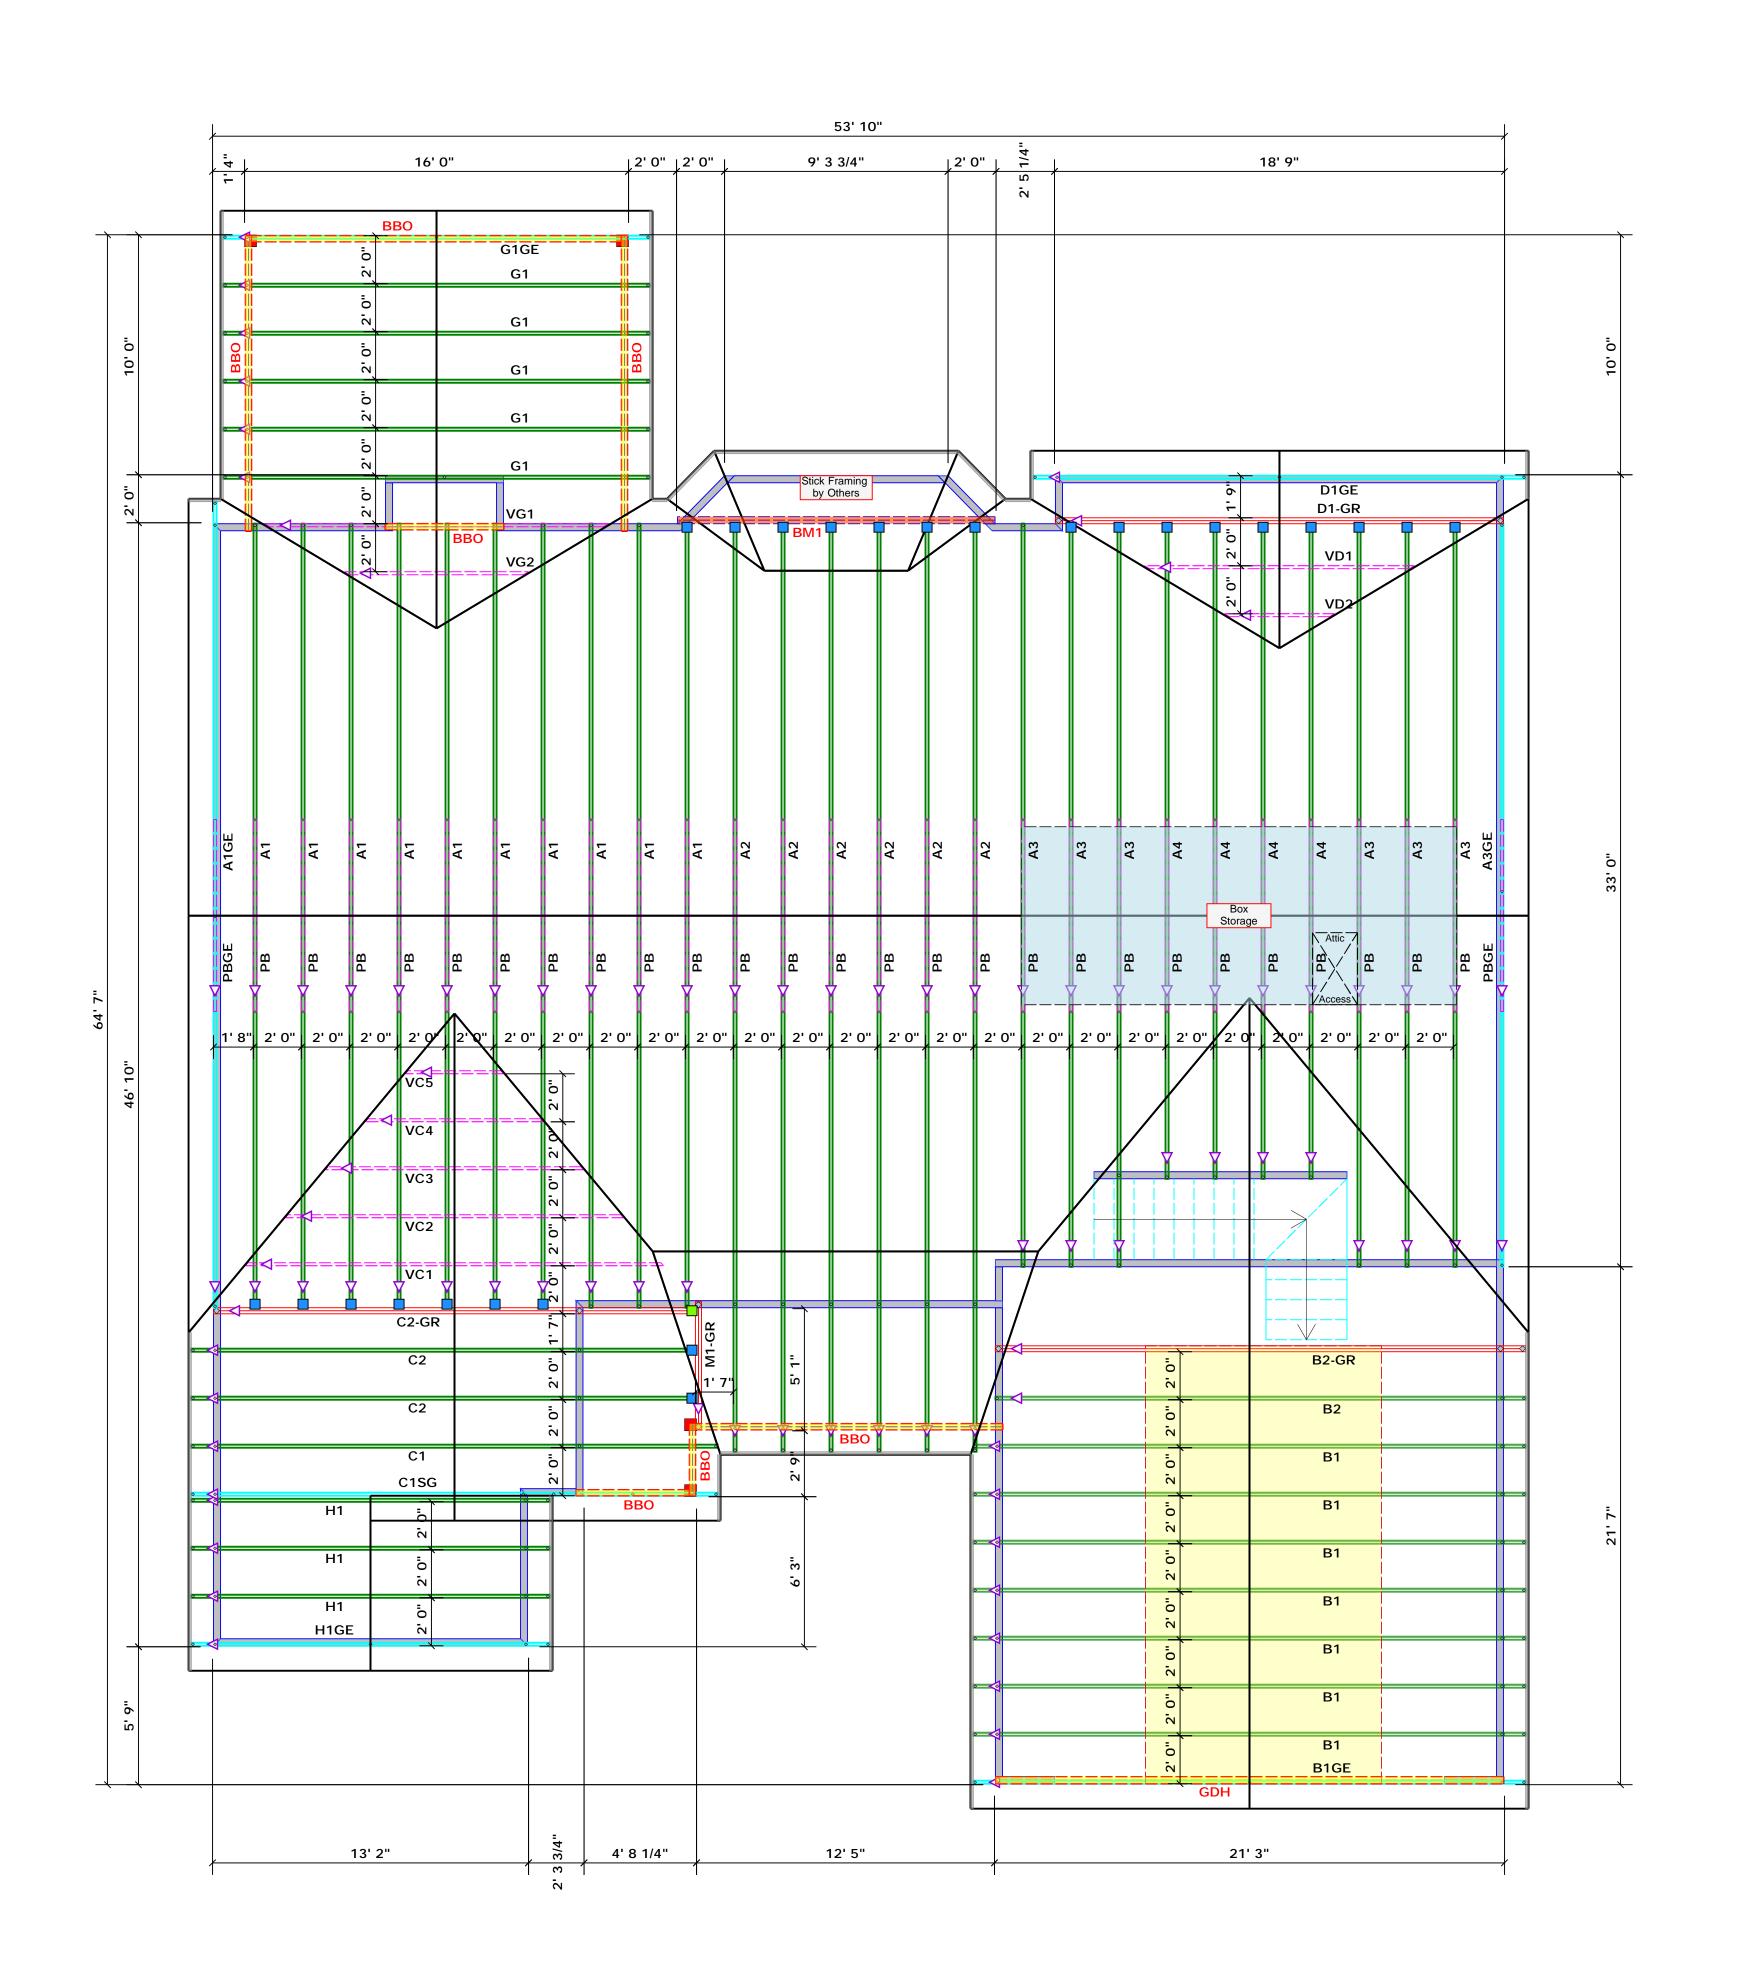


All Walls Shown Are Considered Load Bearing

Roof Area = 3931.6 sq.ft. Ridge Line = 143.67 ft. Hip Line = 11.94 ft. Horiz. OH = 171.72 ft. Raked OH = 208.75 ft. Decking = 135 sheets


Dimension Notes

1. All exterior wall to wall dimensions are to face of sheathing unless noted otherwise 2. All interior wall dimensions are to face of frame wall unless noted otherwise 3. All exterior wall to truss dimensions are to face of frame wall unless noted otherwise

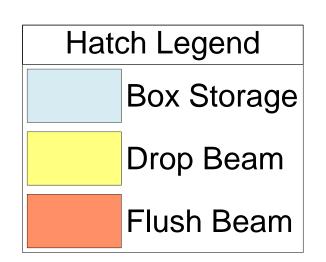

	Conne	Nail Information				
Sym	Product	Manuf	Qty	Supported Member	Header	Truss
	HUS26	USP	25	NA	16d/3-1/2"	16d/3-1/2"
	THD26-2	USP	1	NA	16d/3-1/2"	10d/3"

Products								
PlotID	Length	Product	Plies	Net Qty				
BM1	14' 0"	1-3/4"x 11-7/8" LVL Kerto-S	2	2				
GDH	22' 0"	1-3/4"x 14" LVL Kerto-S	2	2				

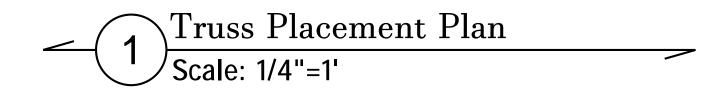



Reilly Road Industrial Park Fayetteville, N.C. 28309

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.
These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com

Phone: (910) 864-8787 Fax: (910) 864-4444

David Landry

David Landry

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b))

NUMBER OF JACK STUDS REQUIRED @ EA END OF
HEADER/GIRDER | 1700 | 1 | 2550 | 1 | 3400 | 2 | 5100 | 2 | 5100 | 3 | 6800 | 4 | 8500 | 5 | 10200 | 6 | 11200 | 7 | 3400 1 6800 2 10200 3 13600 4 17000 5

= Indicates Left End of Truss

Do NOT Erect Truss Backwards

(Reference Engineered Truss Drawing) 11900 7 13600 8