Dimension Notes

1. All exterior wall to wall dimensions are to face of sheathing unless noted otherwise
2. All interior wall dimensions are to face of stud unless noted otherwise
3. All exterior wall to truss dimensions are to face of stud unless noted otherwise


= 1829.27 sq.ft. Roof Area = 53 ft. Ridge Line = 0 ft. Hip Line = 144.86 ft. Horiz. OH = 215.7 ft. Raked OH = 63 sheets Decking

All Walls Shown Are Considered Load Bearing

= Indicates Left End of Truss ▲ (Reference Engineered Truss Drawing) Do Not Erect Trusses Backwards

WALL SCHEDULE 1st Floor Walls 2nd Floor Walls Non-Bearing Walls Garage Walls Dropped

Nail Information		Connector Information				
Truss	Header	Supported Member	Qty	Manuf	Product	Sym
10d/3"	10d/3"	NA	13	USP	JUS24	

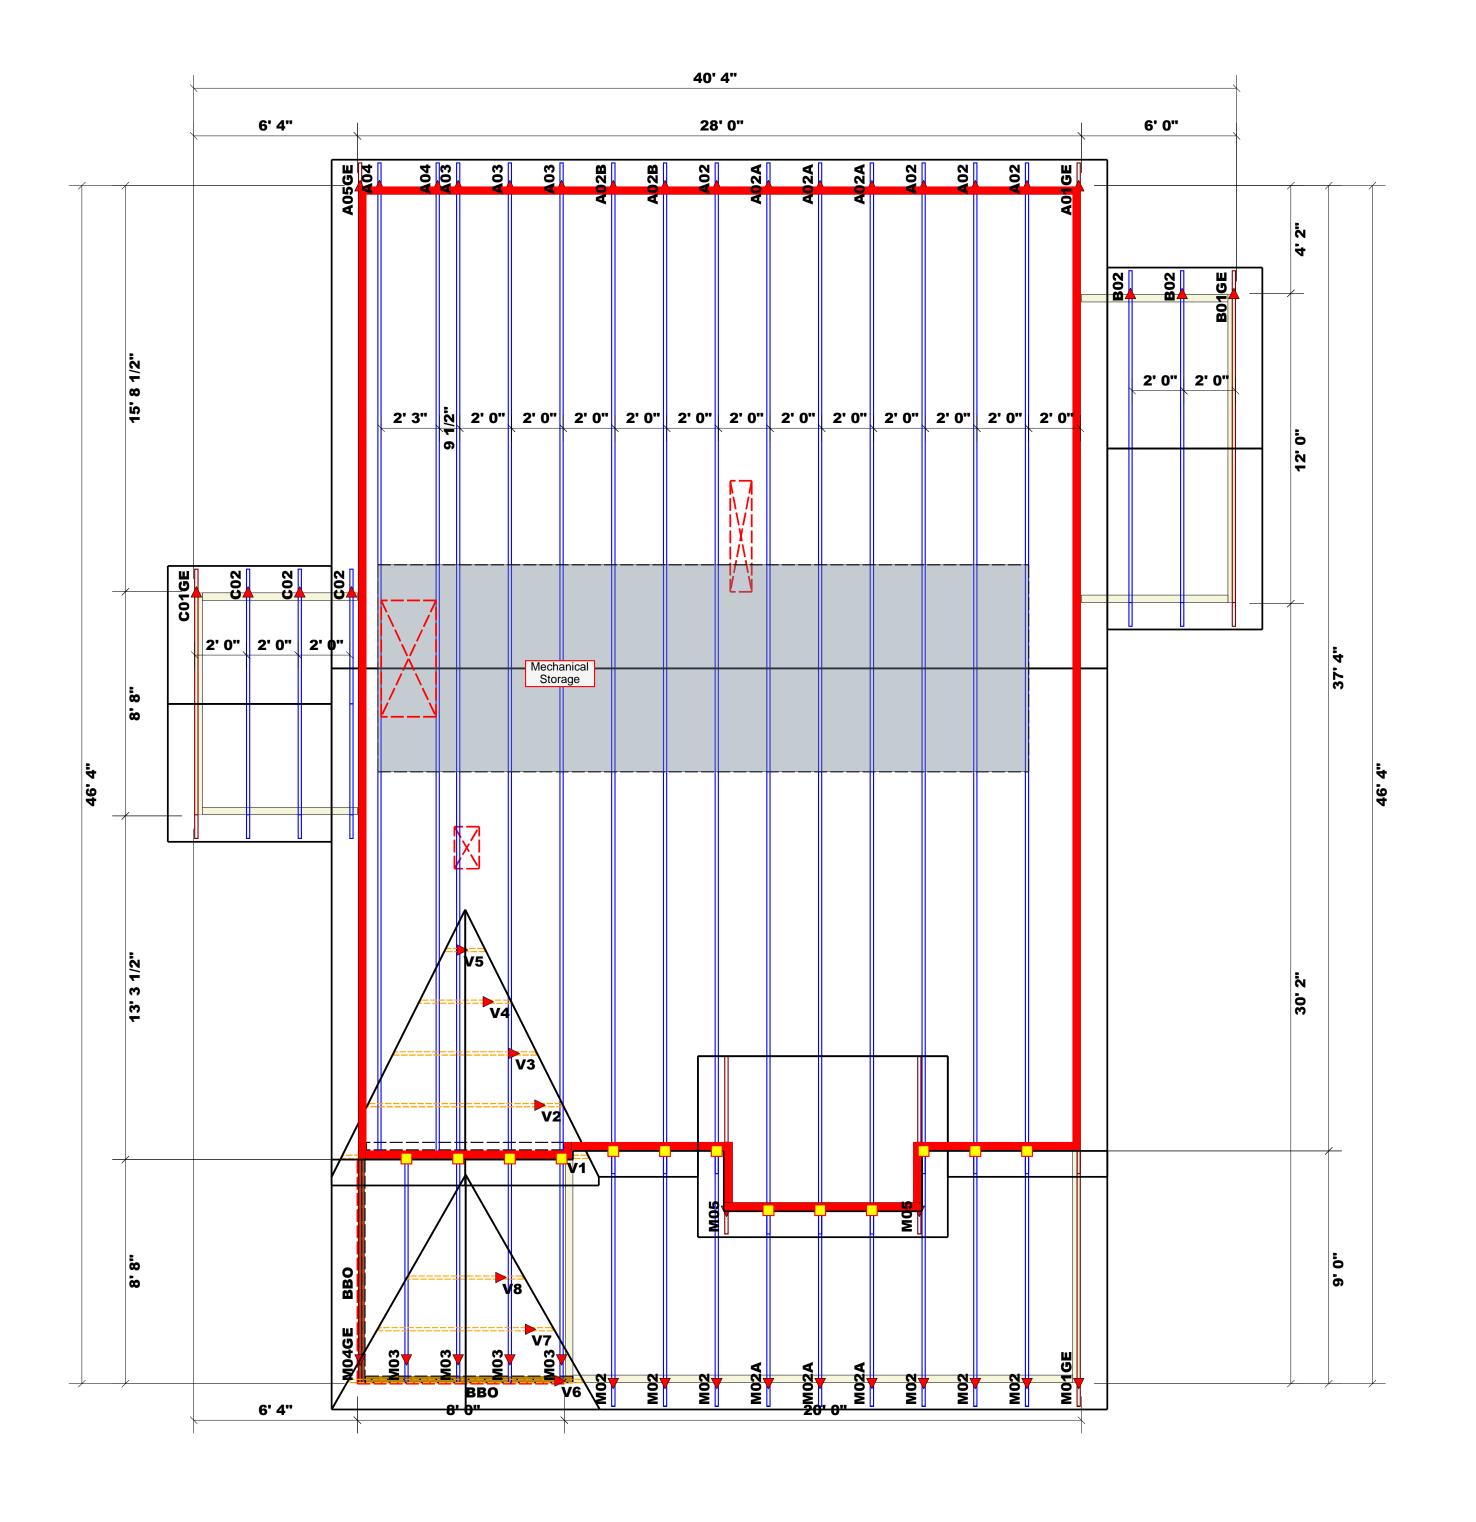

= Indicates Left End of Truss
(Reference Engineered Truss Drawing)
Do NOT Erect Truss Backwards

ROOF & FLOOR TRUSSES & BEAMS

Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

Bearing reactions less than or equal to 3000# are deemed to comply with the prescriptive Code requirements. The contractor shall refer to the attached Tables (derived from the prescriptive Cod requirements) to determine the minimum foundatio size and number of wood studs required to support reactions greater than 3000# but not greater than 15000#. A registered design professional shall be retained to design the support system for any reaction that exceeds those specified in the attache Tables. A registered design professional shall be retained to design the support system for all reactions that exceed 15000#.

ure Johnnie Baggett

Johnnie Baggett

LOAD CHART FOR JACK STUDS
(BASED ON TABLES R502.5(1) & (b))

zek ADDRESS 104 Whistling Way

try MODEL Roof

DATE REV. 5/22/24

DRAWN BY Johnnie Baggett

SALES REP. Paul Hawkins

BUILDERNew Home Inc.JOB NAMELot 20 Heritage @ Neills CreekPLANThe Brusnwick - English CountrySEAL DATESeal DateQUOTE #J0224-1091

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com