


= 2055.97 sq.ft. Roof Area = 32.22 ft. Ridge Line = 0 ft. Hip Line = 168 ft. Horiz. OH = 158.93 ft. Raked OH = 71 sheets Decking

All Walls Shown Are Considered Load Bearing

= Indicates Left End of Truss 🛕 (Reference Engineered Truss Drawing) Do Not Erect Trusses Backwards

WALL SCHEDULE					
1st Floor Walls					
2nd Floor Walls					
Non-Bearing Walls					
Garage Walls Dropped					

Nail Information			Connector Information				
	Truss	Header	Supported Member	Qty	Manuf	Product	Sym
	16d/3-1/2"	16d/3-1/2"	NA	13	USP	HUS26	
	10d/3"	10d/3"	NA	12	USP	JUS26	
	10d/3"	16d/3-1/2"	NA	1	USP	THD26-2	

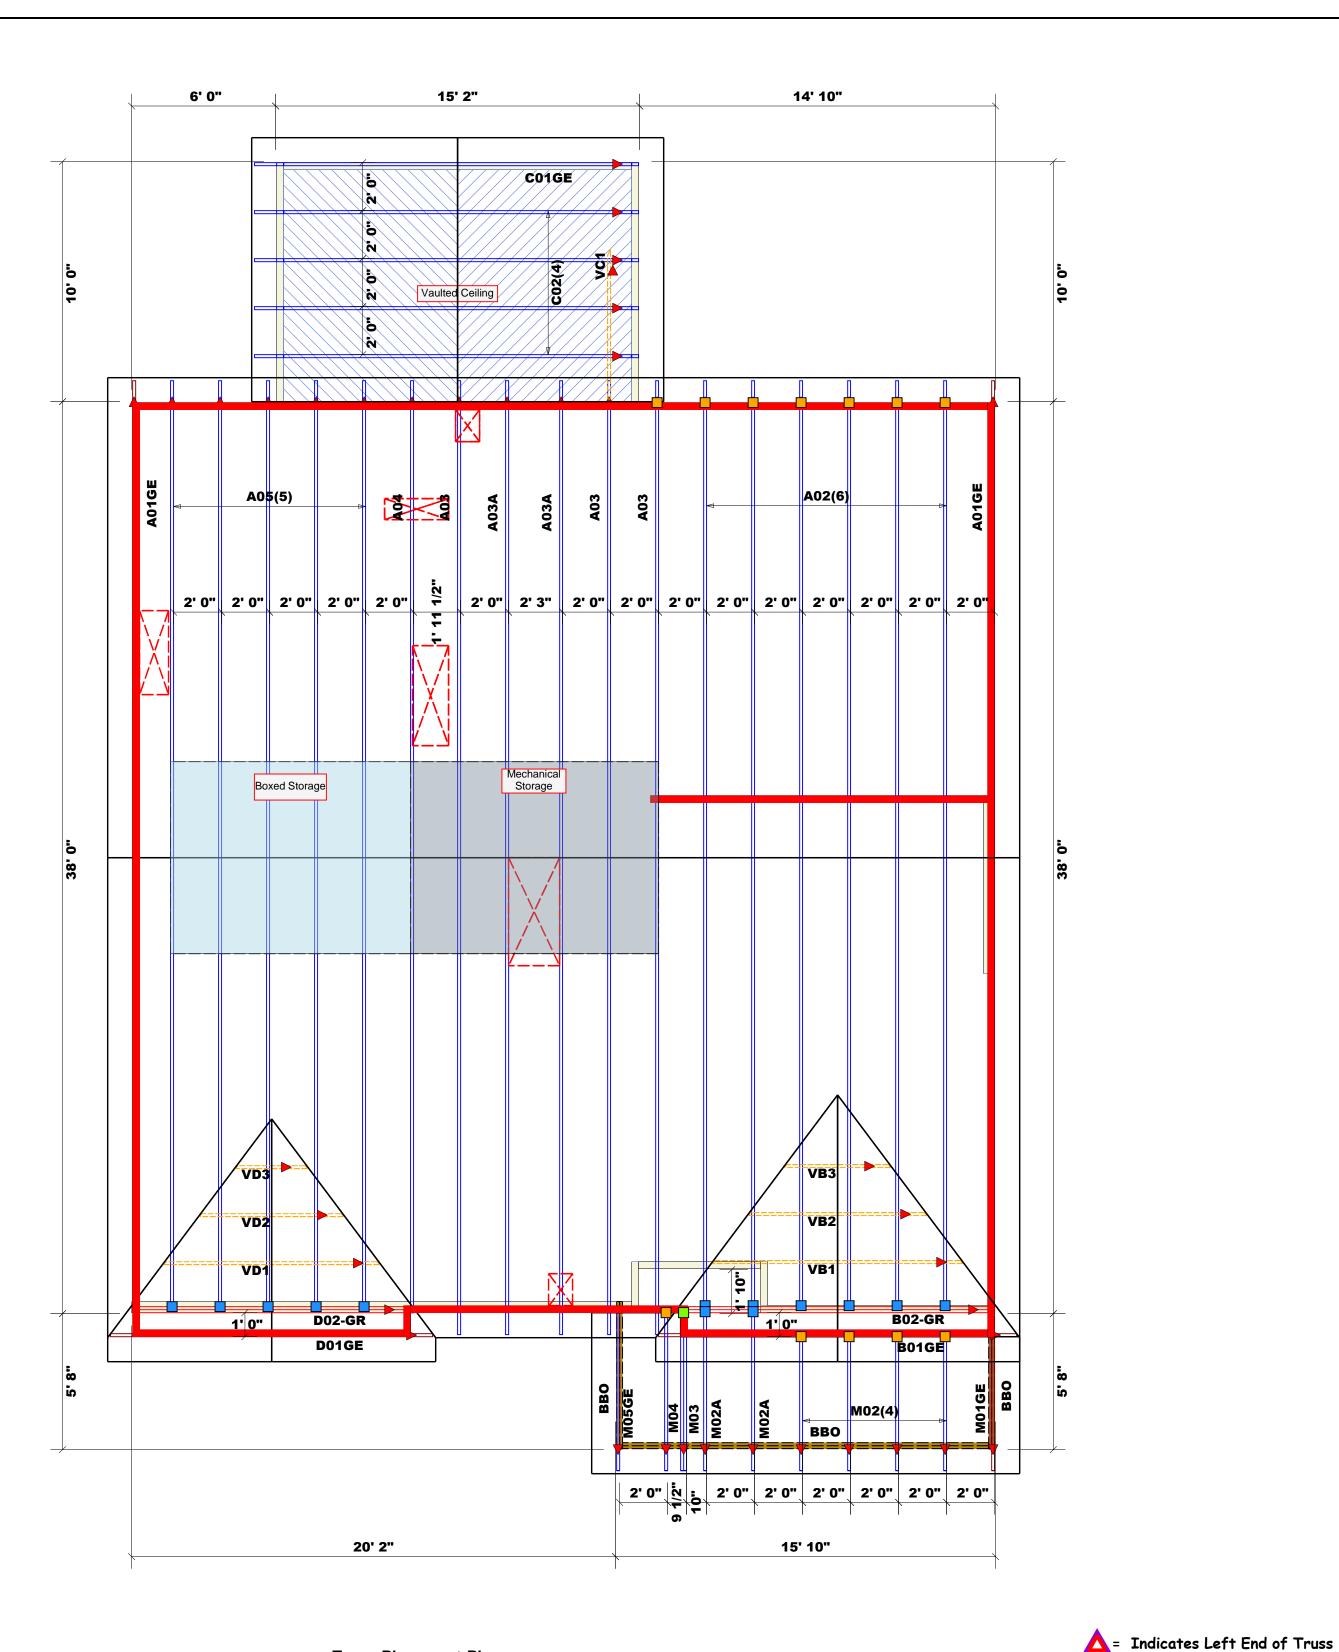

COMTECH **ROOF & FLOOR TRUSSES & BEAMS** 

> Reilly Road Industrial Park Fayetteville, N.C. 28309 Phone: (910) 864-8787 Fax: (910) 864-4444

aring reactions less than or equal to 3000# are seed to comply with the prescriptive Code juirements. The contractor shall refer to the ached Tables ( derived from the prescriptive Code juirements ) to determine the minimum foundation re and number of wood studs required to support actions greater than 3000# but not greater than 3000#. A registered design professional shall be tained to design the support system for any action that exceeds those specified in the attacher ables. A registered design professional shall be stained to design the support system for all sections that exceed 15000#.

Signature Johnnie Baggett

Johnnie Baggett

LOAD CHART FOR JACK STUDS (BASED ON TABLES R502.5(1) & (b)) NUMBER OF JACK STUDS REQUIRED @ EA END OF HEADER/GIRDER

END REACTION
(UP TO)
REQ'D STUDS FOR
(4) PLY HEADER 3400 1 1700 1 2550 1 3400 2 6800 2 5100 2 5100 3 7650 3 10200 3 6800 4 10200 4 13600 4 8500 5 12750 5 17000 5 10200 6 15300 6 11900 7 13600 8 15300 9

Duncans Creek Lillington / Harnett Johnnie Baggett Paul Hawkins 7/26/24 439 DRAWN BY SALES REP. DATE REV. CITY / CO.

Creek New Home Inc The Holly 7/1/21 JOB NAME SEAL DATE BUILDER

Quote#

QUOTE;

THIS IS A TRUSS PLACEMENT DIAGRAM ONLY.

These trusses are designed as individual building components to be incorporated into the building design at the specification of the building designer. See individual design sheets for each truss design identified on the placement drawing. The building designer is responsible for temporary and permanent bracing of the roof and floor system and for the overall structure. The design of the truss support structure including headers, beams, walls, and columns is the responsibility of the building designer. For general guidance regarding bracing, consult BCSI-B1 and BCSI-B3 provided with the truss delivery package or online @ sbcindustry.com THIS IS A TRUSS PLACEMENT DIAGRAM ONLY. (Reference Engineered Truss Drawing)

Do NOT Erect Truss Backwards